



**LI-ION 18V
DRILL & IMPACT
DRIVER KIT**

QUICK START GUIDE






CHARGER/BATTERY

QUICK START GUIDE

Easy steps to getting started.

1. Carefully remove all items from the packaging, take care that you have all parts supplied in the packaging before discarding.
2. To check the charge of the battery pack (2), press the button for the battery capacity indicator (3). The battery capacity indicator (4) indicates the charge state of the battery as advised on the label.
3. Timely recharging of the battery pack(2) will help it serve you well for a long time. You must recharge the battery pack (2) when you notice that the power of the cordless product drops.
4. Insert the power plug of the charger (1) into the mains socket outlet. The green LED (a) will then begin to flash.
5. To charge the Li-Ion battery pack (2), insert the battery pack into the charger. The red LED (b) will light up to indicate that the battery pack (2) is being charged. When the charging is finished, the green LED (a) will shine with a steady light. Discharged battery packs require approx. 1 hour for charging.
6. If both LEDs (a, b) flash after the battery pack has been inserted, the battery pack is defective. In this case pull out the charger plug immediately and remove the defective battery pack (2). Do not use the defective battery pack (2) again.
7. If both LEDs (a, b) light up after the battery pack (2) has been inserted, the charging temperature is either low or too high. In this case, pull out the mains plug of the charger and charge the battery pack (2) in an environment in which the temperature is either warmer or colder.
8. If the battery pack (2) fails to charge, please check
 - whether there is voltage at the socket outlet
 - whether there is good contact at the charging contacts of the charging unit
 If the battery pack (2) still fails to charge, please call our customer service on 1300 922 271.

9. **IF IN DOUBT PLEASE REFER TO THE USER GUIDE PROVIDED.**

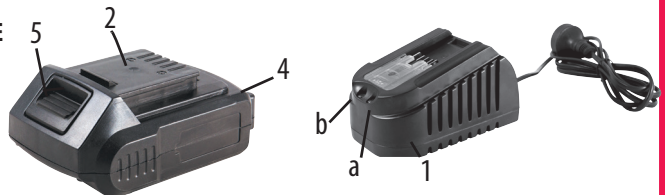



CORDLESS DRILL

TT-CD 18 Li

QUICK START GUIDE

Easy steps to getting started.

1. Carefully remove all items from the packaging, take care that you have all parts supplied in the packaging before discarding.
2. To mount the battery pack (4), push the battery pack (4) onto the equipment until it latches in place.
3. To remove the battery pack, press the pushlock button (5) to remove the battery pack (4) from the equipment.
4. To charge the battery pack (4), follow the instruction on page 1 of the Quick Start Guide.
5. For screwdriving select the torque with the torque selector (1), refer to the User Guide, Section 4.6.1 for more information. **Important!** The tool must be at a standstill when you set the torque with the setting ring.
6. For drilling, move the torque selector (1) to the last step "Drill".
7. Use the Forward/Reverse switch (2) to select the direction of rotation.
8. You can adjust the speed. The further you press the On/OFF switch (3), the higher the speed. There is also a LED light (8) that automatically switches on when pressing the ON/OFF switch (3).
9. To change the accessory, open the chuck (7) by turning it counterclockwise. Place the accessory into the tool and tighten the chuck by turning it clockwise. **Important!** Set the Forward/Reverse switch (2) to its centre position whenever carrying out any work on the tool.
10. By adjusting the selector switch (6), you can work with a faster or slower turning speed. **Important!** Change the gear only when the drill is at a standstill.
11. **IF IN DOUBT PLEASE REFER TO THE USER GUIDE PROVIDED.**





CORDLESS IMPACT DRIVER TT-CW 18 Li

QUICK START GUIDE

Easy steps to getting started.

1. Carefully remove all items from the packaging, take care that you have all parts supplied in the packaging before discarding.
2. To mount the battery pack (4), push the battery pack (4) onto the equipment until it latches in place.
3. To remove the battery pack, press the pushlock button (5) to remove the battery pack (4) from the equipment.
4. To charge the battery pack (4), follow the instruction on page 1 of the Quick Start Guide.
5. Use the Forward/Reverse switch (2) to select the direction of rotation.
6. You can adjust the speed. The further you press the On/OFF switch (3), the higher the speed.
7. To change the accessory, pull the sleeve on the chuck (1) towards the screw and insert the screw bit all the way. Release the chuck (1) and pull the screw bit slightly till it locks into place. Important! Set the Forward/Reverse switch (2) to its centre position whenever carrying out any work on the tool.
8. To tighten a screw, push the drive socket insert onto the screw head and press the ON/OFF switch. For detailed instructions, please refer to Section 5.7.4 of the User Guide.
- 9. IF IN DOUBT PLEASE REFER TO THE USER GUIDE PROVIDED.**

