




# KNOW YOUR PRODUCT


## CORDLESS BUFFER POLISHER

- 1 On/Off Switch
- 2 Foam Pad
- 3 Battery Seating
- 4 Side Handles

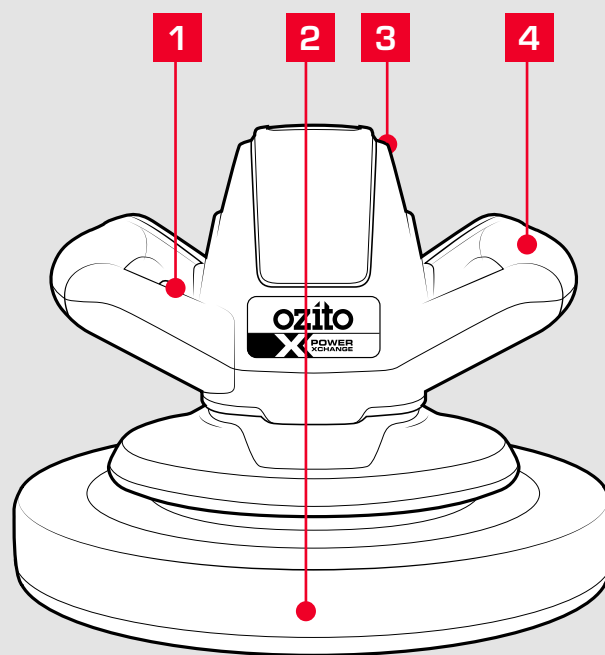

## ACCESSORIES

- 5 Application Bonnet (Towelling)
- 6 Polishing Bonnet (Fleece)

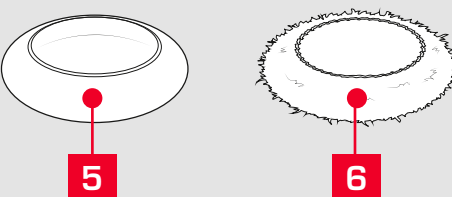

## BATTERY & CHARGER

This tool is compatible with all batteries and chargers from the Ozito Power X Change Range.

### ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.



# SETUP & PREPARATION

## 1. BEFORE USE

### Items Supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service center or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

### Danger!

The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

### Proper Use

The equipment is designed solely for waxing/polishing and dewaxing paintwork on motor vehicles, boats, caravans or mobile homes.

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

### Caution!

#### Residual risks

Even if you use this electric power tool in accordance with instructions, certain residual risks cannot be ruled out. The following hazards may arise in connection with the equipment's construction and layout:


1. Lung damage if no suitable protective dust mask is used.
2. Damage to hearing if no suitable ear protection is used.
3. Health damage caused by hand-arm vibrations if the equipment is used over a prolonged period or is not properly guided and maintained.

## 2. FITTING THE BONNET

**WARNING!** ENSURE THE TOOL IS SWITCHED OFF AND DISCONNECTED FROM THE POWER SUPPLY BEFORE PERFORMING ANY OF THE FOLLOWING TASKS.

### Choosing the Correct Bonnet to Use

2 bonnets are included with this tool and each has it's own purpose.

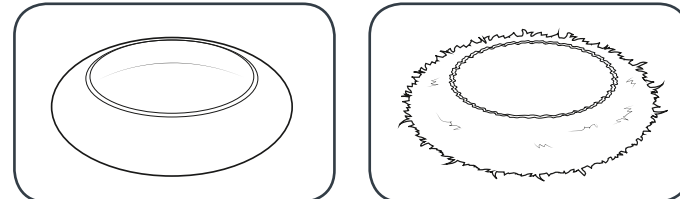


The application bonnet (towelling material) should be used to apply polishing compound to the surface.


The polishing bonnet (fleece material) is used once the polishing compound is applied and will remove the compound leaving a polished surface.

### Attaching the Bonnet

- 1 Pull the bonnet over one side of the foam pad.

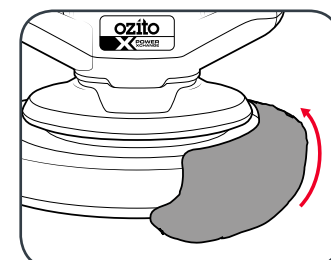


- 2 Pull the remaining bonnet over the foam pad.

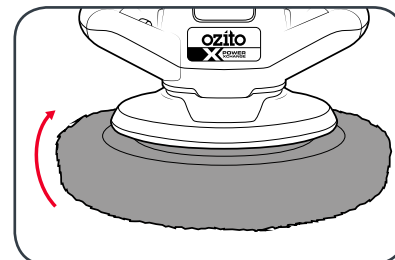

### Removing the Bonnet

- 1 Pull one side of the bonnet off the foam pad and then remove.

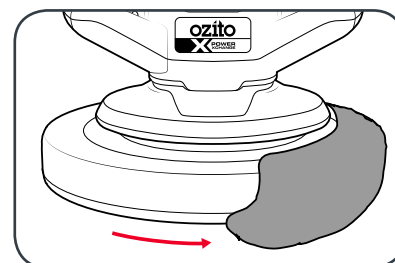


# OPERATION

## 4. BATTERY & CONTROLS


### Inserting the Battery

- 1 Slide the grooves of the battery into the recess at the back of the tool, until it clicks into place.

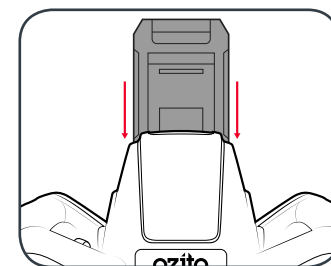


### Removing the Battery

- 1 Press and hold the battery release tab.

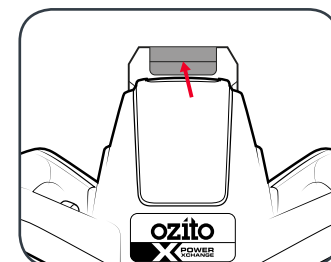


- 2 Slide the battery out of the tool to remove.

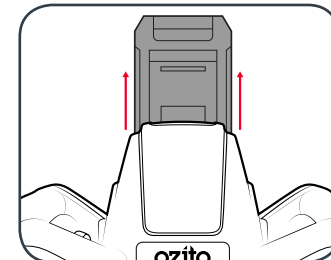


### Switching On and Off

- 1 To start the polisher press the on/off switch into the on position "I".

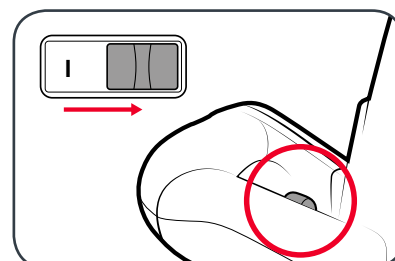

- 2 To stop operation, press the on/off switch into the off position "0".

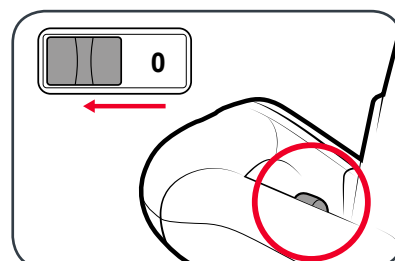

## 5. USING THE BUFFER POLISHER

**WARNING!** ENSURE HANDS ARE KEPT CLEAR OF MOVING PARTS DURING OPERATION TO AVOID INJURY. THE POLISHING PAD SPINS AT HIGH SPEEDS.

### Before Polishing

Test a small inconspicuous area of the surface. Refer to polish manufacturer's instructions regarding application and drying times.


Using too much polish may:

- Reduce the life of the foam pad
- Make polishing difficult and take longer
- Cause bonnet to come off


**Note:** Never use abrasive compounds.

### Application


- 1 Ensure a clean application bonnet (towelling material) is fitted to the foam pad.

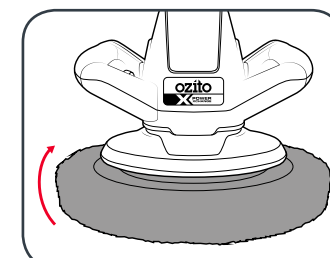

- 2 Apply a small amount of polishing compound or liquid to the application bonnet.

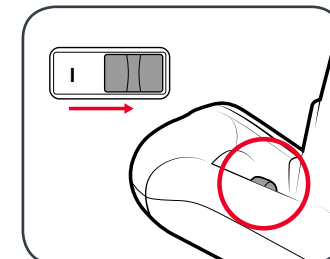

- 3 Allow the motor to reach maximum speed and move the polisher using long sweeping strokes in a crisscross pattern.

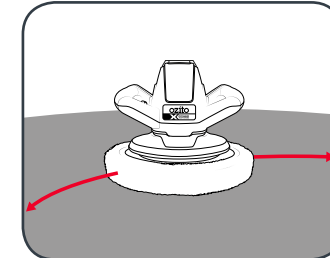


**Note:** Do not apply excessive force to the polisher. Allow the polisher to do the work.  
**Note:** Never use the polishing bonnet to apply polish to a surface.

- 4 Once polishing compound has been applied to the entire surface using the application bonnet, switch the tool off and remove the battery. You can now move onto the polishing process.


### Polishing

**WARNING!** ENSURE THE TOOL IS SWITCHED OFF AND DISCONNECTED FROM THE POWER SUPPLY BEFORE CHANGING BONNETS.


- 1 Remove the application bonnet and replace with a clean polishing bonnet.

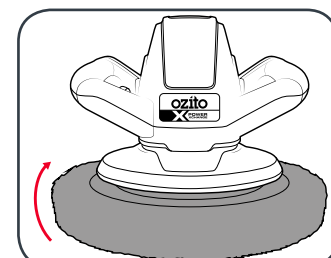

- 2 Insert the battery, hold the polisher on the surface and start the tool.

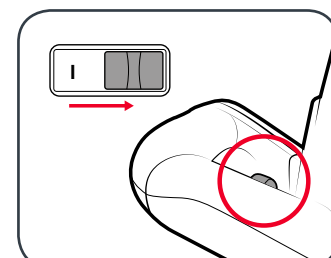

- 3 Allow the motor to reach maximum speed and move the polisher using long sweeping strokes in a crisscross pattern.

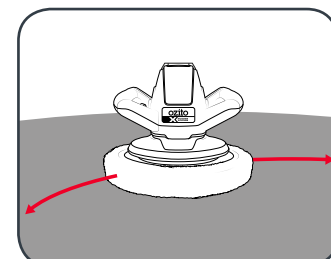

**Note:** Do not apply excessive force to the polisher. Allow the polisher to do the work.

- 4 Once the entire surface has been polished and all polishing compound is removed using the polishing bonnet, you will be left with a swirl-free polished surface.

### Operation Tips

It is best to start with large flat surfaces and ending with the hard-to-reach areas.

Never force the polisher. The weight of the tool supplies adequate pressure, to do the work. Applying additional pressure will slow the motor, rapidly wear the bonnet, and greatly reduce the polisher speed. This will slow the polishing rate and produce an inferior quality surface.


**CAUTION:** Excessive pressure will overload the motor, causing possible damage to the polisher by overheating the motor; or damage to the surface.

**CAUTION!** DO NOT USE WITH ABRASIVE COMPOUNDS AS THIS WILL VOID THE WARRANTY.


## 6. FOAM PAD & BONNETS

### Removing the Foam Pad


- 1 Insert a long-bladed screwdriver into the hole between the foam pad and the motor housing to stop the spindle moving.

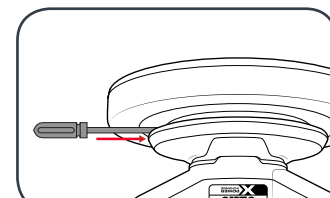

- 2 Using a phillips screwdriver remove the screw holding the foam pad, by turning it anti-clockwise.

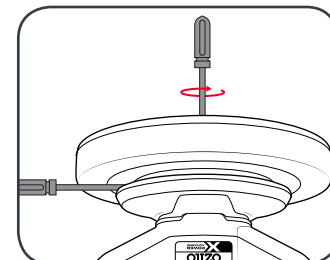


- 3 Reinstall the foam pad by rotating the securing screw clockwise.

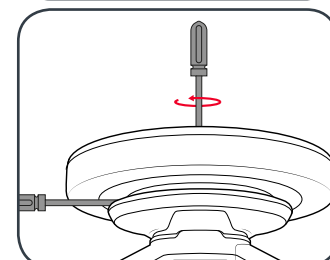

### Cleaning the Bonnets

The included application and polishing bonnets can be re-used. For maximum life and performance, the bonnets should be cleaned after each use.

- 1 Remove the bonnets from the tool and hand wash under warm water.
- 2 Allow the bonnets to air dry before fitting to the polisher.

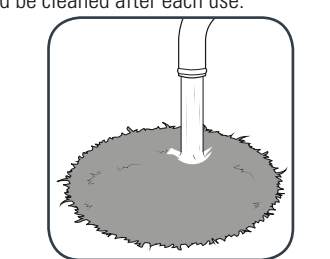

**Note:** If needed, the bonnets can be machine washed in cold water with a small amount of detergent.