



Einhell

CLASSIC



Cordless Lawn Trimmer
GC-CLT 18/240 Li - Solo
Item No.: 4511138

Ident No.: 21014

Bar Code: 4006825682755

With the Einhell cordless grass trimmer GC-CLT 18/240 Li-Solo, even hard-to-reach lawn areas in the garden can be shaped with ease. The cordless grass trimmer is a powerful member of the Power X-Change system range. The grass trimmer is equipped with a flower guard that protects flowers and ornamental plants from damage. The continuously telescopic guide handle can be adjusted to the user's height for ergonomic working. The cutting width of the blade is 24 cm. The package includes 20 plastic blades. The delivery does not include the Power X-Change battery or charger; these are available separately, for example, as a practical starter set.

Features & Benefits

- Member of the Power-X-Change family, 1x 18 V battery necessary
- Telescopic long handle, infinitely adjustable
- User-friendly two-hand operation thanks to additional handle
- Fatigue-free and agile operation thanks to low weight
- Flower guard protecting plants against damage
- Incl. 20 plastic blades
- Supplied without battery and charger (available separately)

Technical Data

- | | |
|--------------------------|----------|
| - Revolutions of knife | 8500 rpm |
| - Cutting width of knife | 24 cm |

Logistic Data

 
- | | |
|---------------------------------|--------------------|
| - Product weight | 1.25 kg |
| - Gross weight single packaging | 1.8 kg |
| - Dimensions single packaging | 160 x 105 x 930 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 8.4 kg |
| - Dimensions export carton | 950 x 335 x 230 mm |



FLOWER GUARD



TELESCOPIC

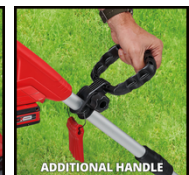

ADDITIONAL HANDLE



EASY HANDLING



 
INCL. 20 pcs BLADES



BATTERY & CHARGER
NOT INCLUDED



TELESCOPIC

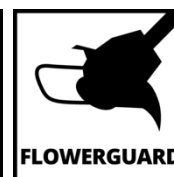

FLOWERGUARD



LOW WEIGHT
EASY HANDLING

Available as special accessories



Spare Blade-set PXC Trimmer
Lawn Trimmer Accessory
Item No.: 3405730
Bar Code: 4006825560404
Einhell Grey



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory

Battery-Running-Times



trimming¹
(min.)

One Battery for All

1.5 Ah	40
2.0 Ah	55
2.5 Ah	65
3.0 Ah	80
4.0 Ah	125
5.2 Ah	160
6.0 Ah	180
8.0 Ah	250

Test setup:

1) lawn