

GARDENLINE®

CORDLESS GRASS TRIMMER GL-CT 36 Li

QUICK START GUIDE

Easy steps to getting started.

1. Ensure all items, including your manual are removed from the packaging before discarding.
2. Assemble the Cordless Grass Trimmer. Refer to Section 6 of the instruction manual for further details.
3. Ensure the battery is charged. Refer to Section 6.5 in the instruction manual for further detail on the charging process.
4. To switch on your grass trimmer, press the safety lock-off (2) and the ON/OFF switch (3).
5. For practical advice on how to best use the Grass Trimmer and how to use it as an Edge Trimmer, please refer to Section 7 of the instruction manual.
6. **IF YOU ARE IN ANY DOUBT PLEASE REFER TO THE DETAILED INSTRUCTIONS WITHIN OUR MANUAL**

