



EXPERT

Cordless All Purpose Saw

TE-AP 18/13 Li - Solo

Item No.: 4326315 Ident No.: 21013 Bar Code: 4006825678284

The Einhell TE-AP 18/13 Li-Solo cordless all purpose saw is a particularly lightweight, handy saw for flexible use around the home and garden. It is part of the powerful Power X-Change family. Thanks to its low weight and ergonomic design with soft grip, the reciprocating saw can also be operated with one hand. The reciprocating saw works with a 13 mm stroke height and a cutting capacity of up to 50 mm in wood. The power can be precisely adjusted using the rpm speed electronics. The saw blade can be exchanged without tools and the saw shoe can be adjusted using the hexagon socket key which is stored and supplied in the housing. The cordless universal saw is delivered without a battery or charging device.

Features & Benefits

- Member of the Power X-Change family, 1 x 18 V battery required
- Multipurpose: Construction site Workshop Garden
- Tool-free blade change for quick use
- Extra compact design for easy handling
- Lightweight, handy design suitable even for one-handed work
- Ergonomic handling with optimum grip thanks to the softgrip
- Including 1x quality saw blade each for wood and metal
- Delivered without battery or charging device (available separately)

Technical Data

- Number of strokes
- Stroke height
- Cutting depth in wood
- Cutting depth in plastic
- Cutting depth in steel
- Toolless saw blade change

Logistic Data

- Product weight
- Gross weight single packaging
- Dimensions single packaging
- Pieces per export carton
- Gross weight export carton
- Dimensions export carton
- Container quantity (20"/40"/40"HC)

1.13 kg 1.51 kg 416 x 82 x 160 mm 6 Pieces 10.66 kg 490 x 430 x 185 mm 4308 | 8760 | 10200

3000 min^-1

13 mm 50 mm

10 mm

 
4 mm

ves









Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery Item No.: 4511502 Bar Code: 4006825644210

4,0 Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory

Charger

Item No.: 4512102 Bar Code: 4006825649536

Einhell Accessory

2x2 Power X-Quattrocharger 4A









Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory

Power X-Twincharger 3A

Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory

3,0 Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory

Sä-Sägebl.Set 3tg Ho/Met Akku Universalsägen-Zubehör Item No.: 49576105 Bar Code: 4009315761053 Einhell Accessory

2,0 Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory















18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory

18V 4,0Ah PXC Starter Kit A1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory

Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory

18V 3,0 Ah Power-X-Change 1 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

2x18V 4,0Ah PXC-Twinpack CB A1 Battery Item No.: 4511489 Bar Code: 4006825638578

5,2 Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory

18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory

Battery-Running-Times

	A	
One Battery for All	sawing ¹	
	(pieces)	
1.5 Ah	185	
2.0 Ah	242	
2.5 Ah	313	
3.0 Ah	369	
4.0 Ah	484	
5.2 Ah	629	
6.0 Ah	726	
8.0 Ah	976	

Test setup:

1) softwood - round soft wood Ø 35 mm