



# Einhell

# EXPERT

## POWER X-CHANGE

Cordless Chain Saw

**GE-LC 18/25 Li-Solo**

**Item No.: 4501761**

Ident No.: 21034

Bar Code: 4006825608342

The Einhell GE-LC 18/25 Li-Solo cordless chainsaw is a reliable device for clearing and felling small and medium-sized trees and for processing firewood. The non-return protection with mechanical instant chain brake always ensures optimum safety for the user. A chain catch bolt intercepts the chain immediately. The sturdy metal bumper spike ensures safe guidance of the device. The chain tension can be regulated without any tools, and tools are also not required to exchange the chain. The oil tank of the automatic chain lubrication can be easily refilled as needed by utilising the large oil filling opening. Delivery will be executed without a battery or charging device.

## Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Tool-free chain tension adjustment and chain exchanging
- Ergonomic handle with Softgrip
- Metal bumper spike
- Quality blade and chain
- Automatic chain lubrication
- Large oil filler opening
- Kickback protection and instant chain brake
- Chain catcher pin
- Delivered without battery and charging device (available separately)



## Technical Data

- Sword length 250 mm
- Max. cutting length 23 cm
- Chain cutting speed 4.5 m/s
- Oil tank capacity 200 mL

## Logistic Data

- Product weight (kg) 2.9 kg
- Gross weight (kg) 3.99 kg
- Dimensions single packaging 225 x 480 x 245 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 16.5 kg
- Dimensions Export Carton 500 x 380 x 515 mm
- Container quantity (20"/40"/40"HC) 1088 | 2208 | 2760



## Available as special accessories



Spare Bar 25cm 1,1  
Chain Saw Accessory  
Item No.: 4501753  
Bar Code: 4006825607017  
Einhell Accessory



Spare Chain 25 cm 1,1 40T 3/8  
Chain Saw Accessory  
Item No.: 4501754  
Bar Code: 4006825607024  
Einhell Accessory



4,0 Ah Power X-Change  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



18V 3,0 Ah Power-X-Change 1  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



5,2 Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory




18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



2,0 Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory

## Battery-Running-Times

One Battery for All	 sawing <sup>1</sup> (pieces)
1.5 Ah	50
2.0 Ah	70
2.5 Ah	85
3.0 Ah	100
4.0 Ah	130
5.2 Ah	180
6.0 Ah	200
8.0 Ah	260

For best performance select a battery with at least 2.5 Ah

Test setup:

1) wood - scantling 70x70 mm