Operating Instructions Impact Drill



(€

Art.-No.: 42.589.66



EHD 500 E




Important: Read and note the operating instructions and safety regulations before using!



Please pull out page 2

® Contents:	Page
Description	3/4
General safety regulations and accident prevention	4
Operating instructions for electric hammer drills	5
EC conformity declaration	6
Warranty certificate	7

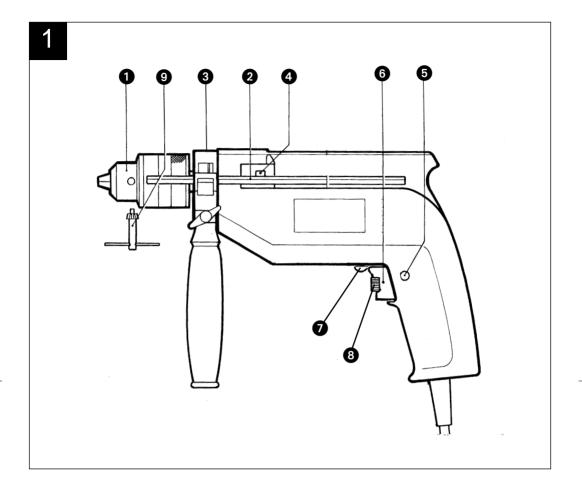



### Description

- 1 Sprocket chuck
- 2 Drilling depth stop
- 3 Supplementary grip
- 4 Drill/Hammer drill selector switch
- 5 Locking button
- 6 ON/OFF switch
- 7 Selector button: clockwise/anticlockwise
- 8 Speed control
- 9 Chuck key

# General safety regulations and accident prevention

To ensure the accident-free and safe operation of this tool, please read and observe these safety regulations and operating instructions.

- Before each use, check the appliance, the power cable and the plug. Use only when the appliance is in perfect working order and undamaged. Any damaged parts must be replaced immediately by a qualified electrician.
- Always remove the plug from the socket before doing any work on the machine, before each tool change and whenever the drill is not in use.
- To prevent damage to the power cable, always ensure that the power cable trails behind the machine.
- When working outdoors, use only an extension lead designed for this purpose. The extension lead used must have a minimum cross section of 1.5 mm<sup>2</sup>. The plug connection must be properly earthed and water-proof.
- Keep tools safe and away from children.
- When grinding, brushing and splitting, always wear safety goggles, protective gloves and ear defenders. Wear a mask for work which generates dust.
- Never leave the tool key in the machine. Before switching on, make sure the key and adjustment tools have been removed.
- Make sure the workpiece to be drilled cannot slip (clamp it).
- Use a dust extractor when working with stone (splitting and grinding). The dust extractor must be suitable for the extraction of stone dust.
- Do not work on asbestos-containing materials.
   Observe the professional association's relevant accident prevention regulations (VBG 116).

- Fire risk! When splitting and grinding materials, make sure there are no combustible materials wit hin range of the sparks.
- Use only original spare parts.
- Repairs must be performed only by qualified electricians.
- Noise levels at the place of work should not exceed 85 db (A), in which case the operator will need ear defenders. The noise produced by this electric tool has been measured according to IEC 59 CO 11, IEC 704, DIN 45635 Part 21, NFS 31-031 (34/537/EC).
- Make sure you have a firm footing and avoid any abnormal postures.
- Do not expose your electric tool to rain. Do not use electric tools in a wet or damp environment or in the vicinity of combustible liquids.
- Do not carry the electric tool by the power cable.
   Protect the cable from damage caused by oil, solvents and sharp edges. Never carry the electric tool by the power cable.
- Keep your working area tidy.
- Make sure the ON/OFF switch is off before plugging in the drill.
- Wear suitable work clothes. Do not wear loosefitting clothes or jewellery. If you have long hair, wear a hair net.
- In the interests of your own safety, use only accessories made by the same manufacturer.
- Take account of the drill's reaction moment, especially when the drill bit seizes.
- Vibration measured in the handle according ISO 5349.



# Operating Instructions for the Impact Drill EHD 500 E

Use only sharp bits and use your machine carefully.

#### **STARTING UP**

Momentary operation (Fig. 2)

Switch on: Press ON/OFF switch 7
Switch off: Release ON/OFF switch 7

#### Continuous operation (Fig. 2)

Switch on: Press ON/OFF switch 7 and lock in

place with the locking button 6

Switch off: Press and release ON/OFF switch 7


### Drill/Hammer drill selector switch (Fig. 3)


You can change from drilling to hammer-drilling using the selector switch 4. To drill, push the selector switch 4 to the "drill" symbol on the left. To hammer-

drill, push switch 4 to the "hammer" symbol on the right. The hammer drill function is for drilling in masonry, concrete and stone.

#### **TECHNICAL DATA:**

Voltage:	230 V 50 Hz
Power rating:	500 W
Chucking range:	1.5 mm dia 13 mm
Speed:	max. 2800 rpm
Sound pressure level LPA:	93 db (A)
Power level LWA:	103 db (A)
Vibration ā <sub>W</sub>	10 m/s <sup>2</sup>
Weight	2 kg
Totally insulated	

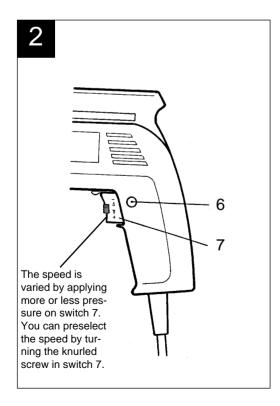

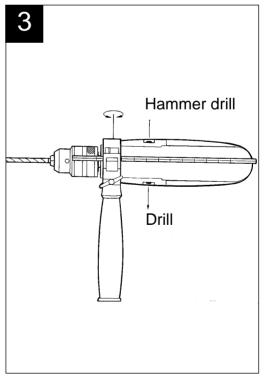

89	(N)	(N)	GR)	Θ	(M)
EC Declaration of Conformity The Undersigned declares, on behalf of	EC Yhdenmukai suusi Imoitus Allekirjoittanut ilmoittaa yhtiön	EC Konfirmitetserklæring Undertegnede erklærer på vegne av firma	Ε <b>C</b> Δήλωση περι της ανταπόκρισης Ο υπγράφων δηλώνει εν ονόματι της εταιρίας	Dichiarazione di conformità CE Il sottoscritto dichiara in nome della ditta	EC Overensstemmelses- erklæring Undertegnede erklærer på vegne af firmaet
	D OSI	SC GmbH · Eschenstraße 6 · D-94405 Landau/Isar	e 6 · D-94405 Landa	u/Isar	
that the	nimissä että	at	óτιη	che la	at
Machine / Product	kone/tuote	Maskin/produkt	μηχανή / το προιόν	macchina/prodotto	maskine/produkt
Impact Drill	Sähköporakone	Elektrisk slagboremaskin	Ηλεκτρικό κρουστικό τρυπάνι	Trapano elettrico	Elektrisk slagboremaskine
produced by:	merkki	Merke	υάρκα	marca	mærke
		CRÄ			
Туре	tyyppi	Туре	τύπος	tipo	type
		EHD 500 E	300 E		
is in accordance with the MEC Directive regarding machinery 89/392 EEC, as amended:  In EC Directive regarding low-voltage equipment 73/23 EEC;  In EC Directive regarding electromagnetic compatibility 89/396 EEC, as amended.  Landau/Isar, (date)  04.07.2000	vastaa    SEU-konedirektiivik (johon on tehty muutoksia)   89/392/EWG   EU-pienktiiviä   73/23 EWG   Glohon on tehty muutoksia) ja joka koskee sähkömagneettista mukautuvuutta (EMI)   EN 50144-1   EN 50/	terhingstinjer felgende rethingstinjer EU Maskinrethreningslinje 89/ 392/ EU Maskinrethreningslinje 89/ 392/ EWG med endringer ferhingstinje 73 / 23 EWG is EU Rathingstinje 73 / 23 EWG is EWG	ανταποκρίνεται στην σοι ανταποκρίνεται στην πε Ευραπαικής Κοινότητας 894 ma 322/ΕΟΚ με αλλαγέ mo αχαλεικής τα γαριμή τάσανς της βαθε Ευραπαικής Κοινότητας Τ3/22/ΕΟΚ αντευθυντήρα γραμμή στη ηλεκτροναγνητικής ma ευραπαικής Κοινότητας της Ευραπαικής Κοινότητας της Ευραπαικής Κοινότητας ανεκτικότητας της Ευραπαικής Κοινότητας CE ΕΝ 55014-2 ΕΝ 61000-3-2		opfylder  ⊠ EU-maskindirektiv 89/392/EØF med ændringer  ⊠ EU-lavspændingsdirektiv 73/23/EØF  ⊠ EU-direktiv vedr. elektromagnerisk støj (EMC) 89/336/EØF med ændringer.  Landau/lsar, den  04.07.2000
				Achivierung / For archives:	BSM - 0644 - 26 - 4141800-E

## **® WARRANTY CERTIFICATE**

The guarantee period begins on the sales date and is valid for 1 year.

Responsibility is assumed for faulty construction or material or functional defects.

Any necessary replacement parts and necessary repair work are free of charge.

We do not assume responsibility for consequential damage. Your statutory rights are not affected.

Your customer service partner

#### Service UK:

Einhell UK Ltd Brook House, Brookway North Chesire Trading Estate Prenton, Wirral, Chesire CH 43 3DS Tel. 0151 6084802, Fax 0151 6086339

Technical specification subject to change

EH07/00