



Einhell

EXPERT

POWER X-CHANGE

Cordless Grass Shear

GE-CG 18/1 Li-Solo

Item No.: 3410382

Ident No.: 21010

Bar Code: 4006825654875

The cordless grass shear GE-CG 18/1 Li - Solo from Einhell is the ideal partner for hobby gardeners who appreciate flexibility when it comes to keeping their greeneries in shape. The cutting of grass is no problem at all. For optimum power transmission to the laser-cut and diamond grinded blades there is a robust metal gearing. A grass cutting blade for maintaining lawn edges is included. A safety switch protects the user from starting the shears unintentionally. The GE-CG 18/1 Li comes with a soft grip for a firm and yet comfortable hold. Even long work sessions are mastered with ease thanks to the combination of power and comfort. This product comes without a battery or charger.

Features & Benefits

- Member of the Power X-Change family, 1x18V battery necessary
- Metal gearing - long lifetime
- Grass cutting blade for maintaining lawn edges
- Blade change without tools
- Laser-cut and diamond grinded blades
- Soft grip - perfect handling and grip
- Supplied without battery and charger (available separately)

Technical Data

- Cutting width with grass shear knife 100 mm

Logistic Data

- Product weight 0.65
- Gross weight single packaging 0.9
- Dimensions single packaging 295 x 115 x 125 mm
- Pieces per export carton 6 Pieces
- Gross weight export carton 6.15 kg
- Dimensions export carton 360 x 310 x 265 mm
- Container quantity (20"/40"/40"HC) 5520 | 11232 | 12636



LASER CUT / DIAMOND-GROUND



METAL GEAR



SOFTGRIP



Available as special accessories



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 3,0Ah & 30min PXC Kit
PXC-Starter-Kit
Item No.: 4512098
Bar Code: 4006825646986
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



12V 2,0Ah Li-Battery
Battery
Item No.: 4511472
Bar Code: 4006825634655
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



2x 18V 4,0Ah PXC-Twinpack
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack
Battery
Item No.: 4511518
Bar Code: 4006825651676
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



2x 4,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory

2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory

Battery-Running-Times



One Battery for All

trimming¹
(min.)

1.5 Ah	180
2.0 Ah	240
2.5 Ah	300
3.0 Ah	360
4.0 Ah	480
5.2 Ah	650
6.0 Ah	720

Test setup:

1) -