



Einhell

EXPERT

POWER X-CHANGE

Robot Lawn Mower FREELEXO 300 LCD BT+ Solo

Item No.: 3413984

Ident No.: 21033

Bar Code: 4006825669008

The FREELEXO 300 LCD BT+ robotic lawn mower is part of the Power X-Change family. The FREELEXO has app control via Bluetooth and an intuitive keypad with LCD display. The working time can be programmed to the day and a separate programme can be started for the secondary areas. In addition, the multi-zone/spot mower is equipped with a cutting height adjustment of 20–60 mm, a PIN code anti-theft device and with rain, shock, tilt and lifting sensors, through which it can handle gradients of up to 35%. The return to the charging station with ECO mode take place automatically if necessary. Delivery incl. installation equipment for 300 m² lawn area, but no battery. This is available separately.


Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Brushless motor - more power and longer runtime
- App control via Bluetooth - individual robotic lawn mower control
- Intuitive keypad with LCD display
- Working time programmable on a daily basis
- Safety sensors thanks to impact, tilt and lift sensors
- PIN code for theft protection
- Rain sensor
- ECO mode of the charging station
- Multi-zone mowing - for complex gardens
- Spot Mowing
- Mowing programme for secondary areas
- Cutting height adjustment (20-60 mm)
- Suitable for inclines up to 35%
- Automatic return to charging station and charging process
- Incl. installation equipment for 300 m² lawn area
- Incl. 100 m boundary wire and 140 fixing hooks
- Incl. 3 spare blades and 4 connecting clamps
- Supplied without battery (sold separately)



Technical Data

- | | |
|-----------------------------|--------------------|
| - Power | 18 V |
| - Cutting width | 18 cm |
| - Slope | 35 % |
| - Cutting height adjustment | 20 mm - 60 mm |
| - Recommended area | 300 m ² |
| - Perimeter wire | 100 m |
| - Hooks | 140 Pieces |
| - Spare blades | 3 |
| - Connecting clamps | 4 Pieces |

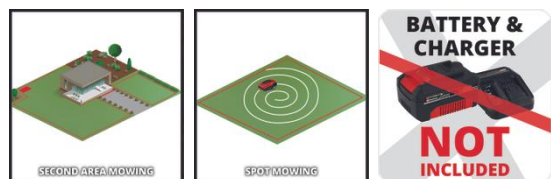

Logistic Data

- | | |
|--|--------------------|
| - Product weight (kg) | 8.5 |
| - Gross weight (kg) | 15.9 |
| - Dimensions single packaging | 702 x 458 x 320 mm |
| - Pieces per export carton | 1 Pieces |
| - Gross weight of export carton | 17.24 kg |
| - Dimensions export carton | 700 x 450 x 335 mm |
| - Container quantities (20"/40"/40"HC) | 294 602 688 |



Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Perimeter wire 50 m
Robot Lawn Mower Accessory
Item No.: 3414021
Bar Code: 4006825648782
Einhell Accessory



Fastening hook 100 psc
Robot Lawn Mower Accessory
Item No.: 3414023
Bar Code: 4006825648805
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 3,0 Ah Power-X-Change 1 Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



5,2Ah & 4A Fastcharger PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



Repair Kit
Robot Lawn Mower Accessory
Item No.: 3414026
Bar Code: 4006825657968
Einhell Accessory



Power X-Caravan Charger 3A Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



2,0 Ah Power X-Change Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



Spare blades 12 psc
Robot Lawn Mower Accessory
Item No.: 3414020
Bar Code: 4006825648775
Einhell Accessory



Connecting clamps 4 psc
Robot Lawn Mower Accessory
Item No.: 3414022
Bar Code: 4006825648799
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



2x 5,2Ah & Twincharger Kit PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



robot lawn mower garage
Robot Lawn Mower Accessory
Item No.: 3414024
Bar Code: 4006825654417
Einhell Accessory



Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



Cleaning Kit
Robot Lawn Mower Accessory
Item No.: 3414025
Bar Code: 4006825657951
Einhell Accessory



3,0 Ah Power X-Change Plus Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



5,2 Ah Power X-Change Plus Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V Battery Charger 3,0A - PXC Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory