

Ⓜ **Safety Information**
Electric Tiller
Please read and keep in a safe place.

7



Ⓢ Note the instructions for use!



Ⓢ Important. Rotating tool.



Ⓢ Caution! Danger from catapulted parts; keep a safe distance.



Ⓢ Wear ear muffs!



Ⓢ Wear safety goggles!



Ⓢ Wear safety gloves



Ⓢ If the cable is damaged or cut, pull out the power plug from the mains immediately.



Ⓢ Never use the equipment in damp locations.



Ⓢ Pull the power plug before carrying out maintenance, cleaning and repair work.

GB**SAFETY INSTRUCTIONS**

Warning! When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following.

Read all these instructions before attempting to operate this product and safe these instructions.

1. **Keep work area clean**
– Cluttered areas and benches invite injuries.
2. **Consider work area environment**
– Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep work area well lit. Don't use power tools in presence of flammable liquids or gases.
3. **Guard against electric shock**
– Prevent body contact with grounded surfaces (e.g. pipes, radiators, ranges refrigerators).
4. **Keep children away**
– Do not let visitors contact tool or extension cord. All visitors should be kept away from work area.
5. **Store idle tools**
– When not in use, tools should be stored in dry, high, or locked-up place, out of the reach of children.
6. **Don't force tool**
– It will do the job better and safer at the rate for which it was intended.
7. **Use right tool**
– Don't force small tools or attachments to do the job of heavy duty tool. Don't use tools for purposes not intended: for example, don't use circular saw for cutting tree limbs or logs.
8. **Dress properly**
– Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and nonskid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.
9. **Use safety glasses**
– Also use face or dust mask if cutting operation is dusty.
10. **Don't abuse cord**
– Never carry tool by cord or yank it to disconnect it from receptacle. Keep cord from heat, oil and sharp edges.
11. **Don't overreach**
– Keep proper footing and balance at all times.
12. **Maintain tools with care**
– Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and, if damaged, have repaired by authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean and free from oil and grease.
13. **Disconnect tools**
– When not in use, before servicing, and when changing accessories such as blades, bits and cutters.
14. **Remove adjusting keys and wrenches**
– Form the habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
15. **Avoid unintentional starting**
– Don't carry plugged-in tool with finger on switch. Be sure switch is off when plugging in.
16. **Outdoor use extension cords**
– When tool is used outdoors, use only extension cords intended for use outdoors and so marked.
17. **Stay alert**
– Watch what you are doing. Use common sense. Do not operate tool when you are tired.
18. **Check damaged parts**
– Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instructions manual. Have defective switches replaced by an authorized service center. Do not use tool if switch does not turn it on and off.
19. **Warning**
– The use of any other accessory or attachment other than recommended in this operating instruction or the Einhell catalog may present a risk of personal injury.
20. **Have your tool repaired by an expert**
– This electric appliance is in accordance with the relevant safety rules repairing of electric appliances may be carried out only by experts otherwise it may cause considerable danger for the user.

Additional safety instructions

- Read the operating instructions with due care. Familiarize yourself with the operator controls and proper operation of the machine
- Never allow children or other persons who are not familiar with the operating instructions to use the machine. Contact your local governmental agency for information regarding minimum age requirements for operating the machine
- Never work in the direct vicinity of persons - especially children - or animals.
- Always keep in mind that the machine operator or

user is responsible for accidents involving other persons and/or damage to their property.

Preliminary measures

- Always wear sturdy, non-slip footwear and long trousers when working. Never operate the machine barefoot or in sandals.
- Check the ground on which the machine will be used and remove all objects that could be caught up and violently flung out by it.
- Before using the machine, always visually examine the tools for excessive wear or damage. To prevent any imbalance, replace worn out or damaged parts and mounting bolts as a set only.
- The power cables used are not to be of a lighter duty class than light rubber-insulated H05RN-F in accordance with DIN 57282/VDE 0282 and they must have a cross section of at least 1.5 mm². The connection must be splash-proof. The power cable must be fed through the stress-relief clips and be plugged into the switch/plug block. Before use, check the cable for damage and signs of aging. Never use the machine with worn or damaged cables. If the cable is damaged while working, pull the power plug immediately and only then inspect the damage. Do not touch the power cable until the plug has been pulled.
- Socket couplers to connection elements must be made from rubber, soft PVC or other thermal material of equal rigidity or coated with such material.
- Make sure that all nuts, bolts and screws are tightened securely and that the machine is in safe working condition.

Handling

- Work only in daylight or in good light.
- Always maintain good footing on inclines.
- Only operate the machine at a walking pace.
- Work perpendicular to the slope, never up or down it.
- Be particularly careful when you change direction on a slope.
- Do not work on overly steep inclines.
- Be particularly careful when you turn the machine around or pull it toward yourself.
- Switch on the motor carefully as described in the instructions from the manufacturer and ensure that you keep your feet at a safe distance from the tool.
- Never move your hands or feet toward or under any rotating parts.
- Never lift or carry a machine whilst the motor is running; in addition the power plug should be pulled.

- Switch off the motor whenever you leave the machine unattended.
- If the machine begins to experience unusual vibrations, immediately switch it off and check it.
- Ensure that you avoid paths that could restrict the free movement of the extension cable.

 
 
Maintenance and storage

- Always make sure that all nuts, bolts and screws are tightened securely so that the machine is in safe working condition.
- Allow the motor to cool before you put the machine in an enclosed area.
- For your own safety, replace worn or damaged parts without delay.
- Switch the machine off and pull the power plug before carrying out any adjustment or cleaning work on it, and before checking to see if the mains connection is entwined or damaged.
- Switch off the motor and pull the power plug:
 - before you dislodge any blockages or clogs.
 - before you clean the machine, inspect it or carry out work on the machine.
 - after you have traveled over an obstacle.
 - if you have struck a foreign object.



Do not lose these safety regulations.



Lined writing area consisting of 20 horizontal lines.



  Blank lined area for text entry, consisting of approximately 20 horizontal lines.



EH 10/2007

