



18V LITHIUM ION

USB POWER STATION


ORIGINAL INSTRUCTIONS

SPECIFICATIONS

Input: 18V DC
 Output: 5V DC 2.1A, 5V DC 1.0A
 Compatible Batteries: PXBP-150U (18V 1.5Ah)
 PXBP-200U (18V 2.0Ah)
 PXBP-300U (18V 3.0Ah)
 PXBP-400U (18V 4.0Ah)
 PXBP-520U (18V 5.2Ah)

ozito-diy.co.uk

- Charging Light
- On/Off Button
- Output 1.0A
- Output 2.1A

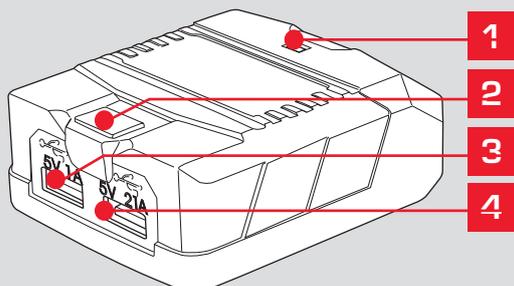

1 YEAR
REPLACEMENT WARRANTY

PXCG-USBU

DESCRIPTION OF SYMBOLS

| | | | |
|----------|--|-----------|--|
| V | Volts | Hz | Hertz |
| A | Amps | Ah | Amp Hour |
| | WARNING - Read the operating instructions to reduce the risk of injury | | For use in dry rooms only |
| | Warning | | Never place any electric power tools in your house-hold refuse |

ELECTRICAL SAFETY

WARNING! When using tools, basic safety precautions including the following should always be followed to reduce risk of fire, electric shock, personal injury and material damage.

Read the whole manual carefully and make sure you know how to switch the tool off in an emergency, before operating the tool.
Save these instructions and other documents supplied with this tool for future reference.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.

USB CHARGER SAFETY WARNINGS

Important! The charging unit is only allowed to be used with the lithium-ion batteries from the Power X Change range.

THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR YOUR BATTERY CHARGER.

- The charging unit is not allowed to be used for non-rechargeable, normal batteries.
- Sufficient ventilation is required.
- The current and voltage information on the battery pack must be the same as that on the charging unit.
- Do not expose the charging unit to splashwater or rain.
- Do not throw old or damaged batteries into water or fire. Follow the environmental protection directives.
- Place the charging unit away from all sources of heat.
- Do not take the charging unit apart. Take it to an authorized repair center if servicing or repairs are needed. Incorrect assembly can result in an electric shock and even death or fire.
- Children must always be supervised in order to ensure that they do not play with the equipment.
- Use only USB cables which are in perfect condition.

DISPOSAL AND RECYCLING

The equipment is supplied in packaging to prevent it from being damaged in transit. The raw materials in this packaging can be reused or recycled. The equipment and its accessories are made of various types of material, such as metal and plastic. Never place defective equipment in your household refuse.

The equipment should be taken to a suitable collection center for proper disposal. If you do not know the whereabouts of such a collection point, you should ask in your local council offices.



For EU countries only Never place any electric power tools in your household refuse.

To comply with European Directive 2012/19/EC concerning old electric and electronic equipment and its implementation in national laws, old electric power tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot. Recycling alternative to the return request: As an alternative to returning the equipment to the manufacturer, the owner of the electrical equipment must make sure that the equipment is properly disposed of if he no longer wants to keep the equipment. The old equipment can be returned to a suitable collection point that will dispose of the equipment in accordance with the national recycling and waste disposal regulations. This does not apply to any accessories or aids without electrical components supplied with the old equipment.

The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of the iSC GmbH.

Subject to technical changes

CHARGING CAPACITY

The USB power station is designed for charging and operating mobile phones, tablet computers, cameras and MP3 players that can be charged and operated via USB cables. There are 2 USB ports that can be used to charge and operate 2 devices simultaneously.

Suggested Charging Capacity by Battery Power

| Output | Suitable power to charge |
|-----------------|---|
| 1.0Amp (Port 1) | Mobile phone, camera, MP3 players, small devices. |
| 2.1Amp (Port 2) | Tablet computer, mobile phone, camera, MP3 players, devices requiring more power. |

ONLINE MANUAL


Scan this QR Code with your mobile device to take you to the online manual.



1. CHARGING A DEVICE


Connecting USB Power Station to battery pack

- 1 With the battery sitting on a flat surface, align the raised ribs on the battery with the recess in the charger and slide onto the battery ensuring a firm connection.

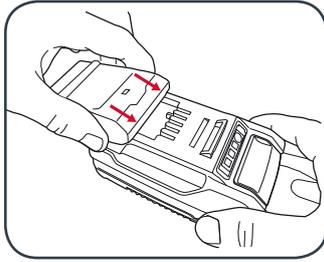


Connecting USB device to USB Power Station

- 1 Connect the device to be charged via USB cord to the USB Power Station outlet.

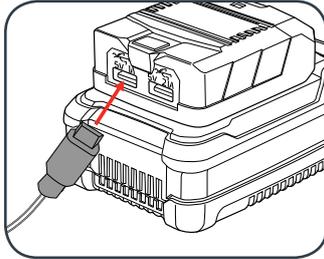

- 2 Push the On/Off button to turn on

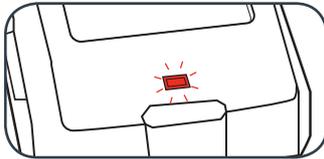

- 3 The LED will illuminate red showing power is being supplied to the USB Power Station.

Note: If no device is connected, the USB Power Station will turn off. The red LED light will no longer be illuminated.

- 4 To remove, push the on/off switch into the off position, then press the battery release tab and slide the USB Power Station from its position.



Note: For best results ensure the battery is fully charged.

2. MAINTENANCE

- Disconnect the charger from power source before cleaning.
- Keep the charger in a dry place out of reach of children.
- If the enclosure of the charger requires cleaning, do not use solvents. Use a dry, soft cloth only to wipe down the surface. Never let any liquid get inside the charger.
- There are no parts inside the charger which require maintenance. Do not take the charger apart. If the charger is damaged, contact your supplier or the manufacturer.

WARRANTY

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the customer service number shown. Please note the following terms under which guarantee claims can be made:

1. These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.

2. The warranty services only covers defects due to material or manufacturing faults on a product which you have bought from the manufacturer mentioned below are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer.

Please note that our devices are not designed for use in commercial, trade or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.

3. The following are not covered by our guarantee:

- Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.
- Damage to the device caused by abuse or incorrect use (for example overloading the device or the use of unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).
- Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.

4. Your Product is guaranteed for a period of 12 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. Warranty excludes consumable parts. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO THE PLACE OF PURCHASE WITH YOUR REGISTER RECEIPT.

Please refer to the restrictions of this warranty concerning wearing parts, consumables and missing parts as set out in the service information in these operating instructions.

**CUSTOMER SERVICE
HELPLINE
GB: 0151 294 4488
IRL: 1850 882711
Ozito-diy.co.uk**