

# CLASSIC

Robot Lawn Mower

**FREELEXO 550 Kit**

Item No.: 3413965

Ident No.: 21022

Bar Code: 4006825663280

**POWER X-CHANGE**

## Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Brushless motor - more power and longer runningtime
- Intuitive operated keypad
- Working time programmable in 8 levels
- Safety sensors thanks to impact, tilt and lift sensors
- PIN code for theft protection
- Rain sensor
- Mowing programme for secondary areas
- Cutting height adjustment (20-60 mm)
- Suitable for slopes up to 35%
- Automatic return to charging station and charging process
- Incl. installation equipment for 550 m<sup>2</sup> lawn area
- Incl. 3.0 Ah Power X-Change battery pack
- Incl. 135 m boundary wire and 190 fixing hooks
- Incl. 3 spare blades and 4 connection clamps



## Technical Data

|                             |                          |
|-----------------------------|--------------------------|
| - Power                     | 18 V                     |
| - Accumulator               | 18 V   3000 mAh   Li-Ion |
| - Cutting width             | 18 cm                    |
| - Slope                     | 35 %                     |
| - Cutting height adjustment | 20 mm - 60 mm            |
| - Recommended area          | 550 m <sup>2</sup>       |
| - Perimeter wire            | 135 m                    |
| - Hooks                     | 190 Pieces               |
| - Spare blades              | 3                        |
| - Connecting clamps         | 4 Pieces                 |

## Logistic Data

|  |                    |
|--|--------------------|
| - Product weight (kg)                  | 13.2               |
| - Gross weight (kg)                    | 16.2               |
| - Dimensions single packaging          | 692 x 437 x 313 mm |
| - Pieces per export carton             | 1 Pieces           |
| - Gross weight of export carton        | 16.79 kg           |
| - Dimensions export carton             | 700 x 440 x 315 mm |
| - Container quantities (20"/40"/40"HC) | 294   602   704    |



## Available as special accessories



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0Ah Power X-Change 1  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



Spare blades 12 psc  
Robot Lawn Mower Accessory  
Item No.: 3414020  
Bar Code: 4006825648775  
Einhell Accessory



Perimeter wire 50 m  
Robot Lawn Mower Accessory  
Item No.: 3414021  
Bar Code: 4006825648782  
Einhell Accessory



Connecting clamps 4 psc  
Robot Lawn Mower Accessory  
Item No.: 3414022  
Bar Code: 4006825648799  
Einhell Accessory



Fastening hook 100 psc  
Robot Lawn Mower Accessory  
Item No.: 3414023  
Bar Code: 4006825648805  
Einhell Accessory



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



2x 5,2Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512108  
Bar Code: 4006825652376  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



robot lawn mower garage  
Robot Lawn Mower Accessory  
Item No.: 3414024  
Bar Code: 4006825654417  
Einhell Accessory



18V Battery Charger 3,0A - PXC  
Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1  
PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB  
Battery  
Item No.: 4511524  
Bar Code: 4006825656206  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack  
Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



5,2Ah & 4A Fastcharger  
PXC-Starter-Kit  
Item No.: 4512114  
Bar Code: 4006825656787  
Einhell Accessory



Cleaning Kit  
Robot Lawn Mower Accessory  
Item No.: 3414025  
Bar Code: 4006825657951  
Einhell Accessory



Repair Kit  
Robot Lawn Mower Accessory  
Item No.: 3414026  
Bar Code: 4006825657968  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus  
Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory

Power X-Caravan Charger 3A  
Charger  
Item No.: 4512136  
Bar Code: 4006825664010  
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511600  
Bar Code: 4006825665055  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



18V 4-6Ah & 6A Boostcharger  
PXC-Starter-Kit  
Item No.: 4512143  
Bar Code: 4006825667653  
Einhell Accessory