



# Einhell

# EXPERT

## POWER X-CHANGE

**Cordless Pruning Saw**

**GE-GS 18/150 Li-Solo**

**Item No.: 3408290**

Ident No.: 21023

Bar Code: 4006825666649

The Einhell cordless pruning saw GE-GS 18/150 Li-Solo is used wherever branches are cut on trees or shrubs. It is part of the Power X-Change family and works thanks to battery power and robust metal gearbox with stroke speeds of up to 2,800 rpm and a stroke height of 20 mm. Thus up to 8 cm thick branches can be sawn with the removable branch bracket and up to 10 cm thick branches without it. The ergonomically shaped, lightweight saw has a belt clip, a tool-free saw blade holder (U-shaft) with protective cover, a raised protective collar and a safety switch. Delivery incl. 2x saw blade , but no battery or charger.

## Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Reliable helper for sawing branches (trees and shrubs)
- Effortless cutting of branches up to 10 cm thick
- Tool-free, easy blade change
- Blade holder cover for protection
- Incl. branch bracket for simple, one-handed sawing
- Quickly and easily removable branch bracket
- Vibration-decoupled battery holder to protect the battery
- Softgrip for comfortable working and perfect grip
- Belt clip for optimal working comfort
- Incl. 2x saw blade
- Supplied without battery or charger (sold separately)



## Technical Data

- Saw blade length 151 mm
- Cutting depth without branch handle 100 mm
- Cutting depth with branch handle 80 mm

## Logistic Data

- Product weight (kg) 1.14
- Gross weight (kg) 1.9
- Dimensions single packaging 378 x 130 x 115 mm
- Pieces per export carton 6 Pieces
- Gross weight of export carton 11.9 kg
- Container quantity (20"/40"/40"HC) 4200 | 8400 | 9240



## Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery  
Item No.: 4511502  
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



Power X-Fastcharger 4A Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



Power X-Twincharger 3A Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



5,2Ah & 4A Fastcharger PXC-Starter-Kit  
Item No.: 4512114  
Bar Code: 4006825656787  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB A1 Battery  
Item No.: 4511489  
Bar Code: 4006825638578



18V 3,0 Ah Power-X-Change 2 Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit  
Item No.: 4512143  
Bar Code: 4006825667653  
Einhell Accessory



3,0 Ah Power X-Change Plus Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



2,0 Ah Power X-Change Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1 PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 2,5Ah Power X-Change Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



2x 5,2Ah & Twincharger Kit PXC-Starter-Kit  
Item No.: 4512108  
Bar Code: 4006825652376  
Einhell Accessory



Power X-Car Charger 3A Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



PXC Battery Mounting Gadget PXC-Battery Accessory  
Item No.: 4514155  
Bar Code: 4006825658774  
Einhell Accessory



Power X-Boostcharger 6A Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus Battery  
Item No.: 4511600  
Bar Code: 4006825665055  
Einhell Accessory



5,2 Ah Power X-Change Plus Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



18V Battery Charger 3,0A - PXC Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory

# Battery-Running-Times



One Battery for All

cutting<sup>1</sup>  
(pieces)

1.5 Ah	70
2.0 Ah	90
2.5 Ah	115
3.0 Ah	140
4.0 Ah	180
5.2 Ah	240
6.0 Ah	280
8.0 Ah	360

Test setup:

1) wood - round wood Ø 60 mm