



Einhell

EXPERT

POWER X-CHANGE

Cordless Lawn Trimmer

GE-CT 18/25 Li-Solo

Item No.: 3411255

Ident No.: 21014

Bar Code: 4006825680416

The Einhell cordless trimmer GE-CT 18/25 Li-Solo is a powerful lawn care tool from the Power X-Change family. The motor head, which is 180° rotatable and tiltable to 3 positions, along with the edging function, enable you to trim lawn edges and hard-to-reach areas. The Flowerguard keeps the tool at a suitably safe distance from flowers and ornamental plants. The cutting mechanism of the cordless trimmer can be switched between blades and filament using a thread head which is available separately. The trimmer has an infinitely telescopic guide bar and an additional handle with an integrated blade storage compartment. Set incl. 20x plastic blades. Battery and charger not included.

Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- 180° rotatable motor head: For vertical surfaces/lawn edges
- 3-position tiltable motor head for flexible operation
- Infinitely telescopic guide bar
- Infinitely adjustable second handle
- Integrated compartment for 20 blades in second handle
- Flowerguard protects plants and trees from damage
- Soft grip surfaces for comfortable handling
- Stable blade holder for longer blade life
- Incl. 20x plastic knife
- Easy changeover to thread head, which is available separately
- Does not include battery or charger (available separately)

 


Technical Data

- Cutting width of knife 25 cm
- Number of knives 1 Pieces

Logistic Data

- Product weight 2 kg
- Gross weight single packaging 3.11 kg
- Dimensions single packaging 1015 x 200 x 127 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 14.9 kg
- Dimensions export carton 1030 x 415 x 260 mm

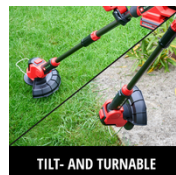


TILT- AND TURNABLE



TELESCOPIC



 ADDITIONAL HANDLE

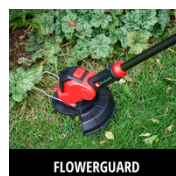


FLOWERGUARD




AVAILABLE ACCESSORY



 18 V

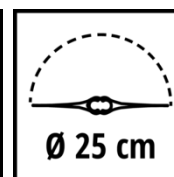

Ø 25 cm

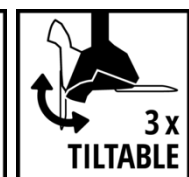 

3 x TILTABLE

Available as special accessories



PXC Battery Mounting Gadget
PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



Thread Head f. GE-CT 18/25 Li
Lawn Trimmer Accessory
Item No.: 3405175
Bar Code: 4006825680454
Einhell Accessory



Spareknife-Set GE-CT 18/25 Li
Lawn Trimmer Accessory
Item No.: 3405738
Bar Code: 4006825681130
Einhell Accessory



Spareknife-Box GE-CT 18/25 Li
Lawn Trimmer Accessory
Item No.: 3405739
Bar Code: 4006825681147
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



PXC+ 18V 4,0Ah SEALED
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



PXC+ 18V 3,0Ah SEALED
Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



Power X-Boostcharger 8A
Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory

Battery-Running-Times



One Battery for All

trimming¹
(min.)

1.5 Ah	32
2.0 Ah	42
2.5 Ah	53
3.0 Ah	63
4.0 Ah	84
5.2 Ah	110
6.0 Ah	126
8.0 Ah	168

Test setup:

1) lawn - knife