



ELECTRIC SILENT SHREDDER

Quick Set-Up Guide

Using The Garden Shredder

EASY STEPS TO GETTING STARTED

- 1 Unpack the Silent Shredder
 - a) Open carton carefully and remove all items
 - b) Ensure you have all items before you discard the packaging

- 2 Assemble unit
To assemble this unit please refer to the user manual/instruction booklet

- 3 Now you have assembled the unit please ensure the collection box is fully in place and locked in position. This will engage the safety switch.

If the collection box is not locked in place the unit WILL NOT OPERATE

- 4 Now you are ready to use the unit please check the cable is securely connected to the unit.

Please remember max size of branches is 40 mm.

The Cutter/Counter blade setting is pre set at factory and should not need any initial adjustment.

However please ensure that the Cutter blade / Counter blade setting is correct at all items 0.5 to 1.0 if not this may result in the unit not functioning correctly. If necessary adjustment can be made via the adjusting knob.

PLEASE DO NOT OVER ADJUST THIS SO THE COUNTER BLADE MEETS THE CUTTER AS THIS WILL DAMAGE THE BLADE (REFER TO MANUAL)



Helpline No. UK/Northern Ireland 0151 6491500 Rep. Ireland 1890 946244
Model Number: 8856