



The Einhell FREELEXO 550 Kit is part of the powerful Power X-Change family, which offers unlimited flexibility within the system family. The FREELEXO is controlled via the intuitive keypad, with which the working time can be programmed in 8 stages. The FREELEXO 550 Kit contains everything you need for the installation and operation of an Einhell mower robot from the FREELEXO range. The set is designed for a lawn area of up to 550 m<sup>2</sup>. Delivery includes a charging station, a 3.0 Ah battery, 135 m boundary wire, 190 mounting hooks, 3 replacement blades and 4 connecting clamps.

## Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Brushless motor - more power and longer running time
- Intuitive operated keypad
- Working time programmable in 8 levels
- Safety sensors thanks to impact, tilt and lift sensors
- PIN code for theft protection
- Rain sensor
- Mowing programme for secondary areas
- Cutting height adjustment (20-60 mm)
- Suitable for slopes up to 35%
- Automatic return to charging station and charging process
- Incl. installation equipment for 550 m<sup>2</sup> lawn area
- Incl. 3.0 Ah Power X-Change battery pack
- Incl. 135 m boundary wire and 190 fixing hooks
- Incl. 3 spare blades and 4 connection clamps



## Technical Data

- Power	18 V
- Accumulator	18 V   3000 mAh   Li-Ion
- Cutting width	18 cm
- Slope	35 %
- Cutting height adjustment	20 mm - 60 mm
- Recommended area	550 m <sup>2</sup>
- Perimeter wire	135 m
- Hooks	190 Pieces
- Spare blades	3
- Connecting clamps	4 Pieces



## Logistic Data

- Product weight (kg)	8.9
- Gross weight (kg)	16.7
- Dimensions single packaging	702 x 458 x 320 mm
- Pieces per export carton	1 Pieces
- Gross weight of export carton	16.79 kg
- Dimensions export carton	700 x 450 x 335 mm
- Container quantities (20"/40"/40"HC)	294   602   688



## Available as special accessories



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 4,0Ah PXC Starter Kit A1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



Spare blades 12 psc  
Robot Lawn Mower Accessory  
Item No.: 3414020  
Bar Code: 4006825648775  
Einhell Accessory



Perimeter wire 50 m  
Robot Lawn Mower Accessory  
Item No.: 3414021  
Bar Code: 4006825648782  
Einhell Accessory



Connecting clamps 4 psc  
Robot Lawn Mower Accessory  
Item No.: 3414022  
Bar Code: 4006825648799  
Einhell Accessory



Fastening hook 100 psc  
Robot Lawn Mower Accessory  
Item No.: 3414023  
Bar Code: 4006825648805  
Einhell Accessory



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



robot lawn mower garage  
Robot Lawn Mower Accessory  
Item No.: 3414024  
Bar Code: 4006825654417  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1  
PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack  
Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



Cleaning Kit  
Robot Lawn Mower Accessory  
Item No.: 3414025  
Bar Code: 4006825657951  
Einhell Accessory



Repair Kit  
Robot Lawn Mower Accessory  
Item No.: 3414026  
Bar Code: 4006825657968  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB  
A1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578



Power X-Caravan Charger 3A  
Charger  
Item No.: 4512136  
Bar Code: 4006825664010  
Einhell Accessory



18V 4-6Ah & 6A Boostcharger  
PXC-Starter-Kit  
Item No.: 4512143  
Bar Code: 4006825667653  
Einhell Accessory



5,2 Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



PXC+ 18V 5-8Ah MULTI  
Battery  
Item No.: 4511600  
Bar Code: 4006825665055  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V Battery Charger 3,0A - PXC  
Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory



3,0 Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory