



Einhell

EXPERT PLUS



Cordless Grass- and Bush Shear

GC-CG 18 Li-Solo

Item No.: 3410370

Ident No.: 21021

Bar Code: 4006825614213

The cordless grass and shrub shears GC-CG 18 Li - Solo from Einhell is the ideal partner for hobby gardeners who appreciate flexibility when it comes to keeping their greeneries in shape. For optimum power transmission to the laser-cut and diamond grinded blades there is a robust metal gearing. A grass cutting blade and a shrub shears blade are included. Converting from the grass shears to the shrub shears is quick and easy to do thanks to the special blade change system which requires no tools. A safety switch protects the user from starting the shears unintentionally. The GC-CG 18 Li comes with a soft grip for a firm and yet comfortable hold. This product comes without a battery or charger.

Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Metal gearing - long lifetime
- Grass cutting blade for maintaining of lawn edges
- Shrub shears blade for maintaining hedges, bushes & beech trees
- Blade change without tools - easy and quick
- Laser-cut and diamond grinded blades
- Soft grip - ensuring perfect grip
- Supplied without battery and charger (available separately)



Technical Data

- Cutting width with grass shear knife 100 mm
- Cutting length with shrub cutting knife 200 mm
- Cutting thickness with shrub cutting knife 8 mm
- Spacing between teeth of shrub cutting knife 8 mm

Logistic Data

- Product weight 0.67
- Gross weight single packaging 1.35 kg
- Dimensions single packaging 355 x 115 x 120 mm
- Pieces per export carton 6 Pieces
- Gross weight export carton 8.7 kg
- Dimensions export carton 370 x 360 x 260 mm
- Container quantity (20"/40"/40"HC) 4320 | 9216 | 10368



Available as special accessories



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	 trimming ¹ (min.)
1.5 Ah	180
2.0 Ah	240
2.5 Ah	300
3.0 Ah	360
4.0 Ah	480
5.2 Ah	650
6.0 Ah	720
8.0 Ah	960

Test setup:

1) lawn

Illustrations can contain accessories, which are not included in standard extent of delivery
Illustration similar (in design), production-wise modifications reserved
GS mark belongs to the product itself only, excluded accessory

Generated at: 26.08.2022 08:47

Page 2