



Einhell



 
 
 
 
FREELEXO CAM

SERVICE




<http://qr.einhell.com/179a044c>








1

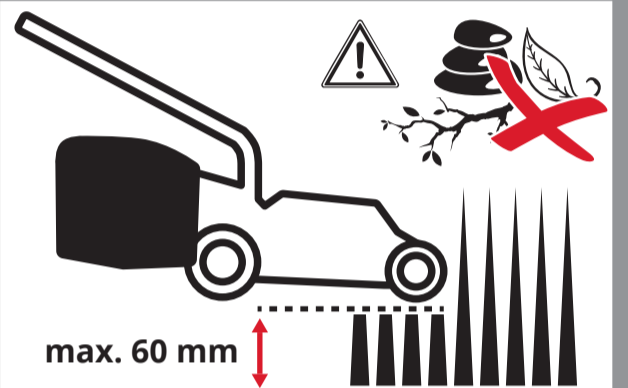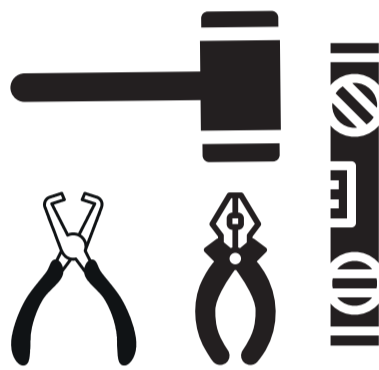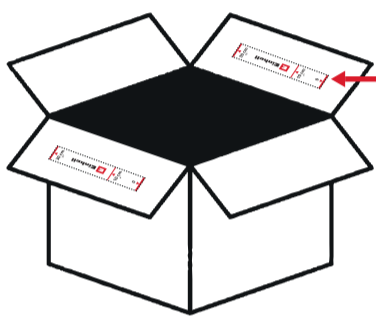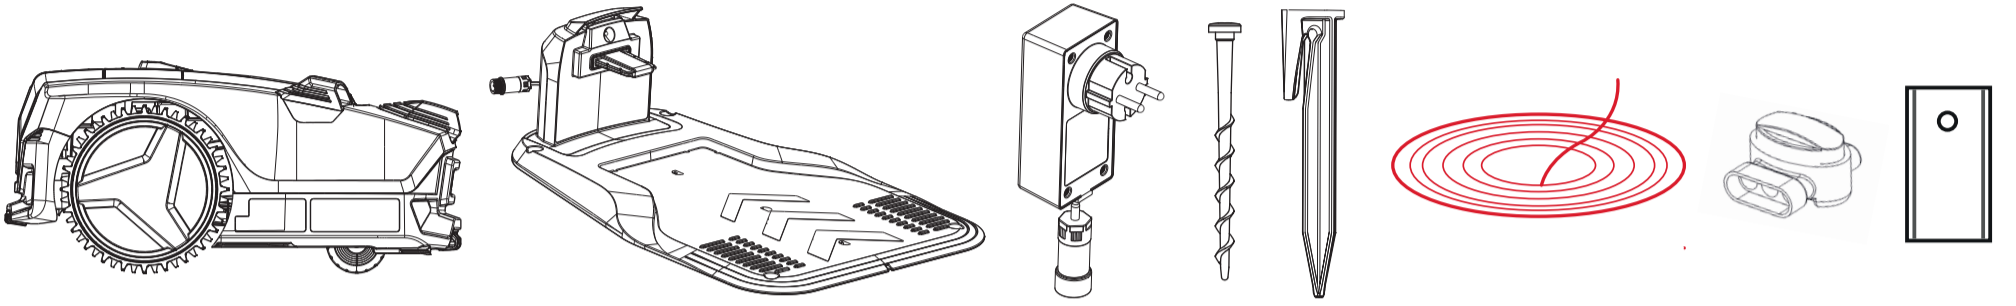




2

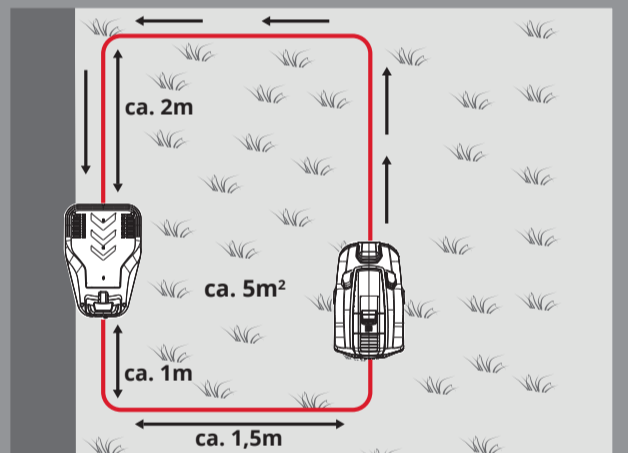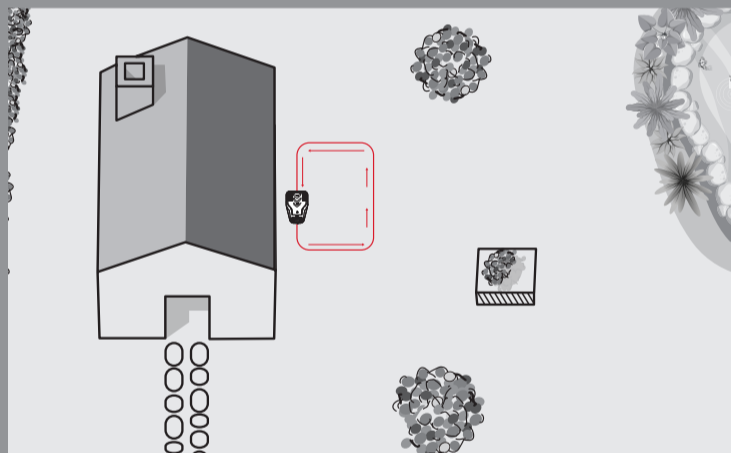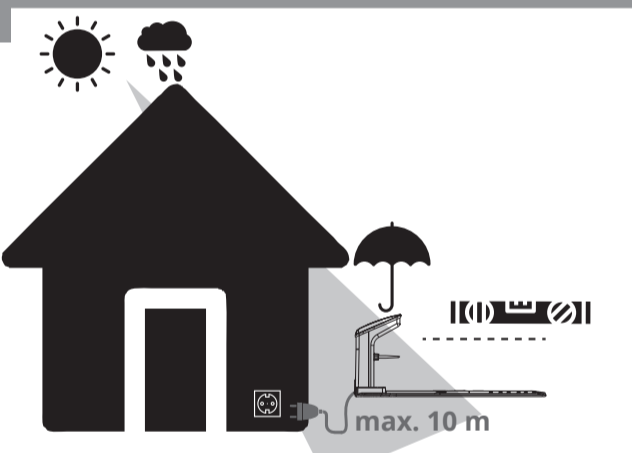   


3

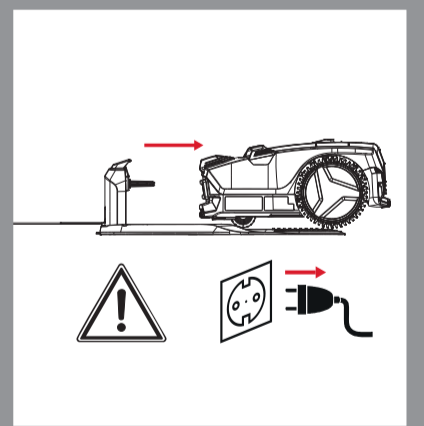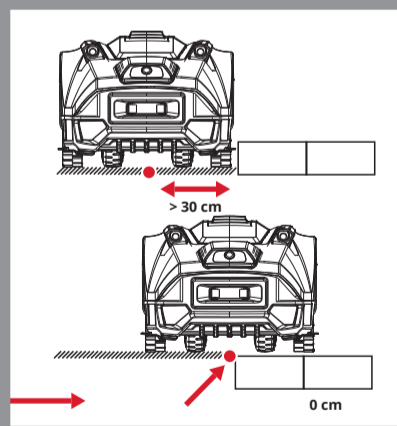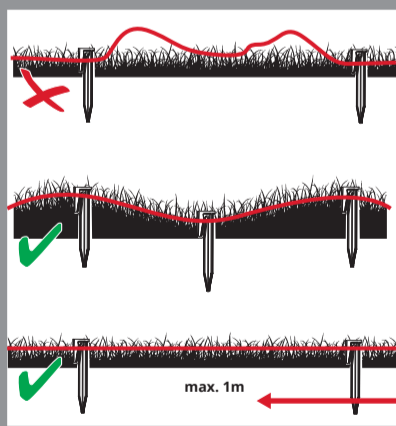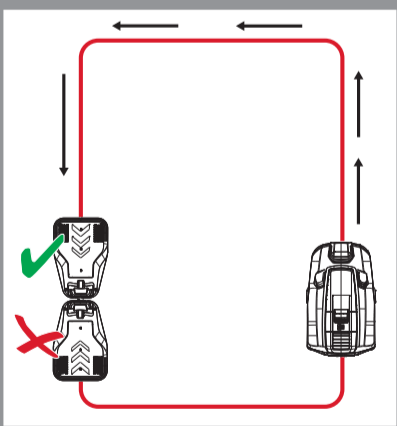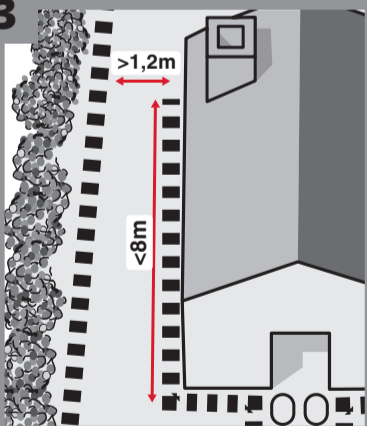     



4

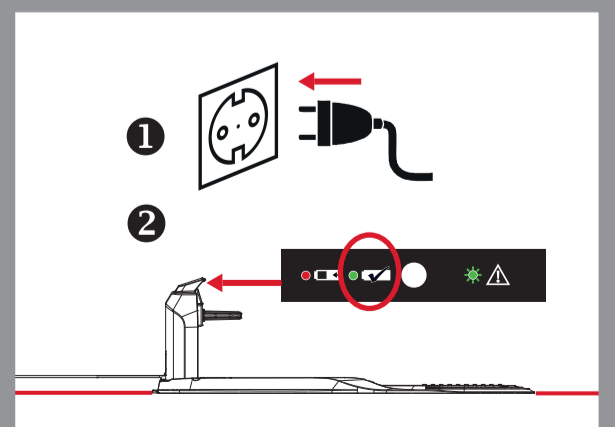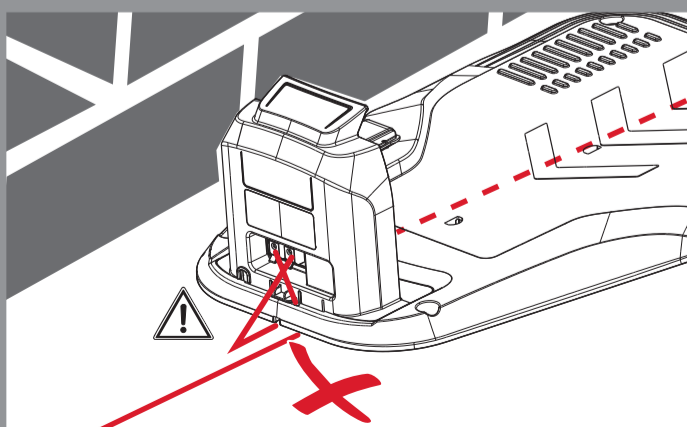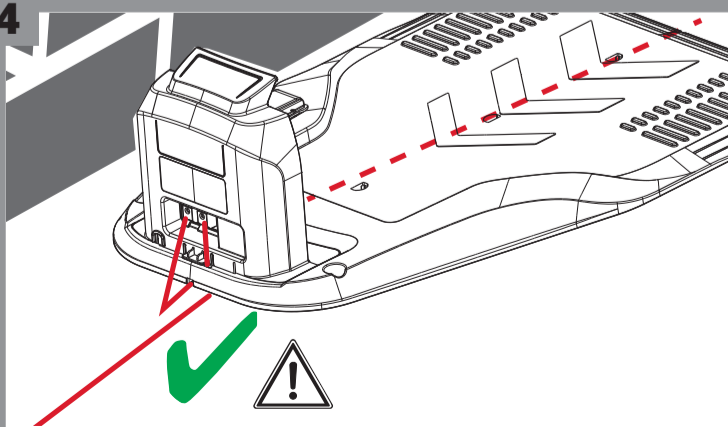   


5

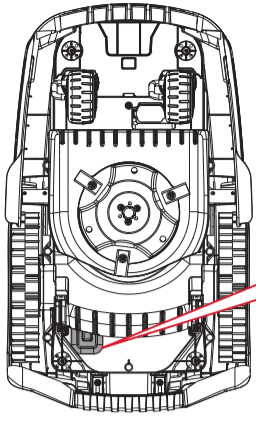 

1 ON

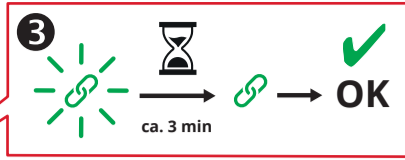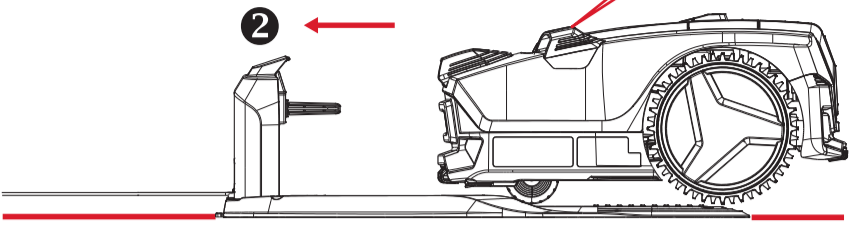  

6

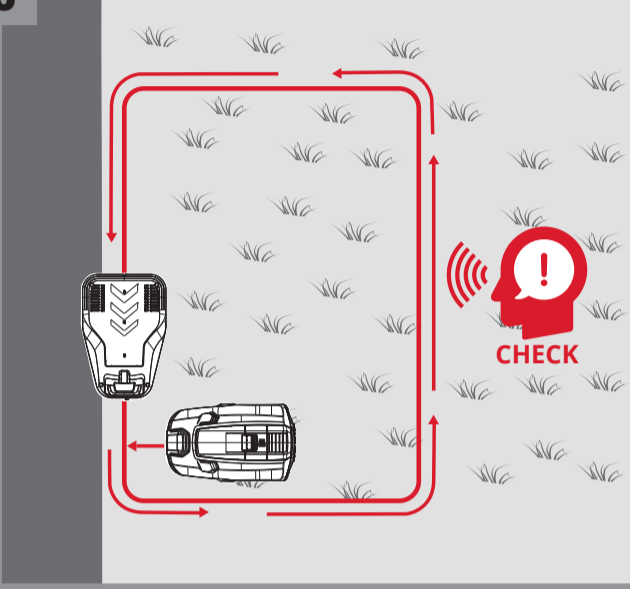 

1

4H ₁	6H ₂	8H ₃	10H ₄
Home	Lock	OK	START A/B


2

PIN: 1-2-3-4 → OK







4H ₁	6H ₂	8H ₃	10H ₄
Home	Lock	OK	START A/B

3 HOME

4H ₁	6H ₂	8H ₃	10H ₄
Home	Lock	OK	START A/B

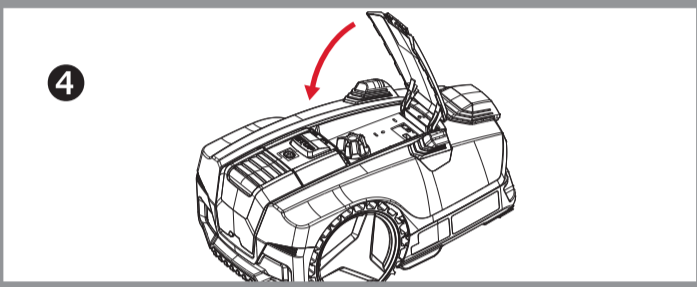 


7

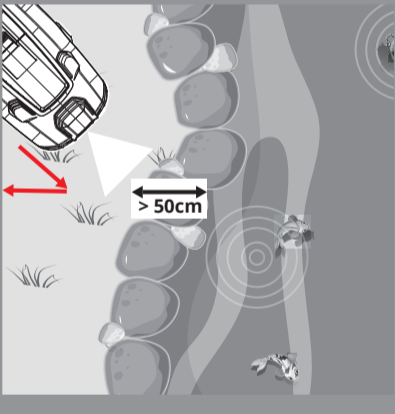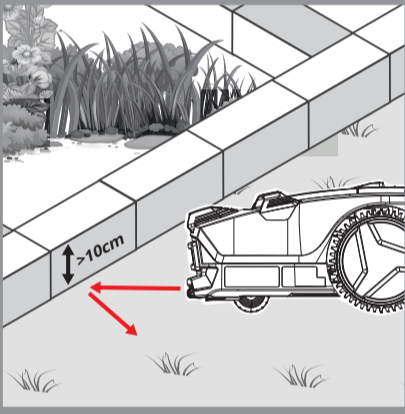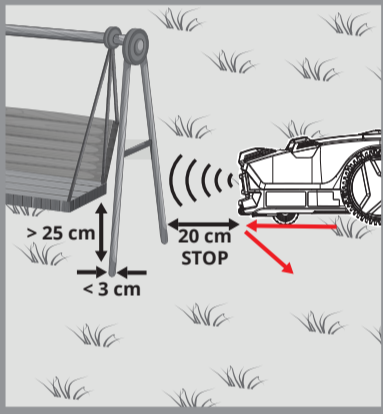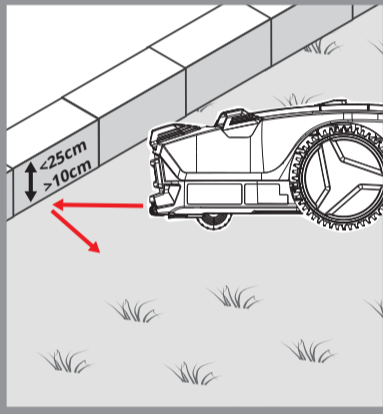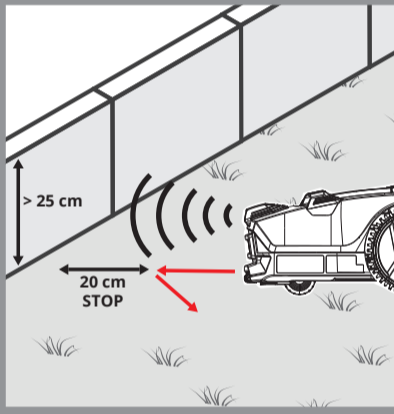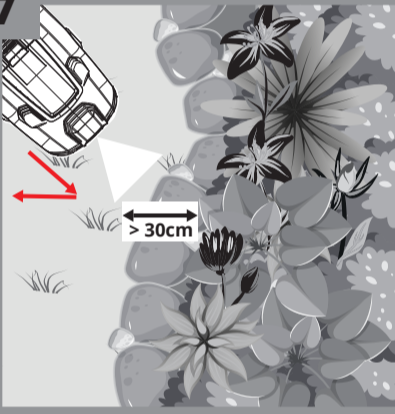      

CHECK

Green house icon with smiley face | Yellow house icon with frowny face

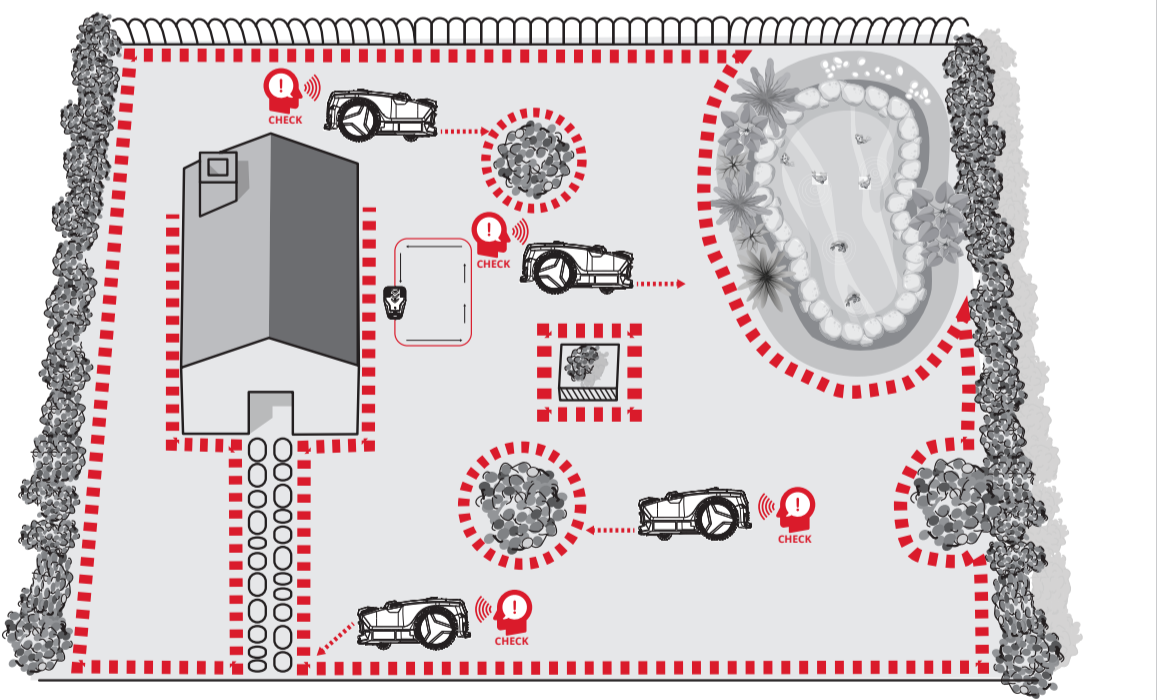 

4H ₁	6H ₂	8H ₃	10H ₄
Home	Lock	OK	START A/B

1 START A/B


2

8

4H ₁	6H ₂	8H ₃	10H ₄
Home	Lock	OK	START A/B

1

 2

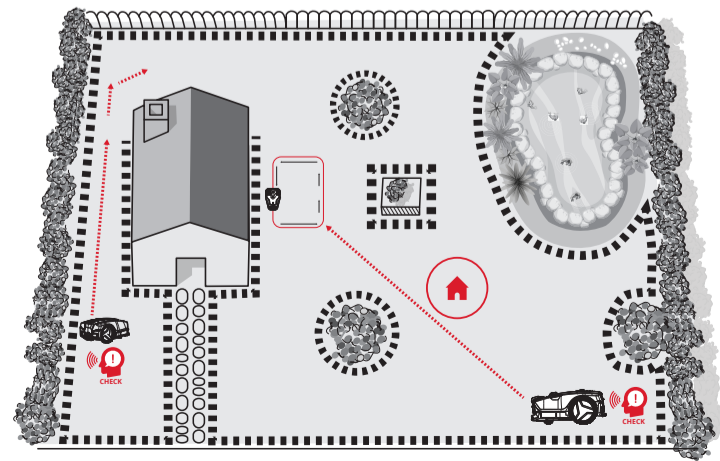

CHECK