



Einhell

EXPERT Plus

POWER X CHANGE

GE-CT 18 Li Kit

Cordless Lawn Trimmer

Item No.: 3411170

Ident No.: 11046

Bar Code: 4006825588248

The GE-CT 18 Li Kit cordless grass trimmer is a powerful tool which helps you keep your lawn looking immaculate in those places which cannot be reached by a lawn mower. With the new Power X-Change battery system from Einhell, the grass trimmer has an 18 V battery pack with 1.5 Ah for long work sessions where there is no connection to the power grid. Thanks to the battery capacity indicator with three LEDs you can check the current charge level at a glance.

Features

 
 
- Battery system - Power X-Change
- Battery charge level indicator with 3 LEDs
- Batteries can be used for other Power X-Change products
- System high-speed chargers included
- Infinitely adjustable second handle
- Telescopic long handle, infinitely adjustable
- Motor head rotateable +/- 90° for vertical surfaces + lawn edges
- Motor head can be tilted to 5 settings
- Flower guard
- Compartment for 20 blades integrated in second handle
- Incl. 20 plastic blades
- Soft grip

Technical Data

- Accumulator	18 V 1500 mAh Li-Ion
- Max. running time	40 min
- Charging time	1/2h
- Revolutions of knife	8500 rpm
- Cutting width of knife	24 cm
- Number of accumulators	1 Pieces

Logistic Data

- Product weight	2.15 kg
- Gross weight single packaging	3.77 kg
- Dimensions single packaging	200 x 120 x 982 mm
- Pieces per export carton	4 Pieces
- Gross weight export carton	16.5 kg
- Dimensions export carton	1005 x 420 x 270 mm
- Container quantity (20"/40"/40"HC)	900 1984 2232

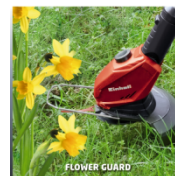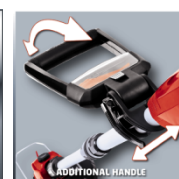

Available as special accessories



Ersatzmesser-Set BG-CT 18 Li
Rasentrimmer-Zubehör
Item No.: 3405730
Bar Code: 4006825560404
Einhell Grey



18V 30min Power-X-Change
Power Tools Accessory
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2 Ah Power-X-Change
Battery
Item No.: 4511357
Bar Code: 4006825598865
Einhell Accessory



18V 3,0 Ah Power-X-Change
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory