


Start-up Guide

Freecall (Aus) 1800 069 486
(NZ) 0508 069 486


www.ozito.com.au




ACP-2415

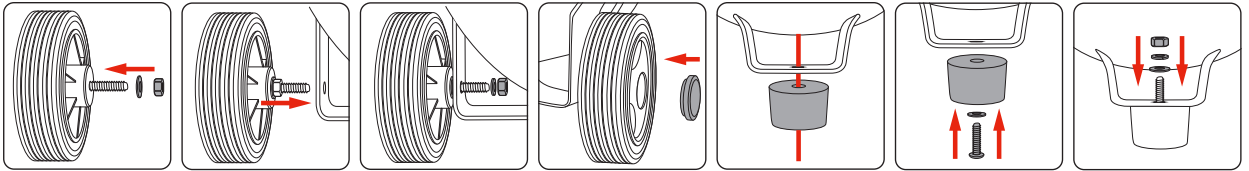

Attach both wheels and front supporting foot before starting compressor.

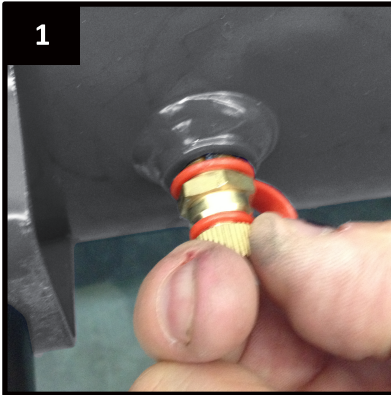


1 Drain any liquid from the tank and tighten the drain plug.

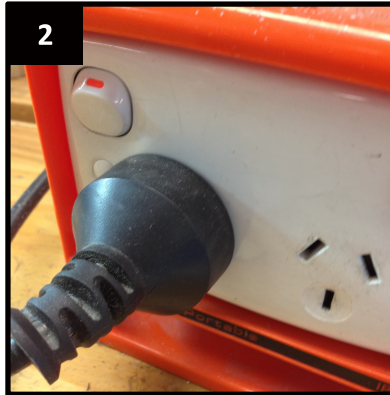


2 Plug the unit into a suitable power outlet.




3 To start the unit, pull the On/Off switch upwards.

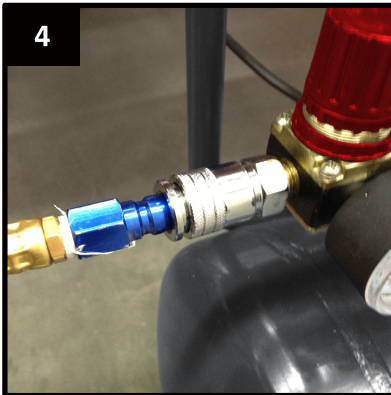


4 Push the air tool fitting (connection from tool) into the air outlet, pull the sleeve back & make sure the air line is secure.

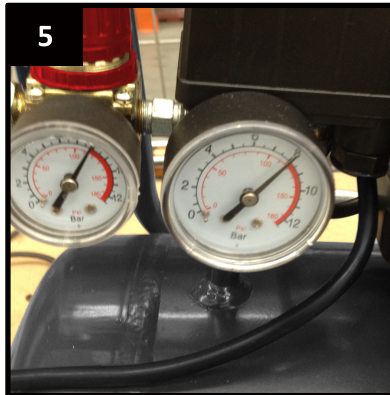


5 Allow the unit to run, until the max pressure is reached and the motor has stopped.

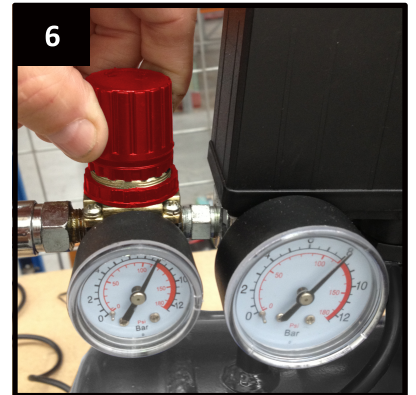

6 Adjust the pressure reducer to the correct pressure required.

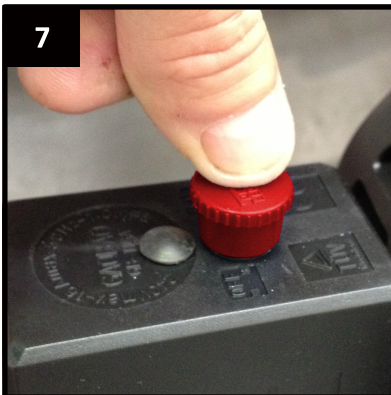

7 When finished switch the unit OFF, push the switch down.

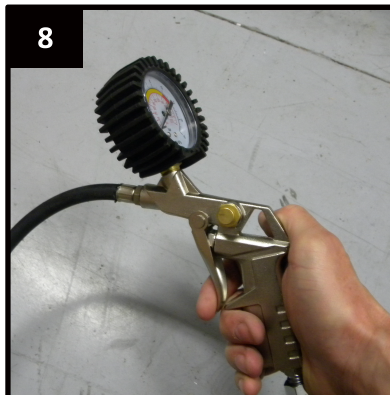

8 Release the pressure in the tank by pulling the trigger of the equipment used.



9 Release the pressure in the tank by pulling the safety valve.