



Einhell



Cordless Surface Brush

PICOBELLA 18/90

Item No.: 3424220

Ident No.: 21035

Bar Code: 4006825671759

The Einhell cordless surface brush PICOBELLA 18/90 is a versatile helper for cleaning indoors and outdoors, such as in the garden or in the home. As a member of the Power X-Change battery system, each battery in the system can be combined with the cordless cleaning brush. Equipped with a 2-stage speed adjustment, a battery cover in accordance with water protection class IPX4 and a splash guard brush cover can be cleaned with various brushes and pads. For this purpose, the following are included: 1x brush MEDIUM 90/20, 1x brush SOFT 120/50, 1x melamine foam pad, 1x microfibre pad, 1x kitchen fibre pad, 1x pad holder and a wall mount. Supplied without battery or charger.





Features & Benefits

- Member of the Power X-Change family
- Interior and exterior cleaning for home, car and garden
- IPX4 water protection class makes it ideal for wet cleaning
- Removable splash guard cover to protect against dirt and moisture
- Removable splash guard cover to protect against dirt and moisture
- Tool-free brush change thanks to quick-release and hook and loop
- Incl. 1 x brush SOFT 120/50, 1x brush MEDIUM 90/20
- Incl. 3 cleaning pads (melamine, microfibre, kitchen fibre)
- Incl. 1 x pad holder
- Incl. practical wall holder for space-saving storage
- Soft grip surfaces for safe and comfortable work
- Supplied without battery and without charger (available separate)



SPEED REGULATION

WATER PROTECTION COVER

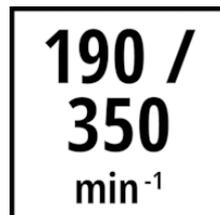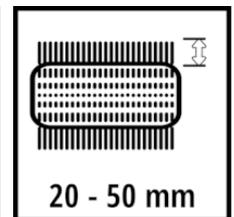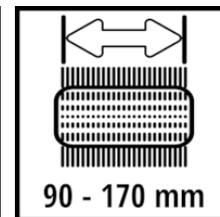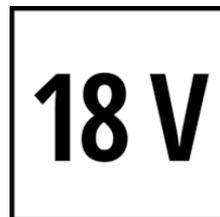

Technical Data

- Working width (brush MEDIUM) 90 mm
- Working width (brush SOFT) 50 mm
- Diameter of brush 120 mm

Logistic Data

- Gross weight of export carton 19.8 kg
- Pieces per export carton 6 pcs
- Gross weight (kg) 2.97
- Product weight (kg) 1.61
- Container quantity (20"/40"/40"HC) 2670 | 2136 | 1008
- Dimensions export carton 590 x 515 x 507 mm
- Dimensions single packaging 190 x 240 x 483 mm

Available as special accessories



Brush SOFT 170/40
Surface Brush Accessory
Item No.: 3424130
Bar Code: 4006825673081
Einhell Accessory



Brush MEDIUM 90/20
Surface Brush Accessory
Item No.: 3424132
Bar Code: 4006825673104
Einhell Accessory



Reinigungspad Set
Surface Brush Accessory
Item No.: 3424134
Bar Code: 4006825673128
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



PXC 18V 4,0Ah
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



PXC+ 18V 3,0Ah
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



PXC 18V 2,5Ah
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



18V 4,0Ah PXC Starter Kit C1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



Brush SOFT 120/50
Surface Brush Accessory
Item No.: 3424131
Bar Code: 4006825673098
Einhell Accessory



Bürste ULTRA 95/25 (Messing)
Surface Brush Accessory
Item No.: 3424133
Bar Code: 4006825673111
Einhell Accessory



PXC Battery Mounting Gadget
PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



PXC 18V 2,0Ah
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



PXC 18V 5,2Ah
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 4-6Ah MULTI
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
C1
Battery
Item No.: 4511489
Bar Code: 4006825638578



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory

Battery-Running-Times

Battery Capacity	2.0 Ah	2.5 Ah	3.0 Ah	4.0 Ah	5.2 Ah	6.0 Ah	8.0 Ah
Performance	150-210 min	190-260 min	225-315 min	300-420 min	390-550 min	450-630 min	600-840 min

Max. running time per battery charge: no load