



Einhell

EXPERT



Cordless Chain Saw

FORTEXXA 18/30

Item No.: 4600010

Ident No.: 21034

Bar Code: 4006825656572

The Einhell FORTEXXA 18/30 cordless chainsaw is a member of the Power X-Change family. The chain saw is driven by a brushless electric motor, is equipped with an quality blade and chain and has a tool-free adjustable chain tension/change. The chain catcher and the kickback protection with instant chain brake ensure safety and the automatic chain lubrication via the large oil filling opening for care. The claw stop is made of metal, the ergonomic handle is equipped with softgrip. The chain speed is adjustable, it can be switched between full power and Eco mode. Delivery does not include battery or charger.

Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Brushless motor - more power and longer running time
- Brushless - 10 years motor warranty after registration
- High-quality chain and bar
- Selection of HIGH power (8.9 m/s) and ECO power (6 m/s)
- Speed setting depending on the application
- Toolless chain tensioning and changing
- Kickback protection with instant chain brake
- Ergonomic handle with softgrip
- Sturdy stop claws made of metal
- Big filler opening
- Automatic chain lubrication
- Chain catcher
- Recommendation for optimum results: 4.0 Ah rechargeable battery
- Supplied without battery and charger (available separately)



Technical Data

- | | |
|---------------------|--------|
| - Sword length | 300 mm |
| - Oil tank capacity | 160 mL |



Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight (kg) | 4.09 kg |
| - Gross weight (kg) | 5.05 kg |
| - Dimensions single packaging | 252 x 475 x 287 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 22.75 kg |
| - Dimensions Export Carton | 580 x 500 x 535 mm |
| - Container quantity (20"/40"/40"HC) | 656 1376 1720 |



Available as special accessories



Ersatzschwert 30cm 1,1
Chain Saw Accessory
Item No.: 4500191
Bar Code: 4006825663518
Einhell Accessory



Ersatzkette 30cm 1,1 45T 3/8
Chain Saw Accessory
Item No.: 4500192
Bar Code: 4006825663532
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



PXC 18V 2,5Ah
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory





18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory

Battery-Running-Times

One Battery for All	 sawing ¹ (pieces)	 sawing ² (pieces)
1.5 Ah	53	59
2.0 Ah	70	78
2.5 Ah	88	98
3.0 Ah	105	117
4.0 Ah	140	156
5.2 Ah	182	203
6.0 Ah	210	234
8.0 Ah	280	312

For best performance select a battery with at least 4.0 Ah

Test setup:

1) wood - scantling 70x70 mm - BOOST

2) wood - scantling 70x70 mm - ECO