



Einhell

EXPERT

POWER X-CHANGE

Cordless Jig Saw

TE-JS 18/100 Li - Solo

Item No.: 4321270

Ident No.: 21013

Bar Code: 4006825679052

The Einhell cordless jigsaw TE-JS 18/100 Li-Solo is a compact saw for precise cuts, and a member of the Power X-Change family. For fast cuts, the pendulum stroke can be engaged. The cordless jigsaw can achieve cuts up to 100 mm deep in wood and 12 mm in steel, as well as bevel cuts at up to 45°. It has a cutting line indicator, an LED light, a splinter guard, electronic speed control and a toolless saw blade holder. The dust blow-off function and the suction adapter for connecting a wet/dry vacuum cleaner ensure perfect visibility. The plastic shoe cover integrated into the saw shoe protects delicate workpieces. Set incl. 1x saw blade for wood. Battery and charger not included.

Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Electronic speed control for material-adapted working
- Switchable pendulum stroke for quick cuts
- Toolless saw blade holder
- Dust blow-off function and LED light for optimal visibility
- Cutting line indicator for precise cuts
- Sturdy aluminium base plate for lower vibration
- Integrated plastic shoe cover for delicate surfaces
- Incl. dust extraction adapter for clean working
- Hexagon key in housing for adjusting angle
- Incl. splinter guard for tear-free cuts
- Incl. parallel guide for straight cuts
- Incl. 1x saw blade for wood
- Does not include battery or charger (available separately)



 
 
 
Technical Data

- No-load speed (idle speed) 3000 min⁻¹
- Stroke height 26 mm
- Cutting depth in wood 100 mm
- Cutting depth in plastic 20 mm
- Cutting depth in steel 12 mm
- Max. bevel cuts 45 °
- Toolless saw blade change yes



Logistic Data

- Product weight 1.87 kg
- Gross weight single packaging 2.26 kg
- Dimensions single packaging 255 x 236 x 98 mm
- Pieces per export carton 5 Pieces
- Gross weight export carton 13.02 kg
- Container quantity (20"/40"/40"HC) 3850 | 7980 | 9355

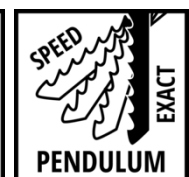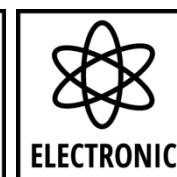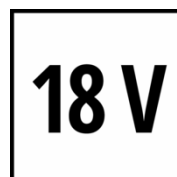

Available as special accessories



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



PXC+ 18V 4,0Ah SEALED
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



PXC+ 18V 3,0Ah SEALED
Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



E-Case L with wheels
System Carrying Case
Item No.: 4540014
Bar Code: 4006825660562
Einhell Accessory



E-Case Tasche
System Carrying Case
Item No.: 4540036
Bar Code: 4006825677966
Einhell Accessory



E-Case S-F
System Carrying Case
Item No.: 4540011
Bar Code: 4006825653991
Einhell Accessory



E-Case M
System Carrying Case
Item No.: 4540021
Bar Code: 4006825667721
Einhell Accessory



E-Case Werkzeugkiste
System Carrying Case
Item No.: 4540037
Bar Code: 4006825677973
Einhell Accessory

Battery-Running-Times



One Battery for All

cutting¹
(m)

1.5 Ah	13
2.0 Ah	17
2.5 Ah	21
3.0 Ah	26
4.0 Ah	34
5.2 Ah	44
6.0 Ah	51
8.0 Ah	68

Test setup:

1) -