



Einhell

CLASSIC



Cordless Pruning Chain Saw

GC-AAKS 18 Li - Solo

Item No.: 4600065

Ident No.: 21015

Bar Code: 4006825686463

The Einhell cordless pruning chainsaw GC-AAKS 18 Li - Solo is ideal for tree care, trimming shrubs and cutting squared timber. With a 12.5 cm cutting length and 6.7 m/s chain speed, it handles precise tasks around the home. As part of the Power X-Change family, it offers maximum flexibility. Safety features include an integrated safety switch, a robust hand guard and a foldable chain cover. The 15.8 cm bar ensures clean cuts, while the soft grip provides a secure hold. An overload protection system safeguards the motor. Chain tensioning and bar replacement are carried out using separate tools. Supplied without battery and charger.

Features & Benefits

- Member of Power X-Change family, needs 1x 18V battery
- For pruning and shaping trees and shrubs
- Cuts green waste and squared timber
- Tool-free bar and chain replacement
- High-performance bar and chain set
- Hand guard and foldable chain cover
- Slim and lightweight design for ergonomic working
- Bar protection cover for safe storage
- Incl. tool for chain tensioning
- Battery and charger not included

Technical Data

- Chain cutting speed	6.7 m/s
- Sword length	158 mm
- Max. cutting length	12.5 cm

Logistic Data

- Product weight (kg)	1.4
- Gross weight (kg)	1.76
- Dimensions single packaging	410 x 105 x 175 mm
- Pieces per export carton	4 Pieces
- Gross weight of export carton	9.42 kg
- Dimensions export carton	430 x 370 x 230 mm
- Container quantity (20"/40"/40"HC)	2880 5760 7040



PXC BATTERY



**BATTERY & CHARGER
NOT INCLUDED**



HIGH QUALITY CHAIN/BAR

 
 
 


**TOOL-FREE BAR/CHAIN
REPLACEMENT**

PXC BATTERY



**BATTERY & CHARGER
NOT INCLUDED**

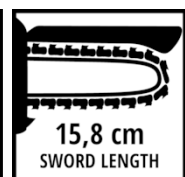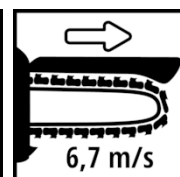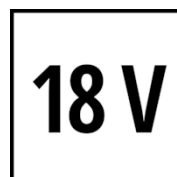

Available as special accessories



Ersatzkette 15cm 1,0 28T 7,62
Chain Saw Accessory
Item No.: 4500174
Bar Code: 4006825673647
Einhell Accessory



Ersatzschwert 15cm 1,0
Chain Saw Accessory
Item No.: 4500163
Bar Code: 4006825672503
Einhell Accessory



E-Case L with wheels
System Carrying Case
Item No.: 4540014
Bar Code: 4006825660562
Einhell Accessory



E-Case Tasche
System Carrying Case
Item No.: 4540036
Bar Code: 4006825677966
Einhell Accessory



E-Case S-F
System Carrying Case
Item No.: 4540011
Bar Code: 4006825653991
Einhell Accessory



E-Case M
System Carrying Case
Item No.: 4540021
Bar Code: 4006825667721
Einhell Accessory



E-Case Werkzeugkiste
System Carrying Case
Item No.: 4540037
Bar Code: 4006825677973
Einhell Accessory



5,2 Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 5-8Ah MULTI
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



3,0 Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



PXC+ 18V 4,0Ah
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



PXC 18V 3,0Ah
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2,0 Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



4,0 Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



4-6 Ah Multi-Ah Power X-Change
Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210



PXC+ 18V 3,0Ah SEALED
Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



PXC+ 18V 4,0Ah SEALED
Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



18V 4Ah PXC Plus Twinpack
Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



18V 3Ah PXC Plus Twinpack
Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
C1
Battery
Item No.: 4511489
Bar Code: 4006825638578



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



Power X-Boostcharger 8A
Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



18V 4,0Ah PXC Starter Kit C1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory

Battery-Running-Times

One Battery for All		 sawing ¹ (pieces)
1.5 Ah		60
2.0 Ah		80
2.5 Ah		100
3.0 Ah		140
4.0 Ah		160
5.2 Ah		218
6.0 Ah		280
8.0 Ah		320

Test setup:

1) softwood - round soft wood Ø 50 mm