




DOR 920 LCD OIL FILLED RADIATOR WITH LCD

Quick Set-Up Guide

OPERATION BY TEMPERATURE CONTROL

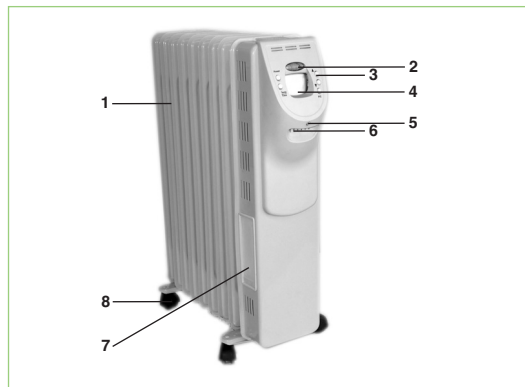

- 1 Heating ribs
- 2 Control lamp
- 3 Indicator panel
- 4 LCD display
- 5 Temperature sensor
- 6 Recessed grip
- 7 Storage compartment for mains lead
- 8 Castors

- Read safety warnings prior to use
- Affix Castors to radiator with fixings provided before operation
- Switch the radiator on at the mains
- Push the Power Button once for 2 bar setting or twice for 1 bar setting
- The present room temperature will now be displayed
- Push the temp/time button twice
- Use the up & down buttons to reach the required room temperature
- The radiator will now set automatically to switch on/off when the room temperature increases/decreases

OPERATION BY TIMER CONTROL

- Switch the radiator on at the mains
- Push the power button once for the two bar setting or twice for the bar setting
- The present room temperature will be displayed
- Push temp/time button once
- Use the up/down buttons to reach the required room temperature
- Whilst the thermometer icon is still flashing on the LCD display, push the temp/time button once
- This will bring up the auto on off setting option
- Use the up/down buttons to set the amount of hours in use before the radiator switches itself off. Wait for the number to stop flashing
- Push the temp/time button again
- This will bring up the auto on setting option
- Use the up/down buttons to set the amount of hours to wait before the radiator switches on
- Once the number has stopped flashing the settings are stored

**PLEASE DO NOT PRESS ANY OTHER BUTTON AFTER THE ABOVE ACTIONS
AS THIS WILL CANCEL ALL OF THE SETTINGS
PLEASE NOTE THAT THE PROGRAMMES WILL NEED TO RE-ENTERED FOR
EACH USE**

HELPLINE No. UK / N.IRELAND 0151 649 1500 REP. IRELAND HELPLINE NO 189 094 6244
Model Number: 3337