



18V CORDLESS

 
# BLUETOOTH RADIO

## INSTRUCTION MANUAL


### SPECIFICATIONS

Input:	18V
AM Frequency:	522-1620 KHz
FM Frequency:	87.5-108 MHz
Power Consumption:	15W
Speaker Output:	10W
Weight:	0.89kg


[ozito.com.au](http://ozito.com.au)

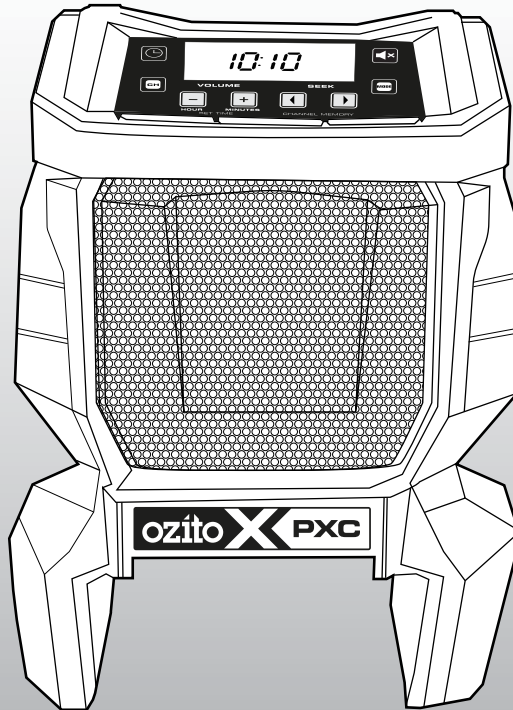

### STANDARD EQUIPMENT

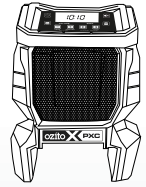 

Cordless Bluetooth Radio

 

2 X AAA Batteries

**5 YEAR**  
REPLACEMENT WARRANTY

**PXBRDS-018**

## WARRANTY

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

**Australia 1800 069 486**  
**New Zealand 0508 069 486**

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

### WARNING

The following actions will result in the warranty being void.

- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you at law.

Our goods come with guarantees that cannot be excluded at law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Generally you will be responsible for all costs associated with a claim under this warranty, however, where you have suffered any additional direct loss as a result of a defective product you may be able to claim such expenses by contacting our customer service helpline above.

 
### 5 YEAR REPLACEMENT WARRANTY

Your Product is guaranteed for a period of 60 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. If a product is defective it will be replaced in accordance with the terms of this warranty. **Lithium Ion batteries and chargers are covered by a 36 month warranty** and are excluded from the warranty extension. Warranty excludes consumable parts.

# KNOW YOUR PRODUCT

## CORDLESS BLUETOOTH RADIO

1. On/Off Switch
2. Control Panel
3. LCD Display Screen
4. Antenna (not shown)
5. Carry Handle
6. Speaker

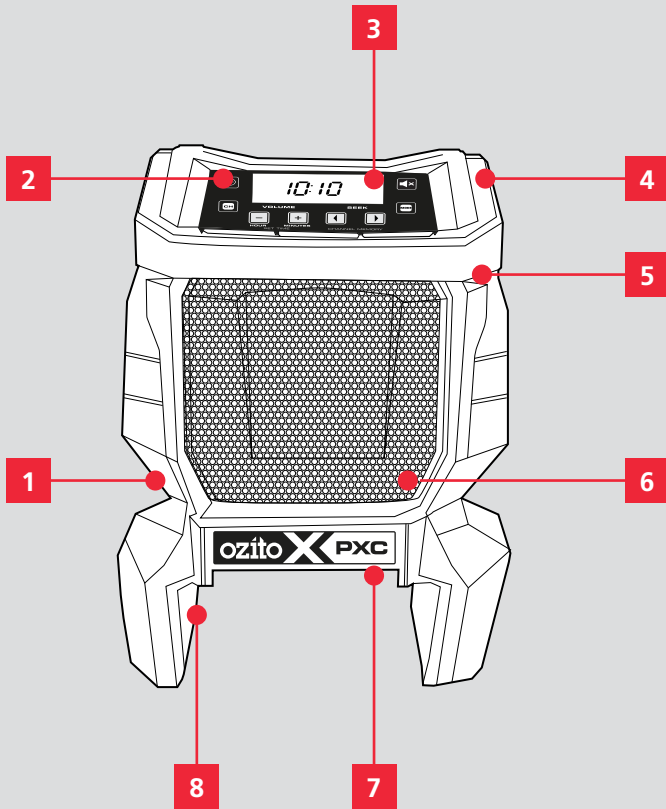

7. Battery Seating
8. AAA Battery Compartment
9. 2 x AAA Batteries
10. Strap for Smartphone (not shown)

## ACCESSORIES



### Note:

The AAA batteries are used for clock and channel memory only. An 18V PXC Battery is required for use of the main radio functions.

## BATTERY & CHARGER

This tool is compatible with all batteries & chargers from the Ozito PXC range.

### ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.

 


# SETUP & PREPARATION

## 1. POWERING THE DEVICE

### Installing the 2 X AAA Batteries (for clock and memory function)


1. AAA Batteries sit in a compartment at the base of radio housing. AAA batteries must be installed whilst there is no 18V battery pack fitted.

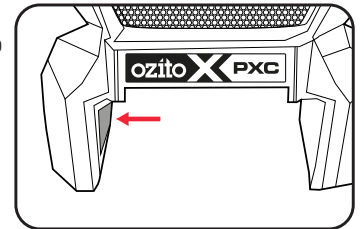

### Note:


Must be installed whilst there is no 18V battery pack fitted.

 2. Open AAA battery compartment housing.
3. Install AAA batteries.

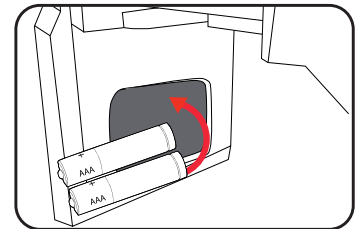


### Installing the 18V Battery Pack

 1. Holding the radio housing, slide the battery into the base of the radio until it clicks into place.

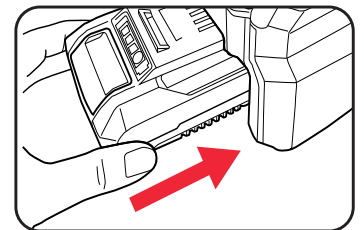


### Removing the Battery Pack

 1. Press down on the battery release button.

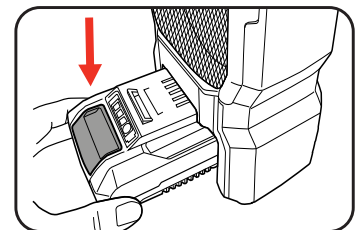

 2. Holding the radio housing, slide the battery pack out.

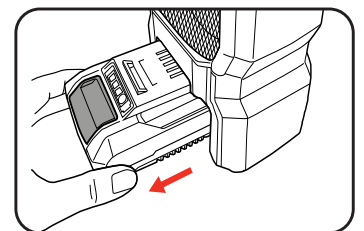

**5 YEAR**  
REPLACEMENT WARRANTY


# OPERATION
 
## 2. CONNECTING AUDIO DEVICES


### Connecting the Bluetooth to your Smartphone

The radio will automatically go into Bluetooth pairing mode when Bluetooth mode is selected.


1. Select the Bluetooth pairing mode.

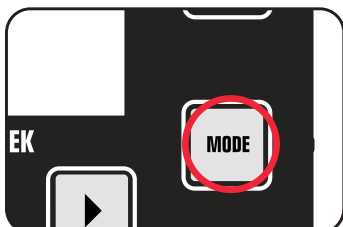

 2. The Bluetooth sign will flash when Bluetooth mode is selected.

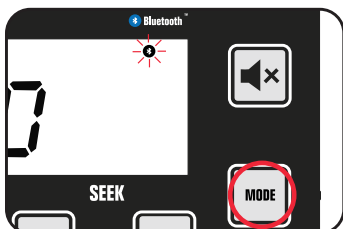

 3. Turn on Bluetooth functionality on your media device and search for the 'PXC Cordless Radio' to connect to the radio.

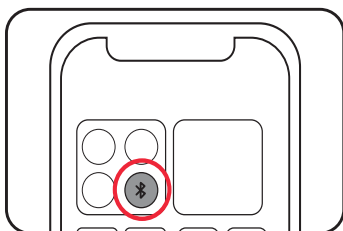


#### Note:

Only 1 device can be paired via Bluetooth at any time. Turn off Bluetooth on the first connected device to pair a new device with the speaker.


## 3. CONTROLS

### On/Off Switch

 1. To turn the radio on, flick the on/off switch up and display will illuminate.

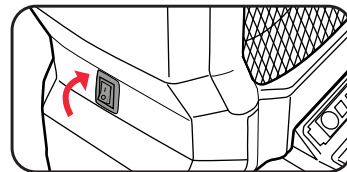

 2. To turn off, flick the on/off switch down.

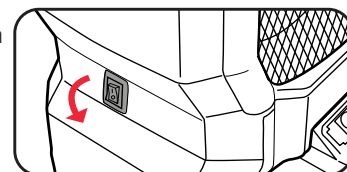


#### Note:

The time will still be shown on the LCD display even when radio is switched off if the AAA batteries are inserted


### Volume

 1. To increase the volume, press the Volume + button until desired volume is reached.

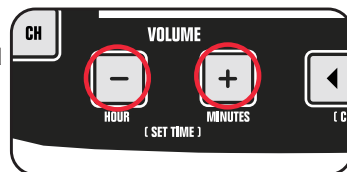

2. To decrease the volume, press the Volume - button until desired volume is reached.

 3. To mute the sound, press Mute button

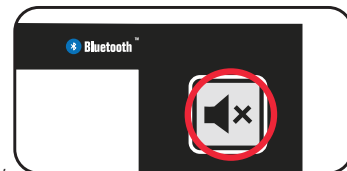


4. To return sound to previous volume, press Mute button again or any other button on the display panel

### Mode and Tuning

 1. To alternate between AM or FM frequencies, press the Mode button.




2. To find a station, scroll through a frequency by pressing the Seek buttons.

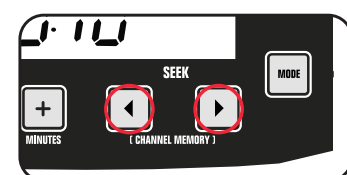

## 4. SETTING THE TIME

 1. Turn the radio off.

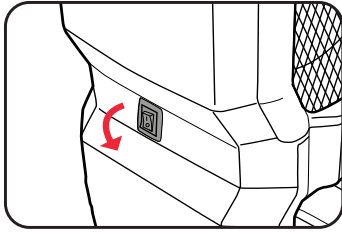

**Note:**

For the time to be saved the AAA batteries must be inserted prior to setting the time.

 
2. Press and hold the Clock button until the time starts flashing on the LCD display screen.




3. Use the Hour (or Volume -) button to change the hour.



4. Use the Minutes (or Volume +) button to change the minutes.

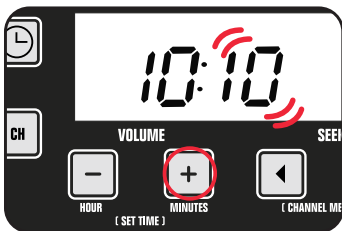

 5. Once desired time is reached, press the Clock button again to save.

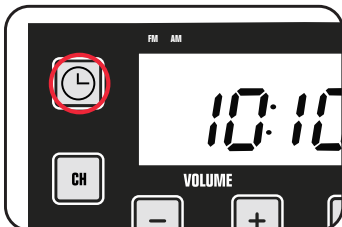

## 5. PROGRAMMING

### Setting up Favourite Stations

You can program this product to remember up to ten radio stations on both the AM and FM modes using the Channel memory system.

1. Turn the radio on,



2. Press the Channel button once to open the first memory setting - Mem 1.

3. Using the Seek buttons, find a radio station you would like to save.



4. Press and hold the Channel button until the memory number flashes.



5. Press the Channel button again to save the radio station as this memory number.

6. To save the next station, press Channel button once until next memory number shows on LCD display screen.



7. Using the Seek buttons, find the next radio station to save.

8. Press and hold the Channel button until the memory number flashes. Press Channel button again to save this station.



**Note:**

Up to 10 radio stations can be saved on both the AM and FM modes. Repeat steps 6 to 8 as necessary to program more stations to the radio's memory.

9. After programming stations to memory, press the Channel button to search through the saved radio stations.

**Note:**

The radio is able to automatically search and save radio stations to memory. Press and hold the Mode button.

# TROUBLESHOOTING





## LED lights do not illuminate on charger

- Check the charging adaptor is securely plugged into the wall outlet.
- Check the battery is firmly connected to the charging cradle.
- Check that the charging jack is securely connected to the charging cradle.

## The battery has a short run time

Ensure the battery is properly charged. It will take 4-5 charging cycles before the battery reaches optimum charge and run time.

# DESCRIPTION OF SYMBOLS

V	Volts	Hz	Hertz
	Direct Current	W	Watts
KHz	Kilohertz	MHz	Megahertz
	Regulatory Compliance Mark (RCM)	Ah	Amp hour
	Warning		Read instruction manual

# MAINTENANCE



**WARNING! ENSURE THE TOOL IS SWITCHED OFF AND THE BATTERY IS REMOVED BEFORE PERFORMING ANY OF THE FOLLOWING TASKS.**

## Cleaning

- Keep the ventilation slots of the tool clean at all times to ensure efficient operation.
- After each use, blow air through the tool housing to ensure it is free from all dust, dirt, etc. Build up of dust or dirt particles may cause the tool to overheat and shorten the life of the tool.
- If the housing of the tool requires cleaning, do not use solvents. Use of a cloth only is recommended.
- Never allow any liquid to get inside the tool, never immerse any part of the tool into liquid.
- Keep ventilation slots of the radio clean at all times and prevent anything from entering.
- If the housing of the radio requires cleaning, do not use solvents. Use of a cloth only is recommended.
- Blow out the ventilation slots with compressed air periodically .



**WARNING! BEFORE CLEANING OR CARRYING OUT ANY MAINTENANCE PROCEDURE, ENSURE THAT THE BATTERIES HAVE BEEN REMOVED.**

## Storage

When not in use, the tool should be stored in a dry, frost free location, keep out of children's reach.

**Note:** Be careful not to bend the end of the magazine. If this occurs the unit will be inoperable.

## Short Battery Runtime

Ensure the battery is properly charged. It will take 4-5 charging cycles before the battery reaches optimum charge and run time.

# CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

# SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse.

For further information, or any parts not listed here, visit [www.ozito.com.au](http://www.ozito.com.au) or contact Ozito Customer Service:

Australia 1800 069 486

New Zealand 0508 069 486

E-mail: [enquiries@ozito.com.au](mailto:enquiries@ozito.com.au)

# ELECTRICAL SAFETY



**WARNING!** When using electric tools basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

- Read the whole manual carefully and make sure you know how to switch the tool off in an emergency, before operating the tool. Save these instructions and other documents supplied with this tool for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is compatible and only to be used with all batteries & chargers from the Ozito PXC range. Refer to the PXC battery and charger manuals for information regarding charging, use and storage.

- **WARNING!** Always remove the battery from the tool:
  - when the batteries are to be charged,
  - when the tool is left unattended,
  - when the tool is being checked, cleaned, or having maintenance work done,
  - when the tool is to be stored,
  - or if the tool vibrates abnormally.
- Do not combine different types of batteries or new and used batteries.
- Do not use modified or damaged batteries.

# GENERAL POWER TOOL SAFETY WARNINGS



**WARNING!** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

## 1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

## 2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

## 3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and**

**ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

## 4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

## 5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
- e) **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.
- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

## 6) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
- b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

# RADIO SAFETY WARNINGS



**WARNING!** Keep the radio housing and handle dry, clean and free from grease and oil. Always use a clean cloth cleaning. Never use brake fluid, gasoline, petroleum-based products, or any strong solvents to clean your radio.

Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.

- Do not use radio near water.
- Do not install near any heat sources such as radiators, heat registers or other products (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- To reduce the risk of personal injury and electric shock, do not expose to water or rain.
- Do not use the radio or listen to music or other audio programs while operating machinery. Doing so may cause distractions that could result in personal injury.

- This radio is capable of producing sound levels that can be dangerous to long-term hearing. Listening to music at a high volume for any period of time may cause the listener noise-induced hearing loss. The higher the volume, the less time required before your hearing may be affected.

- This appliance is not intended for use by young or infirm persons unless supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.