
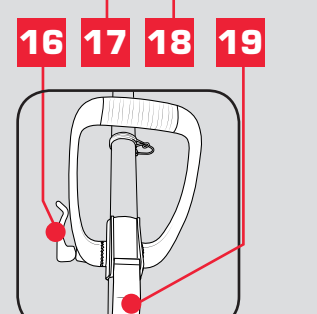
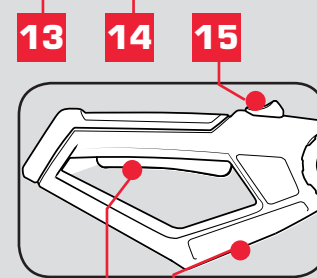
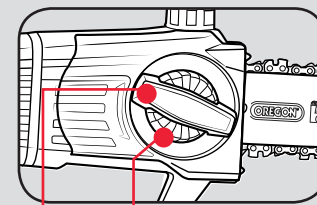


KNOW YOUR PRODUCT

CORDLESS POLE PRUNER


- Chain
- Guide Bar
- Oil Cap
- Side Cap
- Pivoting Pruner Head Release
- Telescopic Tube Lock
- Main Tube
- Auxiliary Handle
- Shoulder Strap Holder
- Assembly Nut
- Pivoting Handle Release
- Rear Handle
- Chain Cover Lock
- Chain Tension Adjustment Dial
- Switch Lock
- Auxiliary Handle Lever
- Trigger Switch
- Battery Seating
- Mounting Attachment Lever

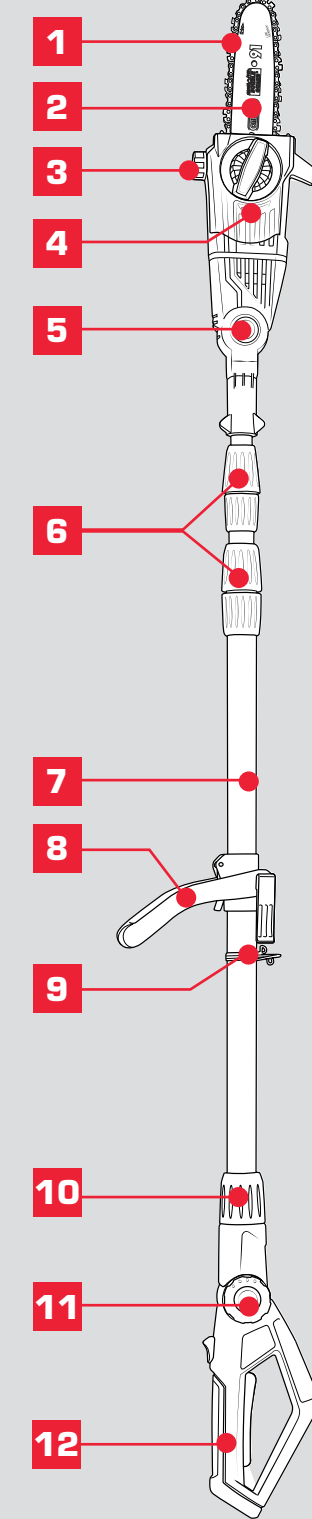

This tool is compatible with all battery and chargers from the Ozito Power X Change Range. For example: Batteries PXBP-200U (2Ah / 18V) & PXBP-400U (4Ah / 18V). Charger: PXCg-030U (18V).

ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.

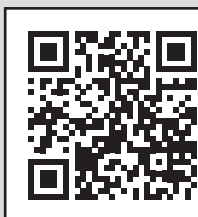


SETUP & PREPARATION

1. ASSEMBLY


CAUTION: ENSURE THE TOOL IS OFF & THE BATTERY REMOVED BEFORE PERFORMING ANY OF THE FOLLOWING OPERATIONS.

Fitting Rear Handle

1. Push the rear handle fully onto tube aligning the internal prongs.

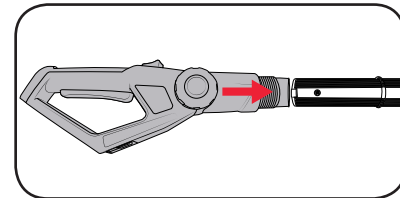


2. Screw tight with the assembly nut.

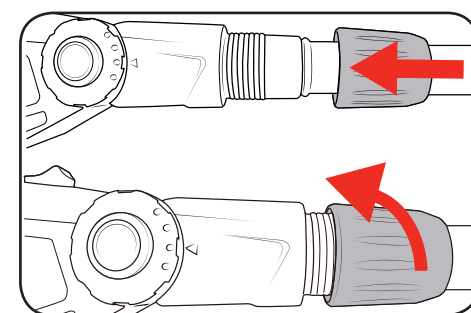


Fitting Auxiliary Handle


1. Place the Auxiliary Handle onto the mounting attachment.

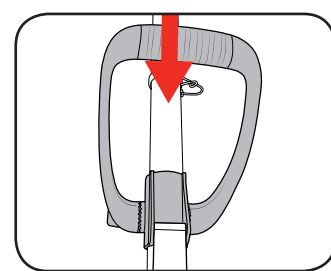

2. Pass the bolt through the auxiliary handle and screw the lever to the end of the bolt.

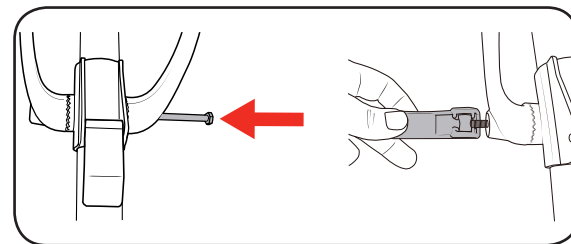


3. Select the most comfortable position and close the lever to lock the auxiliary handle in position.

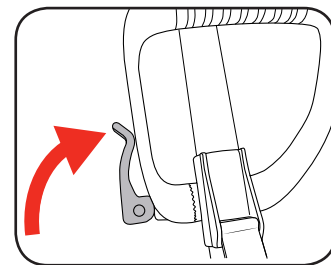


Fitting Pruner Head

1. Align the pruner head and the motor head so the arrows on both coincide.

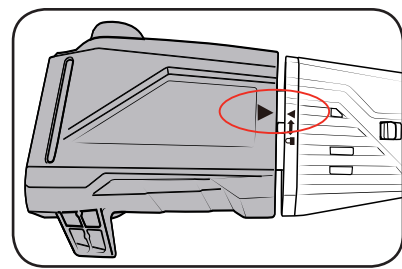


2. (a) Press the pruner head against the motor head. This will cause the lock button to be pushed to the right. (b) Turn the pruner head clockwise. The pruner head will lock onto the motor head and is then secured in place.

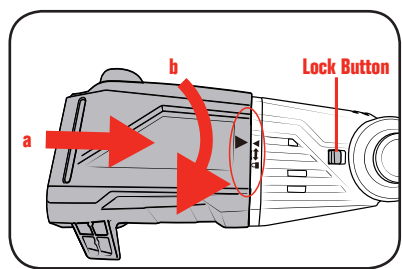

Note: The Lock Button will "CLICK" back to the left (original position) when the pruner head is correctly secured in place.


Fitting Guide Bar & Chain

1. Loosen the chain cover lock and remove the side cover.

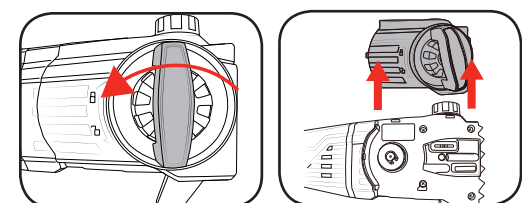


CAUTION: THE CHAIN HAS SHARP EDGES. FOR YOUR OWN SAFETY, PLEASE WEAR WORK GLOVES.

2. Place the chain in the groove of the guide bar as shown. Refer to the image printed on the guide bar that indicates the direction that the chain should face.

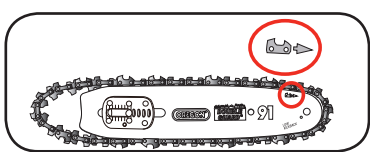


IMPORTANT: IF THE CHAIN IS INSTALLED BACKWARDS (CHAIN CUTTERS ARE FACING IN THE OPPOSITE DIRECTION OF ROTATION) THE POLE PRUNER WILL VIBRATE EXCESSIVELY AND NOT CUT.

3. Place onto the mount, ensuring that the chain sits around the chain sprocket.

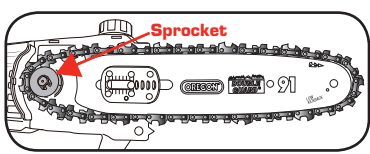

4. Re-mount and finger-tighten the side cover with the chain cover lock.

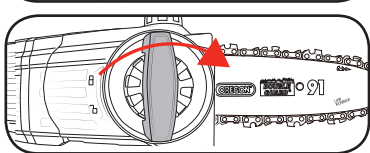


Note: Only tighten the chain cover locking knob securely once the chain tension has been adjusted (see: Tensioning the chain.)

2. TENSIONING THE CHAIN


CAUTION: THE CHAIN HAS SHARP EDGES. FOR YOUR OWN SAFETY, PLEASE WEAR WORK GLOVES.

1. Loosen the chain cover lock. Do not remove the side cover.

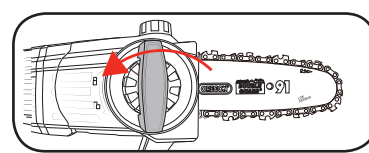


CAUTION: IF YOU TRY TO ROTATE THE CHAIN TENSIONING ADJUSTMENT DIAL WHILST THE CHAIN COVER LOCK IS TIGHT, IT WILL RESULT IN THE CHAIN NOT LOOSENING AND POSSIBLE DAMAGE TO THE MECHANISM.

2. Adjust the chain tension with the chain tensioning adjustment dial. Turning the dial CLOCKWISE increases the chain tension, turning it COUNTER-CLOCKWISE decreases the chain tension.

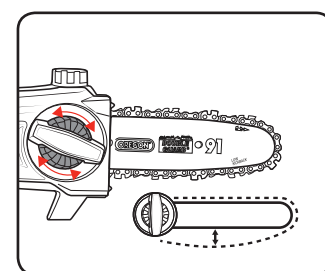


For the correct chain tension, firmly pull up on the chain at the middle of the top of the exposed guide bar. When the chain is pulled up to its highest point, the bottom tip of the links should only just stay in the track [middle of the guide bar]

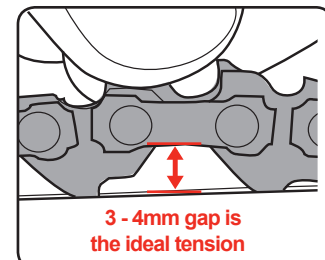

3 - 4mm gap is the ideal tension

3. After the chain has been accurately tensioned, lock the guide bar in place with the chain cover locking knob.


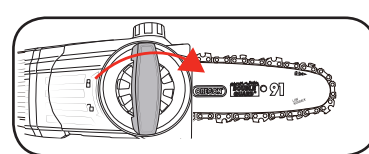


Note: Proper tension of the chain is extremely important and must be checked before starting, as well as during any cutting operation. Taking the time to make adjustments to the chain will result in improved cutting performance and prolonged chain life.


3. OIL

IMPORTANT: ONLY USE OIL THAT IS EXPRESSLY LABELLED "CHAIN BAR OIL".


1. Remove the chain bar oil cap.
2. Fill the tank with chain bar oil. The capacity of the chain oil tank is 125ml. Do not over fill.

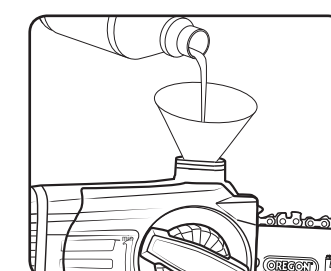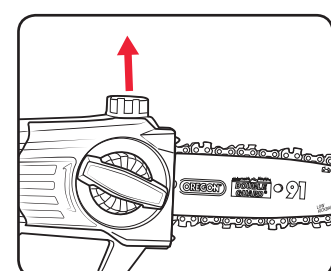

3. Refit cap and clean any oil spillage.

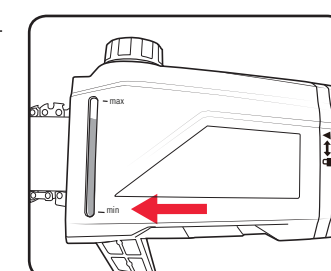


4. Always fill oil tank when the oil level is below the minimum mark on the oil level window.

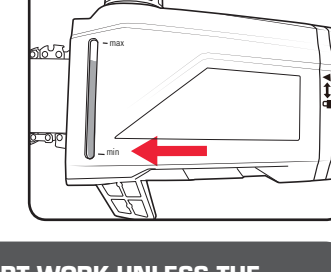

WARNING: NEVER START WORK UNLESS THE CHAIN AND BAR ARE LUBRICATED

4. To check the lubricating system, switch on the pole pruner and hold it with the guide bar and chain above some light coloured paper such as newspaper. A steadily increasing stain caused by oil spray shows the lubricating system is working.

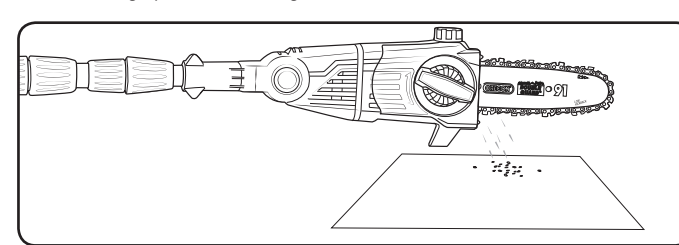


Note: Chain bar oil may leak if the tool is left for long periods. This is normal. If the tool is to be left unused for an extended time, drain the oil from the tool. Refill before use.

4. PREPARATION


Adjusting the telescope length

1. To unlock the telescopic tube lock, twist it in a clockwise direction while pointing the chain away from the user.

Note: The locking and unlocking directions are indicated on the locking collar.

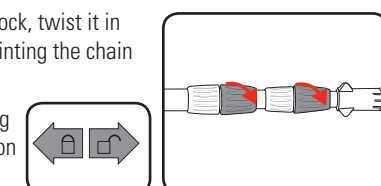


2. Pull out the telescopic tubes to suit the required working height.

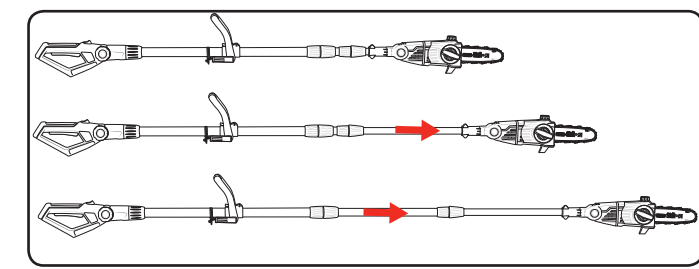

3. To lock in the desired position, twist the telescopic tube lock in a counter-clockwise direction.


Adjusting the Rear Handle

1. Press the two pivoting handle releases, one each side and adjust the angle of the handle up or down to any of 4 positions.

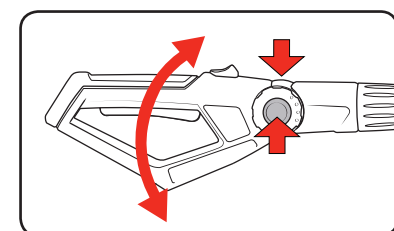


Adjusting the Auxiliary Handle

1. (a) Open the handle lever and set the required (b) tilt of the auxiliary handle, close to lock into position.

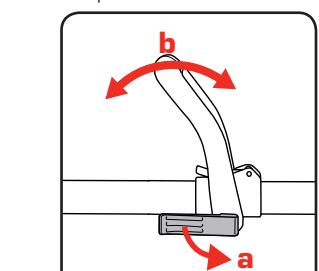


2. (a) Open the mounting bracket lever and (b) slide the auxiliary handle into the required position, close to lock into position.

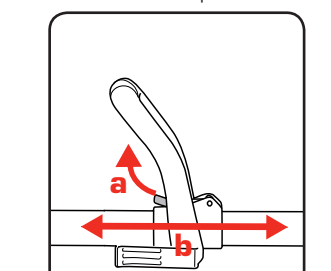

Adjusting the Pruner Head

Pivoting the Pruner Head


1. Press the two pivoting head releases, one each side and adjust the angle of the pruner head up or down to any of 7 positions.

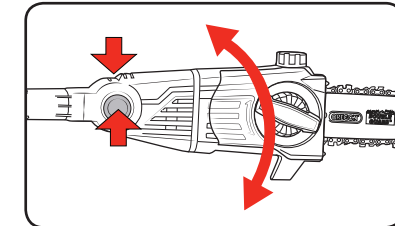


Adjusting the Pruner Head 90°

1. Pull the lock button to the right then rotate the pruner head 90° clockwise

Note: Keep the pruner head pressed against the motor head when rotating.

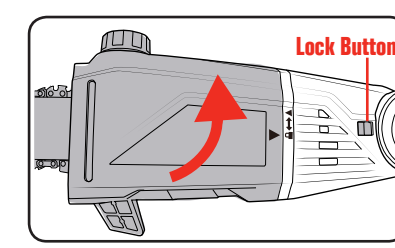


2. The pruner head will lock onto the motor head and is then secured in place.

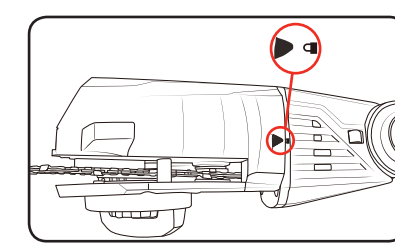


Note: The Lock Button will "CLICK" back to the left (original position) when the pruner head is correctly secured in place.

Attaching the Shoulder Strap

1. Fasten to the shoulder strap holder on the main tube.

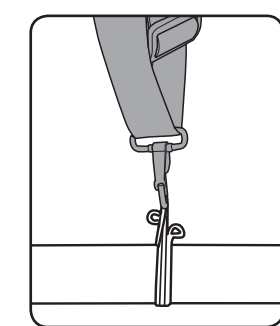


2. Wear the shoulder strap so that it lies over the left shoulder.

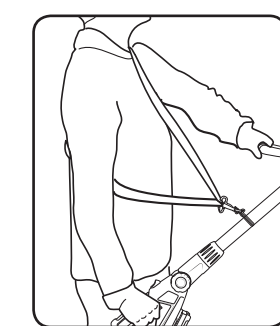


5. INSERTING & REMOVING THE BATTERY

Installing a Battery into the Pole Pruner

1. Align the ribs of the battery with the recess below the handle

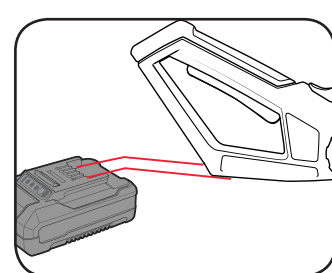


2. Slide the battery in so that it clicks into place.

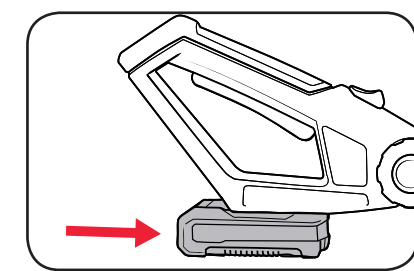


Removing a Battery from the Pole Pruner

1. Press and hold the battery release tab to release the battery.

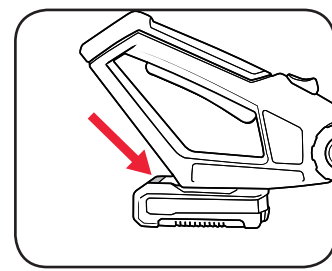

2. Slide the battery out.

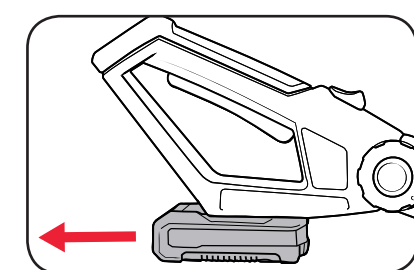

5 YEAR
REPLACEMENT WARRANTY