



DIGITAL RADIO

INSTRUCTION MANUAL

SPECIFICATIONS

Input:	18V
DAB+ Frequency:	174 - 240 MHz
FM Frequency:	87.5-108 MHz
Speaker Output:	2x10W RMS
IP rating:	IP65
Weight:	3.1kg

ozito.com.au


STANDARD EQUIPMENT



Cordless Digital Radio



AC Adapter

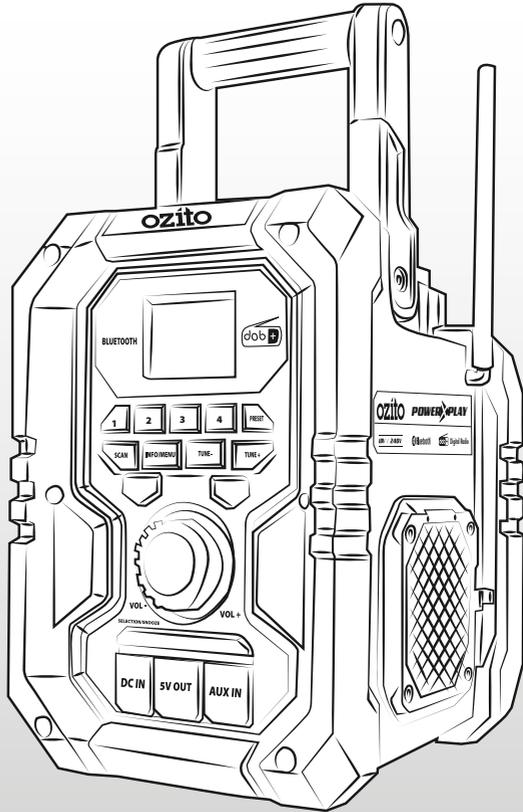

5 YEAR
REPLACEMENT WARRANTY

PDRS-018

GENERAL MACHINE SAFETY WARNINGS

GENERAL MACHINE SAFETY WARNINGS



WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.

- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
 - d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.
 - e) **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
 - f) **Do not expose a battery pack or tool to fire or excessive temperature.** Exposure to fire or temperature above 130 °C may cause explosion.
 - g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.
- ## 6) Service
- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.
 - b) **Never service damaged battery packs.** Service of battery packs should only be performed by the manufacturer or authorized service providers.

ELECTRICAL SAFETY



WARNING! When using electric tools basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

- Read the whole manual carefully and make sure you know how to switch the tool off in an emergency, before operating the tool. Save these instructions and other documents supplied with this tool for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is compatible and only to be used with all batteries & chargers from the Ozito PXC range. Refer to the PXC battery and charger manuals for information regarding charging use and storage.
- **WARNING!** Always remove the battery from the tool:
 - when the batteries are to be charged,
 - when the tool is left unattended,
 - when the tool is being checked, cleaned, or having maintenance work done,
 - when the tool is to be stored, or if the tool vibrates abnormally.
- Do not combine different types of batteries or new and used batteries.
- Do not use modified or damaged batteries.

DIGITAL RADIO SAFETY WARNINGS



WARNING! Keep the radio housing and handle dry, clean and free from grease and oil.

Always use a clean cloth cleaning. Never use brake fluid, gasoline, petroleum-based products, or any strong solvents to clean your radio.

Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.

- Do not use submerge radio into water.
- Do not install near any heat sources such as radiators, heat registers or other products (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- To reduce the risk of personal injury and electric shock, do not expose to water or rain.
- **Do not use the radio or listen to music or other audio programs while operating machinery.** Doing so may cause distractions that could result in personal injury.
- **This radio is capable of producing sound levels that can be dangerous to long-term hearing.** Listening to music at a high volume for any period of time may cause the listener noise-induced hearing loss. The higher the volume, the less time required before your hearing may be affected.

KNOW YOUR PRODUCT

CORDLESS DIGITAL RADIO

1. Battery Compartment Latch
2. Carry Handle
3. Battery Compartment
4. Antenna
5. Speaker
6. Preset Button
7. TUNE (+) Button
8. TUNE (-) Button
9. Mode Button
10. Control Dial
11. AUX-In
12. USB Charging port (5V/1A)
13. DC In
14. On/Off/Standby Button ()
15. Info/Menu/Return Button
16. Scan button
17. Preset Favourites Buttons
18. LCD Panel
19. AC Adaptor

LCD DISPLAY SYMBOLS

- | | | | |
|---|------------------|--|---------------------|
|  | Signal Strength |  | Adaptor Plugged In |
|  | Battery Level |  | Volume Control |
|  | Preset Favourite |  | Sleep Function Set |
|  | Power |  | Stereo Sound |
|  | 11:36 Alarm On |  | USB-In Mode playing |
|  | Off Alarm Off | | |

BATTERY & CHARGER

This tool is compatible with all batteries & chargers from the Ozito PXC range.


5 YEAR
REPLACEMENT WARRANTY

ONLINE MANUAL


Scan this QR Code with your mobile device to take you to the online manual.



KNOW YOUR PRODUCT

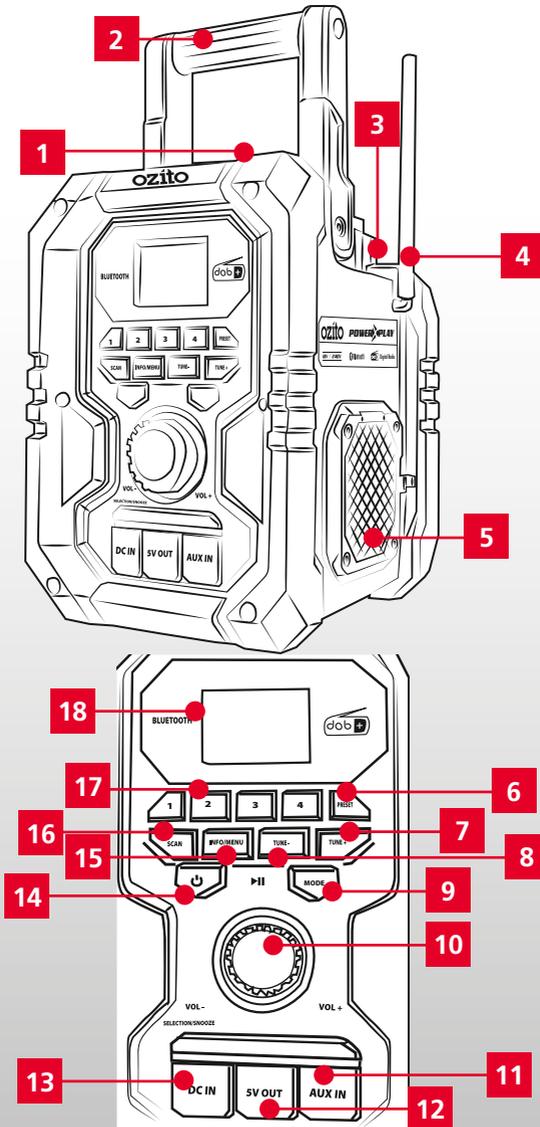

ACCESSORIES

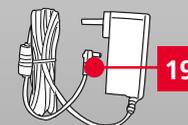

CONTENTS

SPECIFICATIONS	1
GENERAL MACHINE SAFETY WARNINGS	2-3
ELECTRICAL SAFETY	4
DIGITAL RADIO SAFETY WARNINGS	5
KNOW YOUR PRODUCT	6-7
CONTENTS	8
SETUP & PREPARATION	9-10
Fitting the Power Sources	9
Installing the 18V Battery Pack	9
Using the AC Adaptor	10
OPERATION	11-22
Controls	11-15
Power On, Standby Mode, Power Off	11
Switching Modes, Tuning	12
Preset Favourite Buttons	13
Info / Menu / Return Button	14
Scan Button	15
Control Dial	15
Usage	16
Bluetooth Mode	16
USB Mode	17
AUX Mode	17
USB Charging Port	17
Setup (Available in DAB+ & FM Mode)	18-19
DAB+ : Full Scan / Manual Time / DRC / Prune	18
FM : Auto Scan / Scan Setting / Audio Setting	19
Preset (DAB+ / FM)	19
System Settings	20-22
Time : Manual Time Setup / Auto Update	20
Set 12/24 Hour / Set Date Format	20
Alarm / Language / Backlight / Sleep / Inactive Standby	21
Equalizer / Clock / Factory Reset / SW Version	22
DESCRIPTION OF SYMBOLS	23
MAINTENANCE	24
CARING FOR THE ENVIRONMENT	24
SPARE PARTS	25
TROUBLESHOOTING	25
WARRANTY	26

SETUP & PREPARATION

1. FITTING THE POWER SOURCES




WARNING! TOOL IS COMPATIBLE WITH MULTIPLE POWER SOURCES, SUPPLYING TOOL WITH ONE POWER SOURCE AT ONCE. ONLY HAVE ONE POWER SOURCE CONNECTED DURING OPERATION.




WARNING! ALL COVERS HAVE TO BE CLOSED FOR THE BEST WATER RESISTANT (IP65) PRACTICE. NEVER SUBMERGE RADIO INTO WATER.

Installing the 18V Battery Pack


1. Unlock the battery compartment latch.

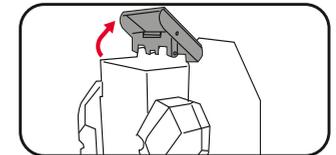


2. Open the battery compartment cover.

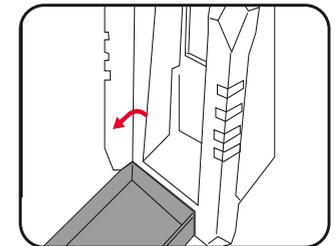

3. Slide the battery into the battery slot until it clicks into place.

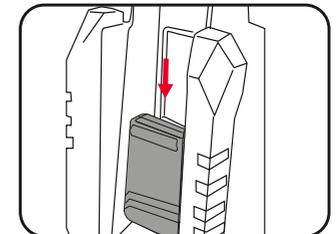

4. To remove the battery, hold down the battery release button (a) and slide the battery out (b).

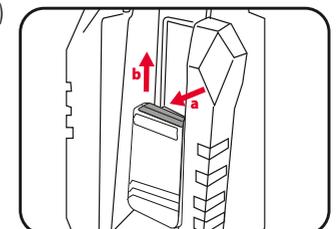


5. Close the battery compartment cover.

6. Lock the battery compartment latch.

SETUP & PREPARATION (cont.)

Using the AC Adaptor

1. Plug provided AC adaptor into 240V socket, flip the DC In cover (a) and connect DC IN Jack (b).

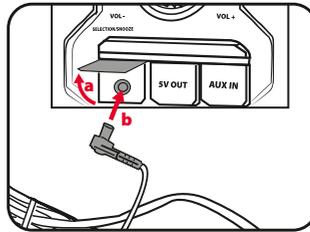


OPERATION

2. CONTROLS


Power On

Press the () button to turn on the radio (a) and the display will light up (b).

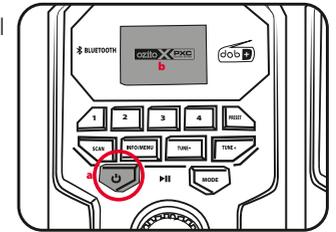


Standby Mode

When radio is on, press () button to enter standby mode.

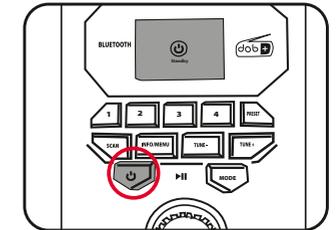

Power Off

When radio is on, press and hold () button to turn off.

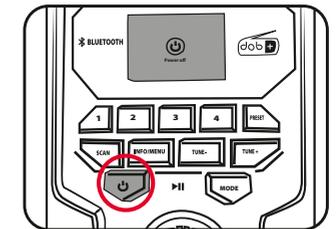


OPERATION (cont.)

Switching Modes

Press mode button to select desired mode (DAB+/FM/Bluetooth/AUX/USB).

Note: Control dial can be used to select mode.

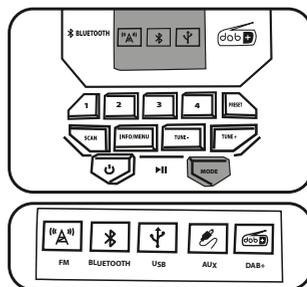

Tuning



DAB+:

Press TUNE+/TUNE- or press and turn CONTROL DIAL to select radio stations from station list.

FM:


Press TUNE+/TUNE- button or press and turn CONTROL DIAL to tune by 0.05MHz.

Note: Press and hold TUNE+/TUNE- button to tune to next available station.

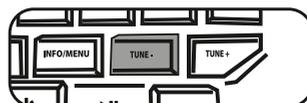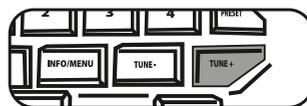

Bluetooth/USB:


Press TUNE+/TUNE- button to play next/previous song.

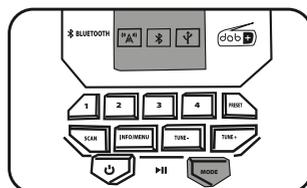

Preset Favourite Buttons

DAB+/FM:

Press and hold buttons (1-4) to save favourite stations.

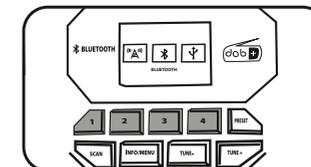


Preset Button: Save & Access Station Presets

DAB+/FM:

Press preset button briefly to select a saved station. Press and hold preset button to save current station.


Note: Can preset up to 30 stations.

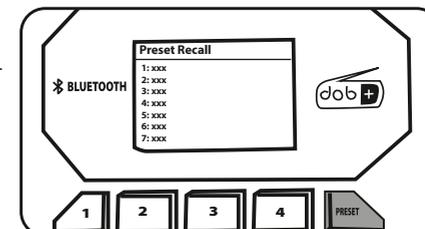

OPERATION (cont.)

Info/Menu/Return Button

1. In DAB+ or FM mode, press briefly to view information.

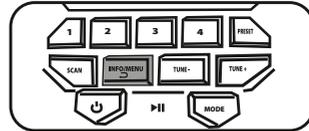


2. Press and hold to open the main menu.

3. Press once to go back to the previous screen.

Scan Button: Auto Station Search

1. DAB+ mode:


Press briefly to start a full scan for available stations.

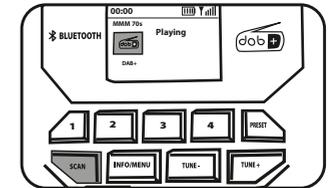

2. FM mode:

Press briefly to skip to the next available station.

Press and hold to start a full scan; the first 30 stations found will be saved to the station list.

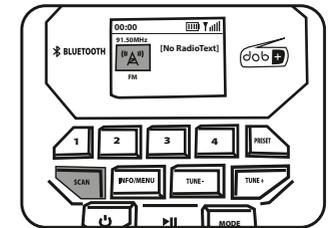

Note: Do not press other buttons during scanning as it will cancel the scan.


Note: Preset stations will be cleared after scanning.

Control Dial

The control dial can be used for the following functions.

1. Rotate to adjust volume/scroll through options.

Note: Turn dial clockwise to increase volume or move to next option. Turn dial counter-clockwise to decrease volume or move to previous option.

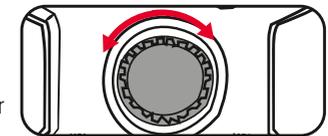


2. Press briefly to:

Confirm selections.

Pause/resume playback (in Bluetooth/USB modes).

Activate Snooze when the alarm is on.

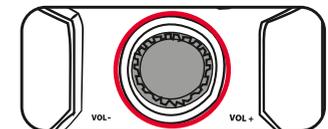

OPERATION (cont.)

3. USAGE

Bluetooth Mode

Pairing your smart device with Bluetooth


1. Select Bluetooth mode by pressing mode button.

Note: You can also use the control dial to browse/select modes.

2. Go to the Bluetooth settings on your smart device. Select "PXC Digital Radio PDRS-018" from the list of available devices.

3. Once connected, name of the smart device will appear on the radio display.

Note: Only 1 device can be paired via Bluetooth at any time. Disconnect paired device to allow a new device to be connected.

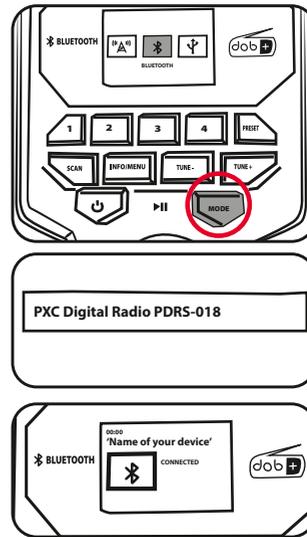

USB Mode

1. Unlock the battery compartment latch.
2. Open battery compartment cover.

3. Insert USB stick (MP3/WAV/APE/FLAC files) into USB port

4. Select USB mode by pressing mode button.

Note: Supports USB storage up to 64GB (FAT32 format)
Does not support SD card hub.

5. Close the battery compartment cover.
6. Lock the battery compartment latch.

AUX Mode

1. Flip the AUX In cover (a) and connect AUX Jack (b).





2. Select AUX mode by pressing mode button.

Note: Control music from your device. The radio works as a speaker.

USB Charging Port

1. Flip the 5V OUT cover (a) and plug in USB connector (b) to charge device.

Note: Charges device at 5V/1A. Only charges device when turned on.

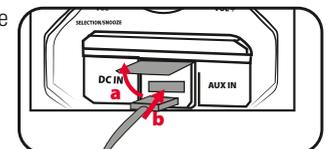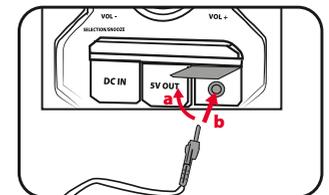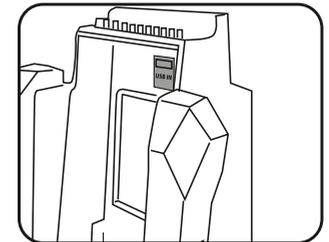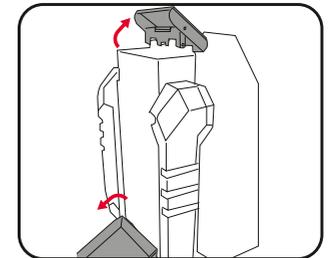


OPERATION (cont.)

Setup (Available in DAB+ and FM Mode)

Accessing the Setup Menu:

1. Press and hold the INFO/MENU button until the setup menu appears.

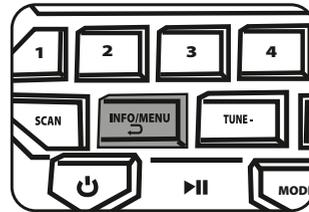

DAB+

Full Scan:

Automatically searches for available DAB+ stations.

Manual Tune:

Allows for manual tuning of a specific DAB+ station.

DRC – Dynamic Range Compression:

Processes audio to reduce volume of loud sounds or amplify quiet sounds.

Choose from:


- DRC Off – No Effect
- DRC Low – Light adjustment
- DRC High – Strong adjustment

Prune:

Removes invalid or unavailable DAB+ stations that have a "?".

Choose:

- Yes – Remove these stations
- No – Keep all stations

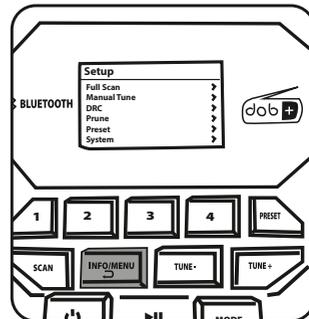

FM

Auto Scan:

Automatically searches for available FM stations.

Scan Setting:

Choose how many stations to display.

- All Stations – Includes stations with weak signals.
- Strong Stations Only – Filters out stations with weak signals.

Audio Setting:

Control how the audio is played.

- Stereo Allowed – Outputs stereo sound if available.
- Forced Mono – Outputs mono sound.


Preset (DAB+ / FM):

Preset Recall:

Browse your saved stations.

Preset Store:


- Save current station to a slot (1–30).
- Use the control dial to choose a slot (1–30), then press control dial to confirm.

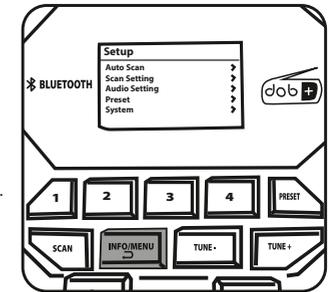

OPERATION (cont.)

System Settings

1. Press and hold INFO/MENU.

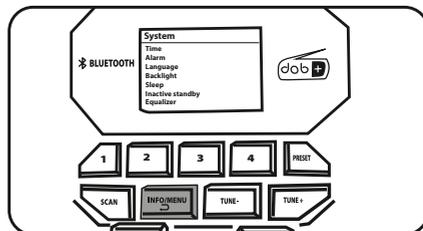

2. Scroll to System using the control dial. Press the control dial to enter.

Time:

Manual Time Setup:

- Go to Time > Set Time/Date.
- Set the Hour, Minute, Day, Month, Year using the dial.
- Press control dial to confirm each step.

Auto Update:

- Go to Time > Auto Update.

Choose a source:

- Update from Any
- Update from DAB
- Update from FM
- No update

Set 12/24 Hour:

- Go to Time > Set 12/24 hour.
- Choose between 12-hour or 24-hour clock display.

Set Date Format:

Choose your preferred format:

- MM-DD-YYYY
- DD-MM-YYYY

Alarm:

- Set up to 2 alarms.
- Choose for each alarm:

Alarm on/off

Frequency - Daily / Once / Weekdays / Weekends

Wake Up Time - Set your wake-up time

Source - Buzzer / FM / DAB+

Duration - 15–120 mins

Volume - Choose from 6–32

- Press the control dial once to Snooze (10 mins).
- Press () button to turn alarm off.

Language:

- Change the menu language.
- Choose from 28 supported languages.

Backlight:

- Timeout: Set how long the display stays lit.
Options are On/10/20/30/45/60/90/120/180
- On Level: Brightness during use – Low / Medium / High
- Dim Level: Brightness when idle – Low / Medium / High

Sleep:

- Automatically puts radio into standby mode after set time.
- Options - Off / 15 / 30 / 45 / 60 / 90 / 120 mins.

Inactive Standby:

- Puts radio into standby mode after no activity.
- Options - Off / 2 / 4 / 5 / 6 hours

Note: When radio is in standby mode, power will shut off in 2 hours. This won't take effect if alarm is set.

OPERATION (cont.)

Equaliser:

- Choose audio profile:

Normal

Rock

Pop

Jazz

Classical

My EQ

- My EQ Setup:

Manually adjust Treble and Bass between -7 to +7.

Clock Style:

Choose display styles between

- Classic Analog
- Normal Digital

Factory Reset:

- Resets all system settings and saved stations.
- Use only if facing major issues or poor signal.

SW Version:

View current system software version.

DESCRIPTION OF SYMBOLS

V	Volts	Hz	Hertz
— — —	Direct Current	W	Watts
IP65	Ingress Protection rating	MHz	Megahertz
	Regulatory Compliance Mark (RCM)	Ah	Amp hour
	Warning		Read instruction manual
~	Alternating Current		

MAINTENANCE



WARNING! ENSURE THE TOOL IS SWITCHED OFF AND THE BATTERY IS REMOVED BEFORE PERFORMING ANY OF THE FOLLOWING TASKS.

Cleaning

- Keep the ventilation slots of the tool clean at all times to ensure efficient operation.
- After each use, blow air through the tool housing to ensure it is free from all dust, dirt, etc. Build up of dust or dirt particles may cause the tool to overheat and shorten the life of the tool.
- If the housing of the tool requires cleaning, do not use solvents. Use of a cloth only is recommended.
- Never allow any liquid to get inside the tool, never immerse any part of the tool into liquid.
- Keep ventilation slots of the radio clean at all times and prevent anything from entering.
- If the housing of the radio requires cleaning, do not use solvents. Use of a cloth only is recommended.
- Blow out the ventilation slots with compressed air periodically .



WARNING! BEFORE CLEANING OR CARRYING OUT ANY MAINTENANCE PROCEDURE, ENSURE THAT THE BATTERIES HAVE BEEN REMOVED.

Storage

When not in use, the tool should be stored in a dry, frost free location, keep out of children's reach.

Note: Be careful not to bend the end of the magazine. If this occurs the unit will be inoperable.

CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse.

For further information, or any parts not listed here, visit www.ozito.com.au or contact Ozito Customer Service:

Australia 1800 069 486

New Zealand 0508 069 486

E-mail: enquiries@ozito.com.au

TROUBLESHOOTING

The battery has a short run time

Ensure the battery is properly charged. It will take 4-5 charging cycles before the battery reaches optimum charge and run time.

Radio has poor reception

Coverage Area:

Confirm that you are within a digital radio coverage area and that no service disruptions have been reported.

Rescan:

Perform a channel rescan to ensure your radio is searching for available stations.

Antenna:

Ensure the antenna is fully extended and try moving the radio around your home to see if the signal improves.

Electrical Devices interference:

Switch off or move devices like TVs, washing machines, LED lights, computers, and mobile phones to see if they affect the reception.

Factory Reset:

If the above attempts don't solve the problem, consider a factory reset, but this should be a last resort.

WARRANTY

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

Australia 1800 069 486

New Zealand 0508 069 486

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you at law.

Our goods come with guarantees that cannot be excluded at law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Generally you will be responsible for all costs associated with a claim under this warranty, however, where you have suffered any additional direct loss as a result of a defective product you may be able to claim such expenses by contacting our customer service helpline above.

5 YEAR REPLACEMENT WARRANTY

Your Product is guaranteed for a period of 60 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. If a product is defective it will be replaced in accordance with the terms of this warranty. **Lithium Ion batteries and chargers are covered by a 36 month warranty.** Warranty excludes consumable parts, for example: line & spool, shoulder strap and included accessories.

WARNING

The following actions will result in the warranty being void.

- Professional, Industrial or high frequency use.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.
- Professional, industrial or high frequency use.

OZITO Australia/New Zealand (Head Office) 25 Fox Drive,
Dandenong South, Victoria, 3175 Australia.

Setup Instructions (Available in DAB+ and FM Mode)

Accessing the Setup Menu

1. Press and hold the **INFO/MENU** button until the **Setup Menu** appears on the screen.
2. Turn the **Control Dial** to scroll and highlight **System**.
3. Press the **Control Dial** to enter the system settings.

You will now see several options. The available options differ slightly depending on whether you are in **DAB+** or **FM** mode.

DAB+ Mode Setup Options

- **Full Scan**
Automatically scans for all available DAB+ radio stations.

Use this to refresh your station list.

- **Manual Tune**
Allows you to manually enter a specific DAB+ frequency.

Useful if you're trying to find a hidden or local station.

- **DRC (Dynamic Range Compression)**
Adjusts volume levels to make quiet sounds louder and loud sounds softer.
Choose from:

- DRC Off** – No volume adjustment
- DRC Low** – Mild adjustment
- DRC High** – Strong adjustment

- **Prune**
Removes unavailable or invalid DAB+ stations (marked with a "?").
Choose:

- Yes** – Remove these stations
- No** – Keep all stations

- **Preset**
 - Preset Recall** – Browse and play your saved stations
 - Preset Store** – Save the current station

Use the dial to choose a slot (1–30), then press to confirm

FM Mode Setup Options

- **Auto Scan**
Automatically searches for available FM radio stations.
 - **Scan Setting**
Choose how many stations to display:
 - **All Stations** – Includes both strong and weak signals
 - **Strong Stations Only** – Shows only stations with clear reception
 - **Audio Setting**
Control how the audio is played:
 - **Stereo Allowed** – Plays in stereo if the signal is good
 - **Forced Mono** – Switches to mono to reduce noise with weak signals
 - **Preset**
Same as in DAB+ mode:
 - Use **Preset Recall** to browse saved stations
 - Use **Preset Store** to save the current station to a numbered slot
-

System Settings (Available in all modes)

Accessing System Settings

1. Press and hold the **INFO/MENU** button until the menu appears.
 2. Turn the **Control Dial** to scroll to **System** and press the dial to enter.
-

1. Time Settings

- **Manual Time Setup**
 - Go to **Time > Time/Date**
 - Set the **Hour, Minute, Day, Month, Year** using the dial
 - Press to confirm each step
 - **Automatic Time Update**
 - Go to **Time > Auto Update**
 - Choose a source:
 - **Update from Any**
 - **DAB only**
 - **FM only**
 - **No update**
 - **12/24-Hour Format**
 - Choose between **12-hour** or **24-hour** clock display
 - **Date Format**
 - Choose your preferred format:
 - **MM-DD-YYYY**
 - **DD-MM-YYYY**
-

2. Alarm Settings

- Set up to **2 alarms**
- For each alarm, choose:
 - **Alarm On/Off**
 - **Frequency:** Daily / Once / Weekdays / Weekends
 - **Time:** Set your wake-up time
 - **Source:** Buzzer / FM / DAB+
 - **Duration:** 15–120 minutes
 - **Volume:** Set between 6–32

When saved, you'll see "Alarm saved" and an alarm icon on the screen.
During alarm:

- Press the dial once to **Snooze (10 mins)**
 - Press again to **turn off** the alarm
-

3. Language

- Change the menu language
 - Choose from **28 available languages**
-

4. Backlight Settings

- **Timeout** – How long the screen stays lit
 - Options: Always On / 10 / 30 / 60 / 90 / 120 / 180 seconds
 - **On Level** – Brightness while in use: Low / Medium / High
 - **Dim Level** – Brightness when idle: Low / Medium / High
-

5. Sleep Timer

- Automatically turns off the radio after set time
 - Choose: Off / 15 / 30 / 45 / 60 / 90 / 120 minutes
-

6. Inactive Standby Timer

- Turns off the radio after no activity
 - Options: Off / 2 / 4 / 5 / 6 hours
-

7. Equalizer Settings

- Choose audio profile:
 - **Normal, Rock, Pop, Jazz, Classical, My EQ**
 - **My EQ**: Manually adjust:
 - **Treble** and **Bass** between **-7 to +7**
-

8. Clock Style

- Choose between **2 standby clock display styles**
-

9. Factory Reset

- Resets all system settings and saved stations
 - Use only if facing major issues or poor signal
-

10. Software Version

- View your current system software version here