

**GARDENLINE**<sup>®</sup>

# CORDLESS LAWN MOWER GL-CM 36 Li

## QUICK START GUIDE

### Easy steps to getting started.

1. Ensure all items, including your manual are removed from the packaging before discarding.
2. Assemble the Cordless Lawn Mower as per the instruction manual. Refer to Section 6 in the instruction manual for more detail.
3. Adjust the height of the cutting blade by pulling the lever of the cutting height adjustment (10) out, select the required cutting height and put the lever back in.
4. Directly before starting up the lawn mower insert the safety plug (15) and remove the safety plug again whenever you interrupt or terminate your work. The lawn mower is equipped with a safety lock-off (2) which must be pressed before the ON/OFF handle (1) can be activated. The Lawn Mower switches itself off when the ON/OFF handle (1) is released.
5. **IF YOU ARE IN ANY DOUBT PLEASE REFER TO THE DETAILED INSTRUCTIONS WITHIN OUR MANUAL**

