



250W MULTIFUNCTION TOOL E-MG 250E

QUICK START GUIDE

Easy steps to getting started.

1. Ensure all items, including your User Guide are removed from the packaging before discarding.
2. **Important!** Always pull the power plug before making adjustments to the equipment. To fit the plug-in accessories hold the multifunction tool so that the ON/OFF switch (1) points down and the tool chuck (2) faces up as shown in Figs. 2 and 3.
3. Choose the right plug-in accessory. Refer to Section 6.1 of the User Guide for more information.
4. Place one of the plug-in accessories on the tool chuck (2) so that the pins of the tool chuck (2) fit into the recesses in the plug-in accessory.
5. Secure the plug-in accessory using the supplied screw (Figs. 2 and 3/ Item b) and tighten the screw securely with the provided Allen key (Fig. 2 and 3/Item 5). **Note:** Make sure that the washer (Fig. 3/ Item a) is used for the screw (Figs. 2 and 3/ Item b) only in connection with the saw blade (Fig. 3/ Item 6) and the scraper (Fig. 3/ Item 7). The corrugated face of the washer must be placed against the plug-in accessory.
6. Check that the plug-in tool is secure.
7. Insert the dust extraction adapter and connect your appliance to an extraction unit or vacuum cleaner (Section 6.3 in User Guide).
8. Before you connect the equipment to the mains supply make sure that the data on the rating plate are identical to the mains data.
9. Slide the switch ON/OFF (1) forwards to switch on the equipment.
10. To pre-select the speed turn the knurled screw (4) on the switch. (Section 7.3 in User Guide).
11. **IF YOU ARE IN ANY DOUBT PLEASE REFER TO THE DETAILED INSTRUCTIONS WITHIN OUR USER GUIDE.**

