



Einhell

EXPERT

POWER X-CHANGE

Robot Lawn Mower

FREELEXO 900 LCD BT

Item No.: 3413955

Ident No.: 21010

Bar Code: 4006825655339

The Einhell FREELEXO 900 LCD BT robot lawnmower is a member of the high-performance Power X-Change family which provides unlimited flexibility within the system family. It is controlled via app by Bluetooth or LCD display and the settings of the robot lawnmower can be set to individual requirements. The FREELEXO 900 LCD BT includes everything needed for installation and operation of an Einhell robotic lawnmower of the FREELEXO Series. It is suitable for a lawn area up to 900 m². The scope of delivery includes a 3,0 Ah battery, 190 m wire, 270 fastening hooks, 3 blades and 4 connecting clamps.

Features & Benefits

- PXC system battery - can also be used for other PXC products
- App using Bluetooth - user-defined robot lawnmower control
- Multi area mowing - for complex gardens
- Intuitive keypad with LCD display
- Programmable operating time for each specific day
- Safety sensor system thanks to impact, tilt and lift sensors
- Anti-theft protection in form of PIN code and warning signal
- Rain sensor
- Cutting height adjustment (20-60mm)
- Suitable for slopes up to 35%
- Carry-handle for comfortable transport
- Automatic return to charging unit and charging
- Lawn areas up to 900 m²
- Incl. 3,0 Ah PXC Battery
- Wire 190 m
- Fastening hooks 270 pcs.
- Blades 3 pcs.
- Connecting clamps 4 pcs.



Technical Data

- Power	18 V
- Battery	18 V 3000 mAh Li-Ion
- Cutting width	18 cm
- Slope	35 %
- Cutting height adjustment	Continuously 20-60 mm
- Recommended area	900 m ²
- Perimeter wire	190 m
- Hooks	270 Pieces
- Spare blades	Yes, three pieces
- Connecting clamps	4 Pieces

Logistic Data

- Product weight (kg)	15.5
- Gross weight (kg)	18.1
- Dimensions single packaging	725 x 510 x 315 mm
- Pieces per export carton	1 Pieces
- Gross weight of export carton	18.1 kg
- Dimensions export carton	737 x 530 x 327 mm
- Container quantities (20"/40"/40"HC)	222 462 528



FREELEXO



Available as special accessories



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



Installation Kit 800m2
Robot Lawn Mower Accessory
Item No.: 3414011
Bar Code: 4006825646870
Einhell Accessory



2x 3,0Ah & 30min PXC Kit
PXC-Starter-Kit
Item No.: 4512098
Bar Code: 4006825646986
Einhell Accessory



18V 4,0Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Begrenzungsdraht 50 m
Robot Lawn Mower Accessory
Item No.: 3414021
Bar Code: 4006825648782
Einhell Accessory



Befestigungshaken 100 Stk
Robot Lawn Mower Accessory
Item No.: 3414023
Bar Code: 4006825648805
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



2x 18V 4,0Ah PXC-Twinpack
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



Installation Kit 500m2
Robot Lawn Mower Accessory
Item No.: 3414010
Bar Code: 4006825646863
Einhell Accessory



Installation Kit 1200m2
Robot Lawn Mower Accessory
Item No.: 3414012
Bar Code: 4006825646887
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



Ersatzklingen 12 Stk
Robot Lawn Mower Accessory
Item No.: 3414020
Bar Code: 4006825648775
Einhell Accessory



Verbindungsklemmen 4 Stk
Robot Lawn Mower Accessory
Item No.: 3414022
Bar Code: 4006825648799
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack
Battery
Item No.: 4511518
Bar Code: 4006825651676
Einhell Accessory



Mähroboter Garage
Robot Lawn Mower Accessory
Item No.: 3414024
Bar Code: 4006825654417
Einhell Accessory

2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory

Reinigungsset
Robot Lawn Mower Accessory
Item No.: 3414025
Bar Code: 4006825657951
Einhell Accessory



Reparaturset
Robot Lawn Mower Accessory
Item No.: 3414026
Bar Code: 4006825657968
Einhell Accessory