






## Petrol Grass Trimmer HS-PT 2538

# Quick Start Guide

**Your Safety is most important please read these safety rules before you use this machine**

### General Safety Rules

-  **Read user manual before using the machine**
-  **Wear safety goggles to guard your eyes from possible injury**
-  **Wear gloves to protect your hands**
-  **Wear safety shoes to protect your feet**
-  **Wear hearing protection**

**Note - This quick start guide is intended for experienced users who have already assembled the tool, please refer to the manual for further details**



# Quick Start Guide

## Items Included



- |                          |                       |          |
|--------------------------|-----------------------|----------|
| 1 Lower Shaft            | 5 Plug socket Spanner | 9 Handle |
| 2 Engine & Upper Shaft   | 6 Mixing Bottle       |          |
| 3 Bottle of 2 Stroke Oil | 7 Carry Strap         |          |
| 4 Key for Spool Changing | 8 Guard               |          |


Do you have questions?  
We can help  
Call Customer Service  
Mon-Thur 08:45 am - 5:00 pm  
Friday 08:45 am - 3:15 pm



**0151 649 1500**  
**Spare Parts also available**

- 1** Unpack the Grass Trimmer  
a) Open carton carefully and remove all items  
b) Ensure you have all items (see above) before you discard the packaging


- 2** Assembling the Grass Trimmer  
Connect bottom shaft (1) to Upper shaft & engine (2) making sure the square drive shaft on lower shaft (1) is inserted into square drive on upper shaft (2) correctly and ensure the spring loaded locking clip is aligned with the hole provided and is clipped into place. Then tighten the securing knob. If the drive is not correctly inserted then the spool will not turn.

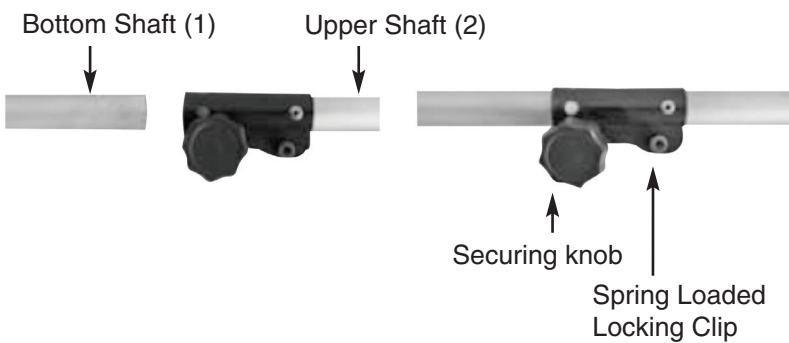

- 3** For your Safety  
You must fit the guard provided for your safety. Remove the screw, spring washer and nut from the guard (see Fig 1). Place the guard over the lower shaft (see Fig 2), replace the screw, spring washer and nut and tighten (see Fig 3). Also fit the centre handle. Undo the locking knob and remove the bolt (see Fig 4) push, the handle over the upper shaft (see Fig 5), replace the bolt and secure with locking knob (see Fig 6). Fit the carry strap to the unit with the clip to the hook on the upper shaft (see Fig 7)



- 4** Fuel / Lubrication  
a) Mix the fuel in the mixer bottle provided  
b) Shake the container gently to ensure that it is properly mixed.  
**N.B Failure to use the correct oil/fuel mixture will cause the engine to seize**

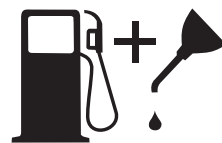

**Use regular grade unleaded petrol and quality 2 stroke oil**

Fuel Mixture is  
40:1 (40 parts Fuel to 1 part 2 stroke oil)

- 5** Starting the Grass Trimmer
- 1) Set the machine down on a hard, level surface.
  - 2) Add the fuel to the grass trimmer.
  - 3) Set Choke lever to |↓|.
  - 4) Push primer bubble 10 times.
  - 5) Set the ON/OFF switch to "1".
  - 6) With one hand, press the throttle lock and also the throttle lever, whilst also holding the machine firmly.
  - 7) With the other hand, tug sharply on the starter cable 10 times.  
NOTE: amount of choke will vary slightly depending on the external temperature.
  - 8) After the engine has started, allow it to warm up and then move the choke lever to |↑|.
- To stop the machine immediately, set the ON/OFF switch to "STOP" or "0".

