



GENERAL POWER TOOL SAFETY WARNINGS

WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1. Work area safety
 - a. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
 - b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
 - c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2. Electrical safety
 - a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
 - b. **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
 - c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
 - d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.

- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
3. Personal safety
 - a. **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.

- b. **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.**

- d. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f. **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
- h. **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

4. Power tool use and care
 - a. **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
 - b. **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
 - c. **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
 - d. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.

- e. **Maintain power tools.** Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f. **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g. **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

- h. **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.
5. Service
 - a. **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

 


BATTERY & INSPECTION CAMERA WARNINGS

WARNING! The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

- Young children should be supervised to ensure that they do not play with the appliance.
- Do not store or use the tool and battery pack in locations where the temperature may reach or exceed 40°C (such as inside sheds or metal buildings in summer).
 - Do not incinerate the battery pack even if it is seriously damaged or is completely worn out. The battery can explode in a fire.
 - Remove the batteries before cleaning the unit.
 - Remove the batteries if the unit will be stored for a long time.
 - When necessary, replace all 4 batteries at the same time.
 - Only use the size and type of battery specified.
 - Ensure that the batteries are installed correctly, the polarity of each battery should match the markings indicated in the battery compartment.
 - Do not attempt to recharge batteries.


STANDARD EQUIPMENT

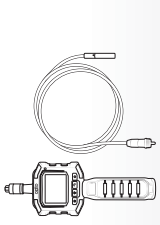

Handle with LCD Screen & Flexible Shaft Camera




 AV Cable, 2 x Accessory Collars, Mirror Tool, Magnet Tool, Hook Tool & Double Hook Tool

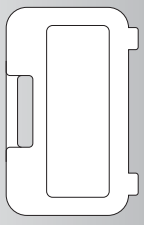

Carry Case

 ODIC-4810

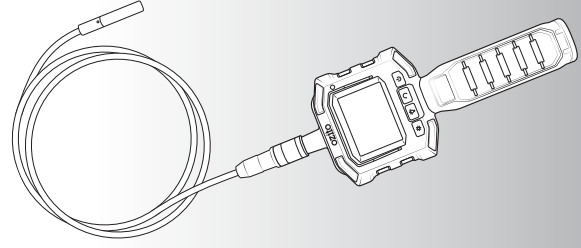

OZITO DIGITAL INSPECTION CAMERA

Ø8MM X 1M

INSTRUCTION MANUAL

SPECIFICATIONS

- Power: 4 x 1.5V AA Batteries
- Camera Dimensions: Ø8mm x 1m
- Camera Viewing Angle: 48°
- Camera Effective Range: 10m
- Camera Resolution: 640 x 480
- Monitor: 2.3" TFT LCD Display
- IP Rating (Camera Shaft): IP67
- Weight: 0.965kg

ozito.com.au

3 YEAR REPLACEMENT WARRANTY

WARRANTY

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO YOUR NEAREST BUNNINGS WAREHOUSE WITH YOUR BUNNINGS REGISTER RECEIPT. PRIOR TO RETURNING YOUR PRODUCT FOR WARRANTY PLEASE TELEPHONE OUR CUSTOMER SERVICE HELPLINE:

Australia 1800 069 486
New Zealand 0508 069 486

TO ENSURE A SPEEDY RESPONSE PLEASE HAVE THE MODEL NUMBER AND DATE OF PURCHASE AVAILABLE. A CUSTOMER SERVICE REPRESENTATIVE WILL TAKE YOUR CALL AND ANSWER ANY QUESTIONS YOU MAY HAVE RELATING TO THE WARRANTY POLICY OR PROCEDURE.

3 YEAR REPLACEMENT WARRANTY

Your product is guaranteed for a period of **36 months from the original date of purchase**. If a product is defective it will be replaced in accordance with the terms of this warranty. Warranty excludes consumable parts, for example: valve adapters and accessories.

WARNING! The following actions will result in the warranty being void.

- If the tool has been operated on a supply voltage other than that specified on the tool.
- If the tool shows signs of damage or defects caused by or resulting from abuse, accidents or alterations.
- Failure to perform maintenance as set out within the instruction manual.
- If the tool is disassembled or tampered with in any way.
- Professional, industrial or high frequency use.

The benefits provided under this warranty are in addition to other rights and remedies which are available to you at law.


Our goods come with guarantees that cannot be excluded at law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Generally you will be responsible for all costs associated with a claim under this warranty, however, where you have suffered any additional direct loss as a result of a defective product you may be able to claim such expenses by contacting our customer service helpline above.

KNOW YOUR PRODUCT

DIGITAL INSPECTION CAMERA

- | | |
|--------------------------|----------------------------|
| 1. Camera Lens | 10. Screen Contrast Button |
| 2. Camera Shaft Base | 11. Video Output Port |
| 3. Threaded Collar | 12. Flexible Camera Shaft |
| 4. Power Indicator | 13. Accessory Collars |
| 5. LCD Display | 14. Mirror Tool |
| 6. Power Button | 15. Magnet Tool |
| 7. Handle Unit | 16. Single Hook |
| 8. Rotate Button | 17. Double Hook |
| 9. LED Brightness Button | |

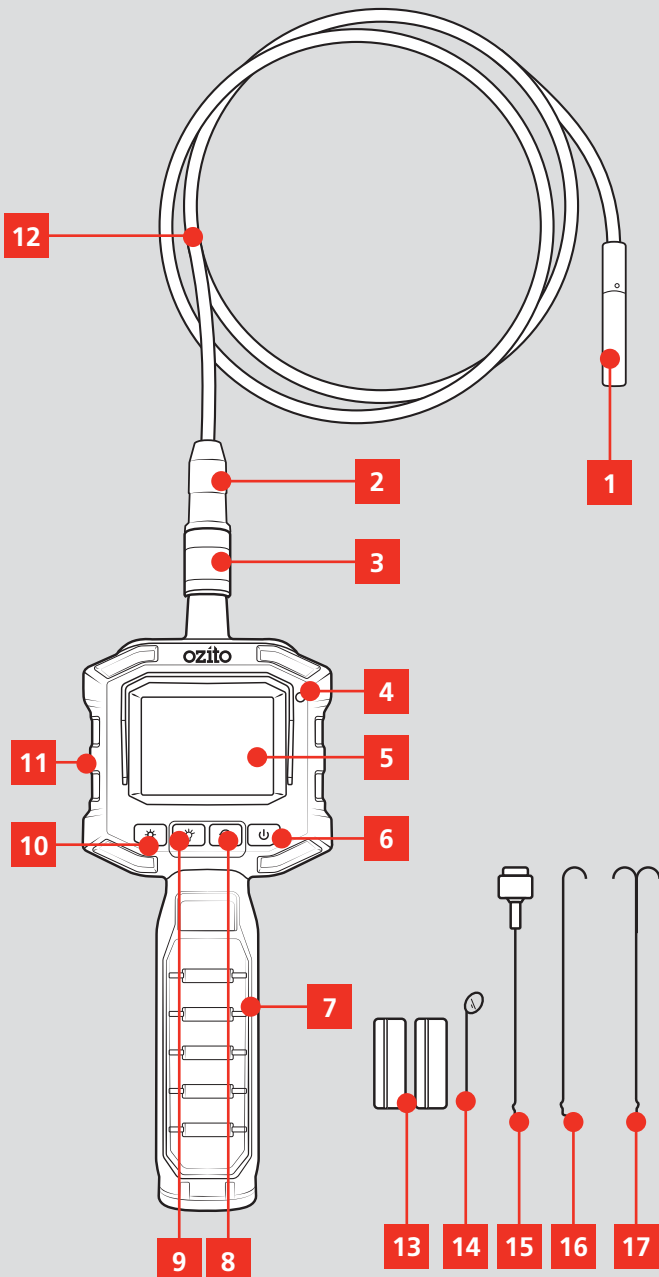 

ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.



 
SETUP & PREPARATION

1. BATTERIES

Installing Batteries

The inspection camera requires 4 x 1.5V AA batteries to operate.

1. Press in the tab and lift off the battery compartment lid.

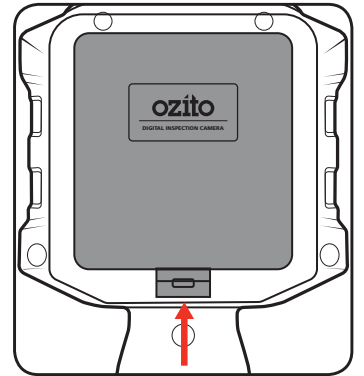


2. Insert the batteries into the compartment.

Note: Refer to the batteries symbols in the compartment and check that the batteries have been inserted in the correct orientation.

3. Replace the battery compartment lid.

Low Battery Indicator

When the battery icon shows the low battery symbol, the batteries are at low charge and need to be replaced.

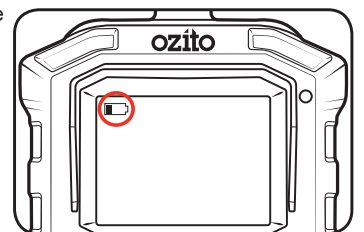 


WARNING! REPLACE ALL 4 BATTERIES AT THE SAME TIME.

3 YEAR REPLACEMENT WARRANTY


2. DISPLAY

Attaching The Camera Shaft

 1. Align the key in the base of the camera shaft with the slot in the handle unit.
2. Push the two parts together firmly.

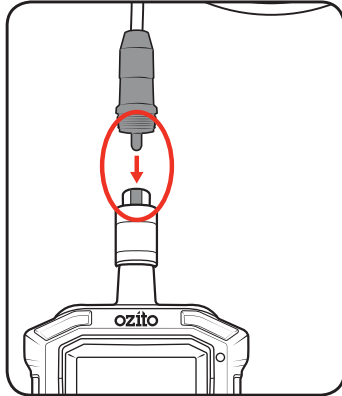

 
3. Twist the threaded collar clockwise onto the camera shaft base to lock it in place.

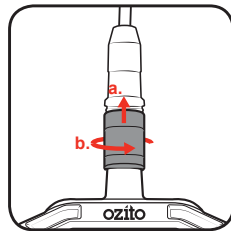

Extending The Display

The display unit can be plugged into a larger screen for easier viewing when required.

 1. Plug the black 3.5mm TS plug of the AV cable into the video output port.
2. Plug the yellow RCA plug of the AV cable into the yellow AV input on your desired display unit.
3. Follow the display unit manufacturer's instructions for viewing AV inputs.

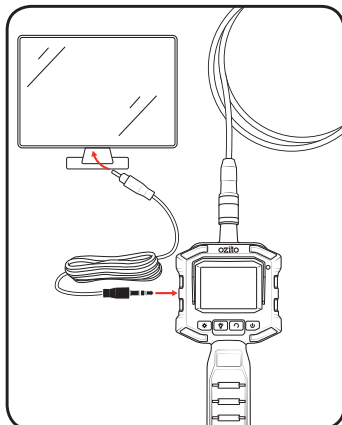


3. ACCESSORIES


Attaching Accessories

The supplied tools can be attached to the end of the camera shaft and used to recover objects in narrow, inaccessible spaces.

 The magnet tool can be used to pick up ferrous objects such as nails and screws that have fallen into crevices.

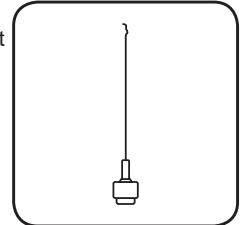


 The mirror tool can be used to look around bends and corners in tubes.

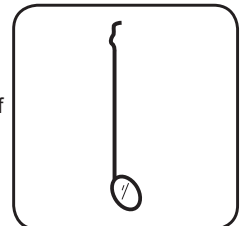


The shaft of the mirror tool can be adjusted if there is some misalignment.

 The single and double hooks can be used to lift non-magnetic objects such as rings and bolts.

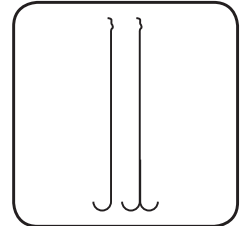


 1. To attach any of the accessories, slide one of the accessory collars around the desired tool.

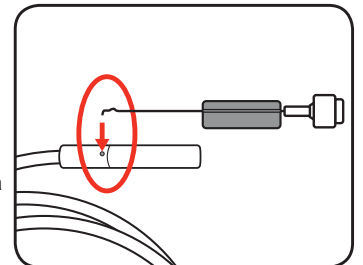

2. Insert the small hook into the hole on the end of the camera shaft.

 2. Slide an accessory collar over the end of the tool and camera shaft. Ensure the tool is aligned with the channel in the accessory collar.

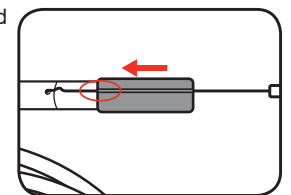

3. Check that the accessory is installed correctly by tugging gently on it.

 
4. To remove the accessory, slide off the collar and pull the hook out of the hole in the camera shaft.

OPERATION

4. CONTROLS

Switching The Camera On & Off


1. Press and hold the power button for 3 seconds to switch the unit on. The power indicator will light up and the LCD screen will start displaying real-time imagery.

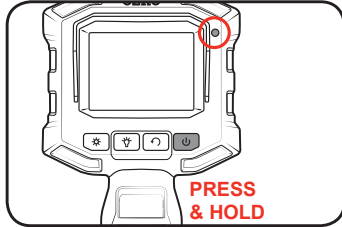

2. Press the power button again briefly to switch the unit off.

Adjusting The LCD Display Contrast

 The LCD display has 8 contrast levels to make viewing easier onscreen. Press the screen contrast button to cycle through the levels.

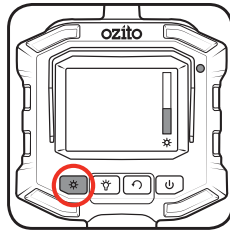

Adjusting The Camera LED Brightness

The camera also has an LED light that can be adjusted to make viewing in dark spaces easier. Press the LED brightness button to cycle through the brightness levels.

Note: The LED can also be switch off when not required by pressing the LED brightness button until the settings bar onscreen is empty.



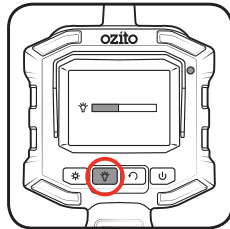 


Image Adjustment (Rotate, Mirror, Zoom)

 The real-time monitoring displayed onscreen can be rotated 180° and /or mirrored if required. Press the rotate button to toggle through the view settings.

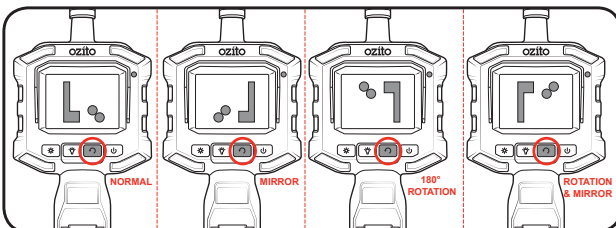

 The image can also be zoomed in on by holding down the screen contrast and rotate buttons for 3 seconds to change the zoom level. The image will cycle between 0x, 1.5x and 2x zoom.

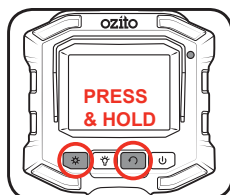

MAINTENANCE



WARNING! BEFORE CLEANING YOUR TOOL OR CARRYING OUT ANY MAINTENANCE PROCEDURE, MAKE SURE THAT THE POWER SUPPLY HAS BEEN REMOVED OR DISCONNECTED TO PREVENT ACCIDENTAL STARTING.

Cleaning

Clean the appliance regularly with a damp cloth. Do not use cleaning agents or solvents; these may be aggressive to the plastic parts in the appliance. Ensure that no water can get into the interior of the appliance.

Use a microfibre cloth and a small amount of lens cleaner to clean the camera lens.

Storage

Switch off the tool, place it in the storage bag and store it in a dry location which is not accessible to unauthorised persons. Remove the batteries before storage if the tool will not be in use for a long time.

DESCRIPTION OF SYMBOLS

V	Volts	mm	Millimetre
~	Alternating Current	m	Metre
IP67	Protection against dust ingress & water up to 1m		Regulatory Compliance Mark (RCM)
	Read Instruction Manual		Warning

CARING FOR THE ENVIRONMENT



Power tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse.

For further information, or any parts not listed here, visit www.ozito.com.au or contact Ozito Customer Service:

Australia 1800 069 486

New Zealand 0508 069 486

E-mail: enquiries@ozito.com.au