



User Manual

Spend a little Live a lot

GUIDE



ELECTRIC HEDGE TRIMMER GLH 690




Original user manual


Contents






Overview	3
Use.....	5
Device parts.....	6
General information.....	7
Reading and storing the user manual	7
Explanation of symbols	7
Safety	8
Proper use.....	8
Safety notes	9
General safety notes for power tools.....	9
First use.....	15
Checking the hedge trimmer and product contents.....	15
Preparations.....	15
Operation.....	16
Turning the hedge trimmer on and off	16
Cleaning.....	17
Maintenance	18
Ordering spare parts.....	19
Storage	19
Troubleshooting.....	20
Technical data	21
Residual risks	22
Disposal.....	22
Disposing of the packaging	22
Disposing of the hedge trimmer	22
Declaration of conformity	23
Warranty Card.....	25
Warranty conditions.....	26

A

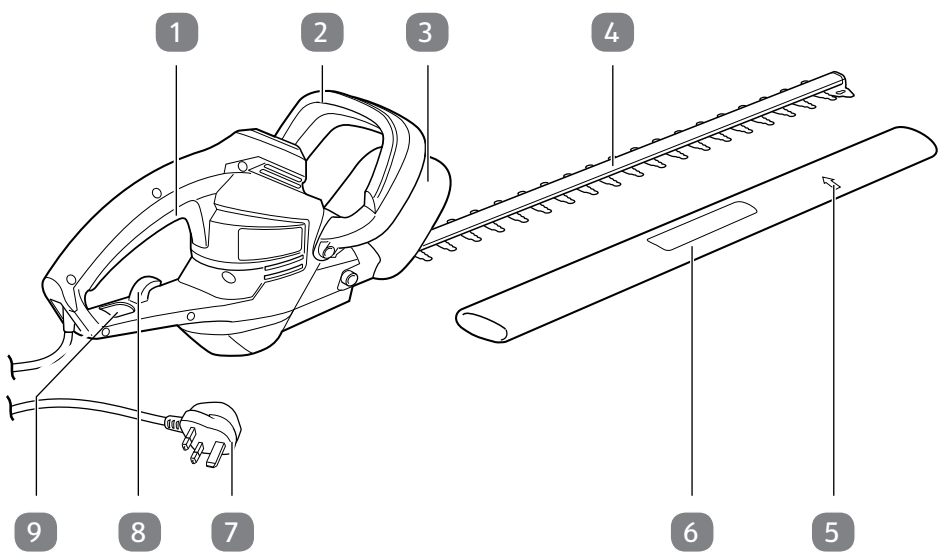

B

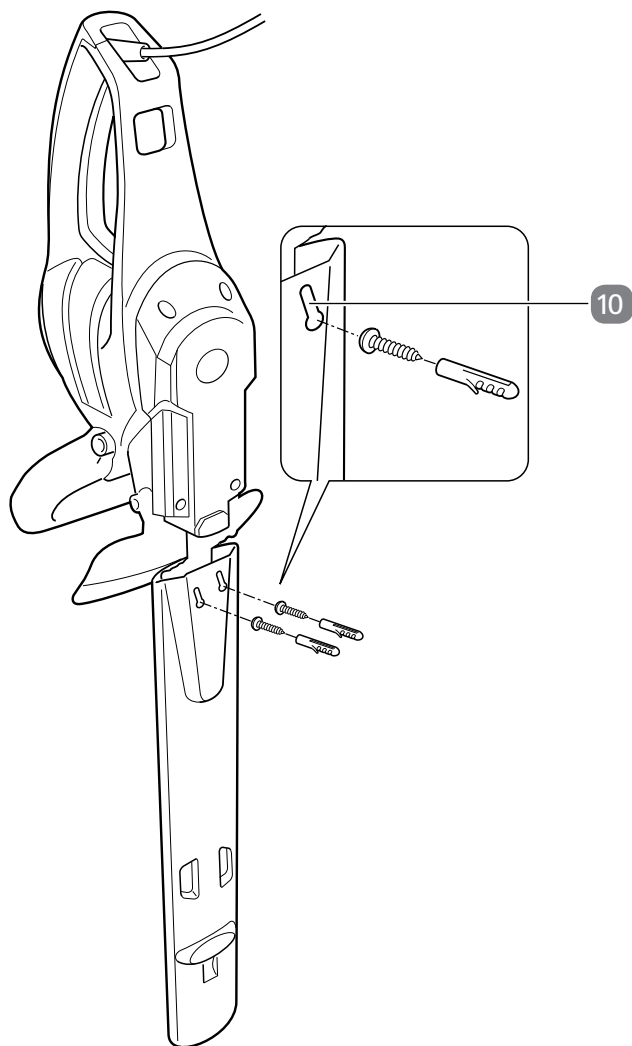

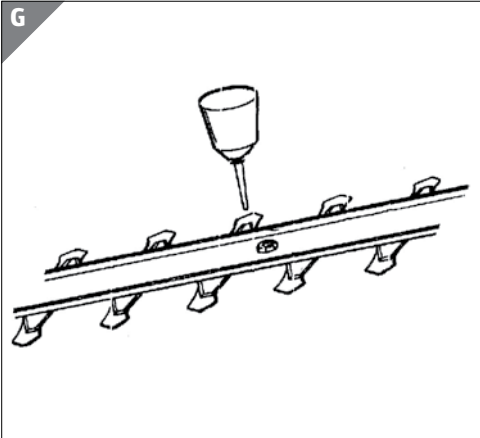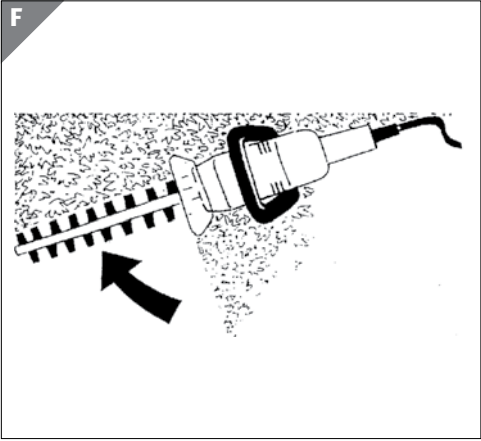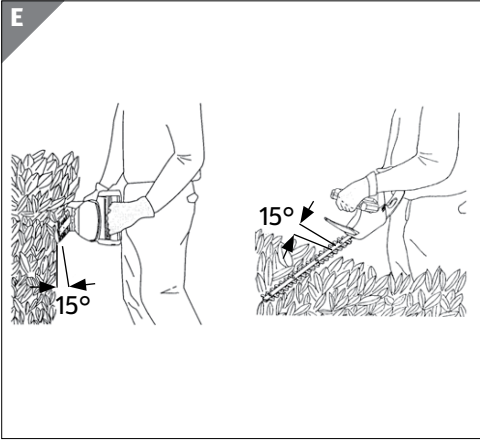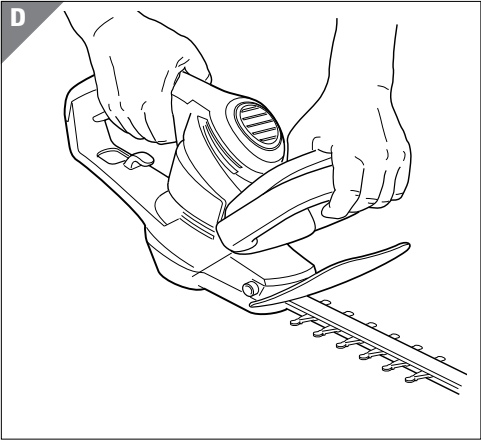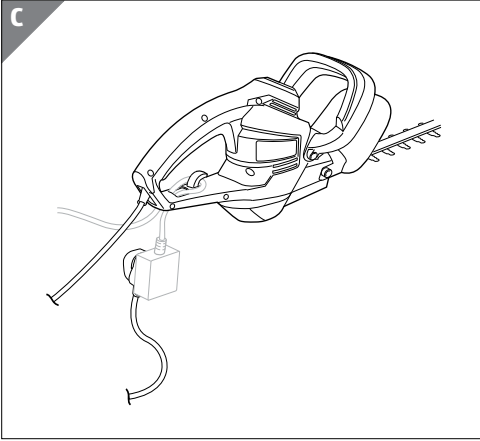

Device parts

- 1 Handle with switch
- 2 Guide handle with switch
- 3 Transparent hand guard
- 4 Blade with double cutter
- 5 Locking mechanism for protective cap
- 6 Protective cap
- 7 Mains cable with mains plug
- 8 Cable strain relief
- 9 Cable feed-through
- 10 Wall mounting socket (screw and dowel not included)

General information

Reading and storing the user manual



This user manual accompanies this electric hedge trimmer. It contains important information on start-up and handling.

For improved readability, the electric hedge trimmer will hereinafter be referred to only as the “hedge trimmer”.

Before using the hedge trimmer, read the user manual carefully. This particularly applies to the safety notes. Failure to read this user manual may result in severe injury or damage to the hedge trimmer.

The user manual is based on the standards and rules in force in the European Union. When abroad, you must also observe country-specific guidelines and laws.

Store the user manual for future use. If you pass the hedge trimmer on to third parties, please be absolutely sure to include this user manual.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the hedge trimmer or on the packaging.



WARNING!

This signal symbol/word designates a hazard with a moderate degree of risk which may lead to death or severe injury if not avoided.

NOTICE!

This signal word warns against potential damage to property.



This symbol provides you with useful supplementary information on assembly or operation.



Declaration of conformity (see chapter “Declaration of conformity”):
Products marked with this symbol meet all applicable Community regulations for the European Economic Area.



The hedge trimmer corresponds to protection class II.



Read the user manual before use.



Protect the device from rain and moisture.



Wear ear and eye protection.



Immediately disconnect the hedge trimmer from the mains if the cable is damaged or severed.



Wear protective gloves.

Safety

Proper use

The hedge trimmer has only been designed for trimming hedges, bushes and shrubs. It is only intended for private use and not suitable for commercial purposes.

Only use the hedge trimmer as described in this user manual. Any other use is deemed improper and may result in damage to property or even personal injury. The hedge trimmer is not a children's toy.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

Safety notes

General safety notes for power tools

WARNING!

Read all safety notes and instructions!

Failure to follow the safety notes and instructions may result in an electric shock, fire and/or severe injury.

Keep all safety notes and instructions for future reference.

Work place safety

- a) **Keep your work area clean and well lit.** Disorganisation or unlit work areas may result in accidents.
- b) **Do not work with the power tool in areas with a risk of explosion where flammable liquids, gases or dusts are present.** Power tools may produce sparks that could ignite dust or vapours.
- c) **Keep children and other persons away from the power tool while you are using it.** If you are distracted, you could lose control of the device.

Electrical safety

- a) **The connector plug for the power tool must fit in the socket. The plug must not be modified in any way. Do not use any adapter plugs in combination with power tools with protective earthing.** Plugs that have not been modified and suitable sockets reduce the risk of an electric shock.
- b) **Avoid coming into contact with earthed surfaces like pipes, heaters, stoves and refrigerators.** There is an increased risk of electric shock if your body is grounded.
- c) **Keep power tools away from rain or moisture.** If water penetrates a power tool, there is an increased risk of electric shock.
- d) **Do not use the cord for purposes other than the intended one, such as for carrying the power tool, hanging it up or pulling the plug out of the socket. Keep the cord away from heat, oil, sharp edges or moving parts of the device.** A damaged or wound up cord increases the risk of an electric shock.
- e) **If you are working with a power tool outdoors, only use extension cords that are also suitable for outdoor use.** Using an extension cord suitable for outdoor use reduces the risk of electric shock.

- f) **If operating the power tool in a damp environment cannot be avoided, use a fault-current circuit breaker.** Using a fault-current circuit breaker reduces the risk of an electric shock.

Safety of persons

- a) **Be careful, pay attention to what you are doing and approach work with a power tool in a reasonable manner. Do not use any power tool if you are tired or under the influence of drugs, alcohol or medication.** A single moment of inattentiveness when using the power tool can result in serious injury.
- b) **Wear personal protective equipment and always wear protective goggles.** Depending on the type of power tool and how it is used, wearing personal protective equipment such as a dust mask, non-slip safety shoes, a protective helmet or ear protection reduces the risk of injury.
- c) **Avoid accidentally activating the device. Make sure that the power tool is turned off before you connect it to the power supply and/or the rechargeable battery, pick it up or carry it.** If you have your finger on the switch when carrying the power tool or connect the device to the power supply when it is turned on, this may cause an accident.
- d) **Remove all adjusting tools or spanners before you switch the power tool on.** If a tool or spanner comes into contact with a rotating part of the device, there is a risk of injury.
- e) **Avoid an abnormal posture. Maintain a safe stance and keep your balance at all times.** This will allow you to have better control of the power tool in the event of unexpected situations.
- f) **Wear suitable clothing. Do not wear any loose-fitting clothing or jewellery. Keep your hair, clothing and gloves away from the moving parts.** Loose clothing, jewellery or long hair may get caught in the moving parts.
- g) **If you can attach dust extractors or collectors, make sure that they are connected and used properly.** Using a dust extractor may reduce risks associated with dust.

Using and handling the power tool

- a) **Do not overload the device. Use the right power tool for your work.** The right power tool will ensure that you work more effectively and safely within the specified power range.
- b) **Do not use a power tool if its switch is defective.** A power tool that can no longer be switched on or off is dangerous and must be repaired.

- c) **Pull the plug out of the socket and/or remove the rechargeable battery before you make any adjustments to the device, change the accessories or put the device away.** This precaution will prevent the power tool from accidentally starting.
- d) **Keep unused power tools out of the reach of children. Do not let persons use the device if they are not familiar with it or have not read these instructions.** Power tools are dangerous if used by inexperienced persons.
- e) **Take good care of the power tools. Check to make sure that the moving parts are functioning properly and not stuck, whether parts are broken or damaged so as to affect the function of the power tool. Have damaged parts repaired before you use the device.** A large number of accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Well-maintained cutting tools with sharp cutting edges are less likely to catch and are easier to guide.
- g) **Use the power tool, accessories, insertion tools etc. in accordance with these instructions. At the same time, consider the working conditions and the work to be performed.** Using power tools for applications other than the intended ones may result in dangerous situations.

Safety notes for hedge trimmers

- a) **Keep all body parts away from the cutter. When the cutter is moving, do not try to remove clippings or hold the material to be cut. Only remove trapped clippings when the device is switched off.** A single moment of inattentiveness when using the hedge trimmer can result in serious injury.
- b) **When the cutter is at a standstill, carry the hedge trimmer by the handle. Always fit the protective cover when transporting or storing the hedge trimmer.** Handle the hedge trimmer with care to minimise the risk of injury caused by the cutter.
- c) **Only hold the power tool by the insulated handle surfaces as the cutter may come into contact with hidden power lines or the tool's own mains cord.** If the cutter comes into contact with a voltage-carrying line, the device's metallic parts may be energised, resulting in an electric shock.
- d) **Keep the cable away from the cutting area.** When working, the cable may become hidden in the shrubbery or be accidentally severed.
- e) **Check the hedge for hidden objects, e.g. wire fences.**
- f) **We recommend using a fault-current circuit breaker with a release current of 30 mA or less.**
- g) **Use both hands to correctly hold the hedge trimmer.**

Service

- a) **Only have your power tool repaired by a qualified professional and only with original spare parts.** This will ensure that the safety of the power tool is not compromised.

WARNING!

Risks associated with using the hedge trimmer!

If used improperly or in a negligent manner, the hedge trimmer may cause serious injury!

- Carefully read through the instructions on proper handling, preparatory steps, maintenance, starting and switching off the hedge trimmer. Familiarise yourself with all controls and switches, as well as the proper use of the hedge trimmer.
- Never allow children to use the hedge trimmer.
- Beware of overhead power lines.
- Avoid using the hedge trimmer when people, especially children, are nearby.
- Always ensure that the hedge trimmer is correctly positioned in one of the specified work positions before starting the motor.
- When using the hedge trimmer, always adopt a safe and secure operating position, particularly when using steps or a ladder.
- Always ensure that all handles and protective guards are fitted when using the hedge trimmer. Never attempt to use an incomplete hedge trimmer or one with unauthorised modifications.
- Always be aware of your surroundings and stay alert for possible hazards that you may not hear due to the noise of the hedge trimmer.
- Wear ear protection, eye protection and headgear.
- The motor must be switched off (unplugged from the mains) before:

- cleaning the hedge trimmer or clearing a blockage,
 - checking, maintaining or working on the hedge trimmer,
 - when leaving the hedge trimmer unattended.
- Keep all body parts away from the double cutter. When the hedge trimmer is switched on, do not try to remove clippings or hold the material to be cut. Only remove trapped clippings when the device is switched off. A single moment of inattentiveness when using the hedge trimmer can result in serious injury.
 - When the double cutter is at a standstill, carry the hedge trimmer by the handle. Always fit the protective cover when transporting or storing the hedge trimmer. Handle the hedge trimmer with care to minimise the risk of injury caused by the double cutter.
 - Only hold the hedge trimmer by the insulated handle surfaces as the cutter may come into contact with hidden power lines or the tool's own power cable. If the double cutter comes into contact with a voltage-carrying line, the device's metallic parts may be energised, resulting in an electric shock.
 - Keep the cable away from the cutting area. When working, the cable may become hidden in the shrubbery and be accidentally severed.
 - Before starting to trim the hedge, check it for hidden objects, e.g. wire fences.
 - To further prevent the risk of an electric shock, we recommend using a fault-current circuit breaker with a release current of 30 mA or less.
 - Use both hands to correctly hold the hedge trimmer if there are two handles.
 - If the cutting unit becomes jammed, e.g. due to thick branches etc., switch off the hedge trimmer immediately (unplug it from the mains) and only then should the obstruction be cleared.

- Regularly check and maintain the hedge trimmer as appropriate. Only replace damaged cutters in pairs. If the hedge trimmer is damaged due to a fall or an impact, it is essential for the hedge trimmer to be checked by a specialist.
- Do not use the hedge trimmer if the cutting unit is damaged or excessively worn.
- Always ensure that all handles and protective guards are fitted when using the hedge trimmer.
- Only connect the hedge trimmer if the mains voltage of the socket corresponds to the specification on the nameplate.
- Only connect the hedge trimmer to an easily accessible socket so that you can quickly disconnect it and the extension cord from the mains in case of a failure.
- Only use an extension cord which is approved for outdoor use. The wire cross-section of the extension cord must be at least 1.5 mm².
- Always fully unwind the cable reel before use. When doing so, check the cable for damage.
- The cable must reach the nearest socket – do not connect several extension cords to one another because there is a power loss at every plug contact and the hedge trimmer is unable to operate at full power.
- If the cable is damaged during use, disconnect the mains plug from the mains socket immediately. **DO NOT TOUCH THE CABLE BEFORE IT IS DISCONNECTED.**
- Never submerge the hedge trimmer in water or other liquids. Do not wash the hedge trimmer; do not use a high-pressure or steam cleaner to clean the hedge trimmer.
- Never attempt to grab the hedge trimmer if it has fallen into water. In such a case, immediately disconnect the mains plug.
- Never touch the mains plug or mains jack with wet hands.
- Never pull the mains plug out of the socket by the mains cord; instead, always do so by grasping the mains plug.

First use

Checking the hedge trimmer and product contents

NOTICE!

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointy objects, you may quickly damage the hedge trimmer.

- Be very careful when opening the packaging.
 1. Take the hedge trimmer out of the packaging.
 2. Check to make sure that the delivery is complete (see **fig. A** and **B**).
 3. Check whether the hedge trimmer or the individual parts are damaged. If this is the case, do not use the hedge trimmer. Contact the manufacturer at the service address specified on the warranty card.



The hedge trimmer is delivered ready for use – assembly is not required.

Preparations

1. Check the hedge: It must not be wet and remove any foreign bodies such as wires and plant stakes.
2. Check the hedge trimmer to ensure all screw fittings are securely seated and the double cutter on the blade **4** is sufficiently sharp.
3. Fully extend the extension cord in loops so that you can pull it towards you from behind when working.
4. The cable strain relief **8** prevents the extension cord from being accidentally disconnected when cutting:
Form a loop with the last 30 cm of the extension cord.
5. Guide the loop through the cable feed-through **9** and over the hook for the cable strain relief (see **fig. C**).
6. Slowly pull the loop against the cable strain relief to tighten it. If the cable is not taut, it may become loose and slip out when working.
7. Insert the mains plug **7** in the extension cord connector.
8. Insert the mains plug of the extension cord in a properly installed socket.

Operation

WARNING!

Risk of electric shock and injury!

If you damage or even sever the extension cord with the hedge trimmer, it will probably short-circuit, and there may even be a bang and a few sparks.

- Do not be frightened! Keep hold of the hedge trimmer but release the switch on the handle.
- Wait until the double cutter comes to a standstill.
- Do not touch the extension cord or blade! Put the hedge trimmer down and immediately disconnect the mains plug from the mains socket.
- Only then should you assess the damage.
- Never “mend” a damaged extension cord. Either replace it or have it replaced by a specialist.

WARNING!

Risk of injury!

The double cutter will continue to run for a short period of time!

- Hold the hedge trimmer securely until the double cutter comes to a standstill.

Turning the hedge trimmer on and off

The hedge trimmer is fitted with a two-hand safety circuit. It only works when one hand presses the switch on the guide handle **2** and the other hand presses the switch on the handle **1**.

1. Hold the hedge trimmer by the guide handle. If you are right-handed, use your left hand. If you are left-handed, use your right hand.
2. On the protective cap **6**, gently press on both sides of the locking mechanism for the protective cap **5**, and pull the protective cap off forwards.
3. Put the protective cap nearby.

4. Ensure that the double cutter **4** is not touching anything so that the hedge trimmer can be started safely.
 5. Hold the guide handle securely and press the switch in the process.
 6. Grasp the handle with your other hand and also press the switch. **Attention: The hedge trimmer starts** (see **fig. D**).
 7. The hedge trimmer stops as soon as you release one of the switches.
 8. Every time you take a break, place the protective cap on the blade until it engages to prevent injuries.
- In addition to using the hedge trimmer for trimming hedges, you can also cut shrubs and bushes.
 - To achieve the best possible cutting performance, hold the hedge trimmer so that the cutter teeth are at an angle of approx. 15° to the hedge (see **fig. E**).
 - Thanks to the counter-rotating cutters that cut on both sides, you can cut in both directions.
 - Cut the sides of a hedge with arch-shaped movements from the bottom to the top (see **fig. F**).

Cleaning

WARNING!

Risk of electric shock and injury!

Always be sure to unplug the extension cord before cleaning or maintaining the hedge trimmer to prevent an electric shock or the motor from being started accidentally.

- Wear protective gloves when cleaning or checking the blade to prevent injuries caused by the double cutter.

NOTICE!

Risk of short circuit!

Water that has penetrated the housing may cause a short circuit.

- Never immerse the hedge trimmer in water.
- Make sure that no water penetrates the housing.


NOTICE!**Risk of damage!**

Improper handling of the hedge trimmer may result in damage.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles, as well as sharp or metallic cleaning utensils, such as knives, hard scrapers and the like. They could damage the surfaces.
- Never spray the hedge trimmer with a water jet or a high-pressure cleaner. There may be significant damage if water enters the motor.

Thoroughly clean the hedge trimmer immediately after each use and let all components dry. Moist plant cuttings may otherwise harden or start to rot; they are then much harder to remove.

1. Keep the protective devices, air vents and the motor housing as free of dust and dirt as possible.
2. Remove all plant cuttings with a hand brush or brush.
3. Clean all smooth surfaces with a damp cloth.

Finally, thinly coat the blade  with oil and briefly run the hedge trimmer to distribute the oil (see **fig. G**).

Maintenance

- There are no parts within the device that need to be maintained.
- Regularly check that all screw connections are tight to ensure the hedge trimmer will operate safely.
- Damaged or worn double cutters must no longer be used and you must replace them with the manufacturer's genuine spare parts.
- Have any safety-relevant maintenance work – such as replacing faulty components or sharpening or replacing the double cutter – carried out by a specialist or our service department to maintain the hedge trimmer's operational safety.

Ordering spare parts

The following data should be provided when ordering spare parts:

- Device type
- Article number of the device
- Device ID number
- Spare part number of the required spare part

You can find current prices and information at www.einhell.co.uk

Storage

- Thoroughly clean the hedge trimmer as described above before storing it.
- Place the protective cap **6** on the blade.
- Always store the hedge trimmer in a dry area.
- Keep the hedge trimmer away from direct sunlight.
- Store the hedge trimmer so that it is not accessible to children and at a storage temperature between + 5 °C and + 30 °C.

To store the hedge trimmer, you can screw the protective cap to a wall using the wall mounting socket **10**. To do this, you will need two round-head screws with a head diameter of approx. 8 mm (see **fig. B**).


- Do not tighten the screws completely so that you are still able to hang and remove the protective cap together with the hedge trimmer.

Troubleshooting

WARNING!

Risk of electric shock and injury!

Before rectifying a fault, you must remove the extension cord and disconnect the mains plug from the mains socket to prevent an electric shock or the motor from being started accidentally.

Problem	Possible cause and solution
The motor is not running.	No current – check whether there is current at the end of the extension cord.
	House fuse or residual current circuit breaker has been triggered – check the extension cord for damage.
	Motor overload protection has been triggered because the motor is overloaded or has overheated – leave the device to cool for 15 – 20 minutes.
Not enough power, not running smooth.	Double cutter blocked by plant cuttings or foreign bodies (e.g. a piece of wire) – check the blade  and remove any foreign bodies. Ensure that you first disconnect the mains plug from the mains socket.
	Double cutter blunt or faulty – have the hedge trimmer checked by a specialist workshop.
Motor produces a large amount of sparks.	Carbon brushes faulty – have the hedge trimmer checked by a specialist workshop.

If you are unable to rectify the fault, contact our service department (details provided on the warranty card) or find a specialist workshop.

Technical data

Model:	GLH 690
Supply voltage:	230 V ~ 50 Hz
Output	600 W
Protection class:	II / □
Cut length:	630 mm
Blade length:	695 mm
Tooth distance:	max. 24 mm
Cutting thickness:	15 mm
Cutting:	3000 rpm
Cable length:	10 m
Sound pressure level L_{pA} :	82.26 dB(A)
Uncertainty K_{pA} :	3 dB
Sound power level L_{WA} :	93.26 dB(A)
Uncertainty K_{WA} :	3 dB
Guaranteed sound power level L_{WA} :	96 dB(A)
Vibration emission value (handle) a_h :	2.840 m/s ²
Vibration emission value (guide handle) a_h :	2.389 m/s ²
Uncertainty K:	1.5 m/s ²
Weight:	3.5 kg
Dimensions (L x W x H):	106 x 17 x 20 cm
Article number:	92979

The noise and vibration values were determined in accordance with EN 60745-1 and EN 60745-2-15.

The overall vibration values (vectorial sum in three directions) were determined in accordance with EN 60745.

The specified vibration emission value has been measured in accordance with a standardised test procedure and may change depending on the type and way in which the power tool is used. It may also be above the specified value in exceptional cases. The specified vibration emission value can be used to compare one power tool with another one. The specified vibration emission value may also be used to initially assess the impairment.

Residual risks

Even if you use this hedge trimmer in compliance with applicable regulations, residual risks cannot be ruled out. The following risks associated with the construction and design of this power tool may occur:

1. Lung injury if a suitable dust mask is not worn.
2. Hearing loss if suitable ear protection is not worn.
3. Health injuries attributed to hand and arm vibration if the hedge trimmer is used over a prolonged period of time, is not guided in a controlled manner or not maintained properly.

Disposal

Disposing of the packaging



Sort the packaging before you dispose of it. Dispose of cardboard and carton as waste paper and foils via the recyclable material collection service.

Disposing of the hedge trimmer

(Applicable in the European Union and other European states with systems for the separate collection of reusable waste materials)



Old devices must not be disposed of with household waste!

If at some point it is no longer possible to use the hedge trimmer, each consumer is required by law **to dispose of old devices separately from their household waste**, e.g. at a collection point in their community/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment. For this reason, electrical devices are marked with the above symbol.

Einhell Germany AG · Wiesenweg 22 · D-94405 Landau/Isar



Konformitätserklärung

- D** erklårt folgende Konformität gemäß EU-Richtlinie und Normen für Artikel
- GB** explains the following conformity according to EU directives and norms for the following product
- F** déclare la conformité suivante selon la directive CE et les normes concernant l'article
- I** dichiara la seguente conformità secondo la direttiva UE e le norme per l'articolo
- NL** verklaart de volgende overeenstemming conform EU richtlijn en normen voor het product
- E** declara la siguiente conformidad a tenor de la directiva y normas de la UE para el artículo
- P** declara a seguinte conformidade, de acordo com a directiva CE e normas para o artigo
- DK** attesterer følgende overensstemmelse i medfør af EU-direktiv samt standarder for artikel
- S** förklarar följande överensstämmelse ent. EU-direktiv och standarder för artikeln
- FIN** vakuuttaa, että tuote täyttää EU-direktiivin ja standardien vaatimukset
- EE** tõendab toote vastavust EL direktiivile ja standarditele
- CZ** vydává následující prohlášení o shodě podle směrnice EU a norem pro výrobek
- SLO** potrjuje sledečo skladnost s smernico EU in standardi za izdelek
- SK** vydáva nasledujúce prehlásenie o zhode podľa smernice EÚ a noriem pre výrobok
- H** a cikkekhez az EU-irányvonal és Normák szerint a következő konformitást jelenti ki
- PL** deklaruje zgodność wymienionego poniżej artykułu z następującymi normami na podstawie dyrektywy WE.
- BG** декларира съответното съответствие съгласно Директива на ЕС и норми за артикул
- LV** paskaidro šādu atbilstību ES direktīvai un standartiem
- LT** apibūdina šį atitikimą EU reikalavimams ir prekės normoms
- RO** declară următoarea conformitate conform directivei UE și normelor pentru articolul
- GR** δηλώνει την ακόλουθη συμμόρφωση σύμφωνα με την Οδηγία ΕΚ και τα πρότυπα για το προϊόν
- HR** potvrđuje sljedeću usklađenost prema smjernicama EU i normama za artikl
- BIH** potvrđuje sljedeću usklađenost prema smjernicama EU i normama za artikl
- RS** potvrđuje sledeću usklađenost prema smernicama EZ i normama za artikal
- RUS** следующим удостоверяется, что следующие продукты соответствуют директивам и нормам ЕС
- UKR** проголошує про зазначену нижче відповідність виробу директивам та стандартам ЄС на виріб
- MK** ја изјавува следната сообразност согласно ЕУ-директивата и нормите за артикли
- TR** Ürünü ile ilgili AB direktifleri ve normları gereğince aşağıda açıklanan uygunluğu belirtir
- N** erklærer følgende samsvar i henhold til EU-direktivet og standarder for artikkel
- IS** Lýsir uppfyllingu EU-reglna og annarra staðla vöru

Electric Hedge Trimmer GLH 690 (Gardenline)

- 87/404/EC_2009/105/EC
- 2005/32/EC_2009/125/EC
- 2006/95/EC
- 2006/28/EC
- 2004/108/EC
- 2004/22/EC
- 1999/5/EC
- 97/23/EC
- 90/396/EC_2009/142/EC
- 89/686/EC_96/58/EC
- 2011/65/EC
- 2006/42/EC
- Annex IV
Notified Body:
Notified Body No.:
Reg. No.:
- 2000/14/EC_2005/88/EC
- Annex V
- Annex VI
Noise: measured $L_{wa} = 93,26$ dB (A); guaranteed $L_{wa} = 96$ dB (A)
 $P = 0,6$ kW; $L/\varnothing = 63$ cm
Notified Body:
- 2004/26/EC
Emission No.:

Standard references: EN 60745-1; EN 60745-2-15; EN 55014-1; EN 55014-2;
EN 61000-3-2; EN 61000-3-3

Landau/Isar, den 03.09.2015

Weichselgartner/General-Manager

Gao/Product-Management

First CE: 14

Art.-No.: 34.033.84 I.-No.: 11015

Subject to change without notice

Archive-File/Record: NAPR013310

Documents registrar: Daniel Prottschka
Wiesenweg 22, D-94405 Landau/Isar



WARRANTY CARD

ELECTRIC HEDGE TRIMMER GLH 690

Your details:

Name _____

Address _____


 _____ E-mail _____

Date of purchase* _____

* We recommend you keep the receipt with this warranty card.

Location of purchase _____


Description of malfunction:

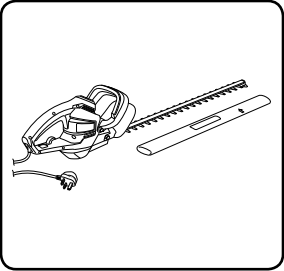

If after contacting the manufacturer you are requested to return the faulty product please return the completed warranty card together with it.

Einhell UK Ltd.
Unit 9, Stadium Court
Wirral International Business Park
Plantation Road
Bromborough
Wirral, CH62 3QG
UNITED KINGDOM
sales@einhell.co.uk

AFTER SALES SUPPORT

 **GB** +44 151 649 1500
IRE +44 1890 946 244

 www.einhell.co.uk

MODEL: GLH 690

PRODUCT CODE: 92979

03/2016

Call charges from your regular landline operator. No additional costs.



Warranty conditions

Dear Customer,

The **ALDI warranty** offers you extensive benefits:

Warranty period: **3 years** from date of purchase.

Costs: Free repair/exchange.
No transport costs.

ADVICE: Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.

In order to make a claim under the warranty, please send us:

- the faulty item together with the original purchase receipt and the completed warranty card.
- the product with all components included in the packaging.

The warranty does not cover damage caused by:

- **Accident** or **unanticipated events** (e.g. lightning, water, fire).
- **Improper use** or **transport**.
- **Disregard of the safety** and **maintenance instructions**.
- Other **improper treatment** or **modification**.

After the expiry of the warranty period, you still have the possibility to have your product repaired at your own expense. If the repair or the estimate of costs is not free of charge you will be informed accordingly in advance.

This warranty does not affect your statutory rights.



Spend a little Live a lot

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
Visit us at www.aldi.com

AFTER SALES SUPPORT



+44 151 649 1500



+44 1890 946 244



www.einhell.co.uk

MODEL: **GLH 690**

PRODUCT CODE: **92979**

03/2016

3

**YEARS
WARRANTY**