



Remove the nozzle from the spray gun before using the suction hose.



Important! Let the High Pressure Cleaner run for 20s without the nozzle attached.



Connect the snap-on connector to the suction connection of the High Pressure Cleaner.



In order to build up the working pressure more quickly and to protect the High Pressure Cleaner, remove the air from the suction hose by filling it with water. Then put the end of the hose which has the filter attached into a bucket filled with water.



Press the trigger until water comes through. Do not run the High Pressure Cleaner for more than 2 minutes without water.



Connect the nozzle back onto the spray gun. The High Pressure Cleaner can now be used.

Art.-Nr.: 41.405.70
I.-Nr.: 11011

Einhell Australia
6/166 Wellington Street
Collingwood VIC 3066
Hotline: 1300 922 271
service.australia@einhell.com