ALWAYS ENSURE THE LAWN MOWER BLADE HAS COMPLETELY STOPPED, REMOVE SAFETY KEY, BATTERY AND GRASS CATCHER PRIOF TO ANY MAINTENANCE.


Removing and Fitting the Blade



Only replace the blade with a genuine Ozito replacement blade, as this will ensure top performance and safety under all conditions.

. To remove the blade screw, hold the blade firmly and with a 13mm socket loosen the blade screw by turning it anti-clockwise.

NOTE: A piece of timber will assist in holding the blade while removing or tightening the blade bolt.

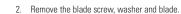

Replace the metal blade after 50 hours mowing or 2 years whichever is sooner. If the blade is cracked or damaged replace it with a new

- 3. To fit the blade, place the blade over the centre hole aligning the lugs
- 4. Then retighten the fastening screw with the universal wrench. The tightening torque should be approx. 25 Nm.

Cleaning, Maintenance and Storage

- Keep all nuts, bolts and screws tight to be sure the lawn mower is in a safe working condition. Check the catcher frequently for wear or deterioration.
- Benlace worn or damaged parts for safety

Keep your distance

- Only use the replacement blade and blade bolt specified for this product
- Be careful during adjustments of the lawn mower to prevent entrapment of the fingers between moving blade and fixed parts of the machine.
- When not in use, the mower should be stored in a dry, frost-free location, out of reach of children. If the housing of the mower requires cleaning, do not use solvents but a moist soft cloth and brush only.
- Frequently check the wheel threads are firm and tight.

Note: Ozito Industries will not be responsible for any damage or injuries caused by the repair of the lawn mower by an unauthorised person or by mishandling of the lawn mower. This tool is designed for DIY use - use in commercial or industrial environments will void the warranty

DESCRIPTION OF SYMBOLS

v	Volts	Hz	Hertz
~	Alternating current	w	Watts
dc/ 	Direct current	Ø	Diameter
mA	Milliamperes	no	No load speed
/min	Revolutions or reciprocation per minute		Safety class II
	Protect the equipment from rain and damp conditions	<u>^</u>	Warning
	Read the directions for use before operating the equipment.		
X	Dispose of batteries correctly .		
96 _{dB}	Guaranteed sound power level: 96 dB		
	Caution: Sharp blades! Pull out the safety plug before carrying out any repair work or if the power cable is damaged. The blades will continue to rotate after the motor is switched off.		

TROUBLESHOOTING

Problem	Cause	Remedy	
Mower is not starting	Possible clogging	Check underneath the mower and clear out as necessary	
	Battery is low in charge	Charge battery	
	Battery not inserted properly	Insert battery pack correctly	
	Grass too long	Raise the cutting height to reduce starting load	
	Safety key not inserted correctly	Fit correctly	
Mower is hard to push	Height of cut too low	Raise cutting height	
nara to pasir	Cutting blade blunt	Replace blade	
	Possible clogging	Check underneath the mower and clear out as necessary	
	Grass too long	Raise the cutting height and walk slower	
	Grass too dense	Raise the cutting height and walk slower and cut more frequently	
	Wet grass	Wait until the grass dries before mowing	
Motor stops	Height of cut too low	Raise the cutting height	
while cutting	Battery has no power	Charge battery	
Mower is not catching	Height of cut too low	Raise the cutting height	
grass properly	Wet grass	Wait until the grass dries before mowing	
Mower vibrating	Bent or damaged blade	Replace blade	

Battery protection system

The tool is equipped with the battery protection system, which helps to ensure a long service life.

The output power automatically cuts off during operation when the tool and/or battery are placed under the following situations:

When the tool is overloaded:

If this occurs, release the start/stop lever safety key and batteries and remove causes of overload, then reinsert the safety key and batteries, then press and hold the lock-off button and pull the start stop lever again to restart.

When the remaining battery capacity becomes low:

Recharge the battery packs.

Note: The indicated capacity may be lower than the actual level during use or

immediately after using the tool **Note:** Always use 2 batteries of same capacity and same charge state with the

Declaration of Conformity

the following product		
Cordless Lawn	Mower PXCLMK-218U / E	Eco Charger PXCG-120U (Ozito)
□ 2014/29/EU □ 2005/32/EC_2009/125/EC □ 2014/35/EU □ 2006/28/EC ☒ 2014/30/EU □ 2014/32/EU □ 2014/53/EC □ 2014/68/EU □ 90/396/EC_2009/142/EC □ 89/686/EC_96/58/EC ☒ 2011/65/EU	X 2006/42/EC Annex IV Notified Body: Notified Body No.: Reg. No.: X 2000/14/EC_2005/88/E Annex V X Annex VI Noise: measured L _{m.} = 9/: Notified Body: SNCH (NE 2012/46/EU Emission No.:	2,05 dB (A); guaranteed L _{wa} = 96 dB (A)
	es: EN 60335-1; EN 603 014-1; EN 55014-2; EN 61	85-2-29; EN 60335-2-77; EN 62233; 000-3-2; EN 61000-3-3
Landau/Isar, den 01.08.2017	Ver /. Weichselgartner/General-Manager	Gao/Product-Management
First CE: 17 ArtNo.: 30.001.87 INo.: 11017 Subject to change without notice		Archive-File/Record: NA Documents registrar: Wiesenweg 22, D-94405 L

TECHNICAL DATA

wa sound power level	96 dB
sound pressure level	79.4 dl
Cuncertainty	
/ibration ah	. ≤ 2.5 r
Cuncertainty	1.5 m/

Sound and vibration values were measured in accordance with the standards EN ISO 3744:1995, EN ISO 11094:1991 and EN ISO 20643:2008.

Keep the noise emissions and vibrations to a minimum.

SPARE PARTS

Great Britain: 0151 294 4488

E-mail: info@ozito-diy.co.uk

Ireland: 1850 882711

Wear parts³

onsumables

Missing parts

Information about the battery

you use the tool for the first time.

6. Do not ignite the battery pack or expose it to fire.

also read the waste disposal information.

has actuated. This may damage the battery pack.

Information on chargers and the charging process

4 Do not use damaged battery chargers

battery pack in storage only after it has been fully charged.

Bunnings Warehouse or Homebase store.

For further information, or any parts visit

www.ozito-diy.co.uk or contact Ozito Customer Service:

the following parts are therefore also required for use as consumables

Category

* Not necessarily included in the scope of delivery!

Spare parts can be ordered from the Special Orders Desk at your local

Please note that the following parts of this product are subject to normal or natural wear and that

A BATTERY AND CHARGER SAFETY WARNINGS

2. For optimum battery performance avoid low discharge cycles. Charge the battery pack frequently.

longer capable of meeting the high power requirements and therefore pose a safety risk.

inside the battery housing without this overheating actually being apparent externally.

3. Keep the battery charger, batteries and the cordless tool out of children's reach.

5. Do not use the supplied battery charger to charge other cordless tools.

other non-typical symptoms (gassing, hissing, cracking,...)

3. Never charge the batteries unsupervised

the battery pack will lead to premature ageing of the battery cells.

3. Store the battery pack in a cool place, ideally at 15°C and charged to at least 40%.

5. Do not throw battery packs into an open fire. There is a risk of explosion!

. The battery pack supplied with your cordless tool is not charged. The battery pack has to be charged before

4. Lithium-ion batteries are subject to a natural ageing process. The battery pack must be replaced at the latest when its capacity falls to just 80% of its capacity when new. Weakened cells in an aged battery pack are no

Do not exhaustively discharge batteries. Exhaustive discharge will damage the battery cells. The most common

cause of exhaustive discharge is lengthy storage or non-use of partly discharged batteries. Stop working as soon as the performance of the battery falls noticeably or the electronic protection system triggers. Place the

8. Protect batteries and the tool from overloads. Overloads will quickly result in overheating and cell damage

9. Avoid damage and shocks. Replace batteries which have been dropped from a height of more than one meter

10. If the battery pack suffers overloading and overheating, the integrated protective cut-off will switch off the

1. Use only original battery packs. The use of other batteries may result in injuries, explosion and a fire risk.

. Please check the data marked on the rating plate of the battery charger. Be sure to connect the battery charge

to a power supply with the voltage marked on the rating plate. Never connect it to a different mains voltage.

. Protect the battery charger and its cable from damage and sharp edges. Have damaged cables repaired

6. In heavy use the battery pack will become warm. Allow the battery pack to cool to room temperature before

to discharged batteries. Frequent insertion of a charged or partly charged battery pack will result in over-charging and cell damage. Do not leave batteries in the charger for days on end.

8. Never use or charge batteries if you suspect that the last time they were charged was more than 12

9. Charging batteries at a temperature below 10°C will cause chemical damage to the cell and may cause a fire.

10. Do not use batteries which have heated during the charging process, as the battery cells may have suffered

11. Do not use batteries which have suffered curvature or deformation during the charging process or which show

12. Never fully discharge the battery pack (recommended depth of discharge max. 80%) A complete discharge of

months previously. There is a high probability that the battery pack has already suffered dangerous damage

7. Do not over-charge batteries. Do not exceed the maximum charging times. These charging times only apply

or which have been exposed to violent shocks without delay, even if the housing of the battery pack appears to be undamaged. The battery cells inside the battery may have suffered serious damage. In this respect, please

equipment for safety reasons, Important. Do not press the ON/OFF switch any more if the protective cut-off

Example

Carbon brushes, Battery

- Only use appliances which are in perfect working order
- Service and clean the appliance regularly. Adapt your working style to suit the appliance.
- Do not overload the appliance.
- Have the appliance serviced whenever necessary.
- Switch the appliance off when it is not in use.



For EU countries only

Never place any electric power tools in your household refuse.

To comply with European Directive 2012/19/EC concerning old electric and electronic equipment and its implementation in national laws, old electric power tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot.

Recycling alternative to the return request: As an alternative to returning the equipment to the manufacturer, the owner of the electrical equipment must make sure that the equipment is properly disposed of if he no longer wants to keep the equipment. The old equipment can be returned to a suitable collection point that will dispose of the equipment in accordance with the national recycling and waste disposal regulations. This does not apply to any accessories or aids without electrical components supplied with the old equipment.

This consignment contains lithium-ion batteries.

In accordance with special provision 188 this consignment is not subject to the ADR regulations. Handle with care. Danger of ignition in case of damage to the consignment package. If the consignment package is damaged: Check and if necessary repackage. For further information contact: 0049 1807 10 20 20 66 (fixed network 14 ct/min, mobile phone max. 42 ct/min) Outside Germany charges will apply instead for a regular call to a landline number in Germany.

Protection from environmental influence

- 1. Wear suitable work clothes. Wear safety goggle-
- 2. Protect your cordless tool and the battery charger from moisture and rain. Moisture and rain can cause dangerous cell damage.
- 3. Do not use the cordless tool or the battery charger near vapours and inflammable liquids.
- 4. Use the battery charger and cordless tools only in dry conditions and an ambient temperature of 10-40°C. 5. Do not keep the battery charger in places where the temperature is liable to reach over 40°C. In particular, do
- not leave the battery charger in a car that is parked in the sunshine.
- 6. Protect batteries from overheating. Overloads, over-charging and exposure to direct sunlight will result in overheating and cell damage. Never charge or work with batteries which have been overheated - replace them mmediately if possible.
- 7. Storage of batteries, battery chargers and cordless tools. Store the charger and your cordless tool only in dry places with an ambient temperature of 10-40°C. Store your lithium-ion battery pack in a cool, dry place at a temperature of 10-20°C. Protect them from humidity and direct sunlight. Only place fully charged batteries in
- storage (charged at least 40%). 8. Prevent the lithium-ion battery pack from freezing. Battery packs which were stored below 0°C for more than
- 60 minutes must be disposed of.
- 9. When handling batteries beware of electrostatic charge; Electrostatic discharges cause damage of the lectronic protection system and the battery cells. Avoid electrostatic charging and never touch the battery



Rechargeable batteries and cordless electric machines and tools contain materials that are potentially harmful to the environment. Never place any cordless electric machines or tools in your household refuse. When cordless electric machines or tools become defective or worn, remove the rechargeable batteries and return them to iSC GmbH (address: Eschenstrasse 6, D-94405, Germany). If the rechargeable batteries cannot be removed return the complete cordless machine or tool.

You can then be sure that the equipment will be correctly disposed of by the manufacturer

When shipping or disposing of batteries and cordless tools, always ensure that they are packed idividually in plastic bags to prevent short circuits and fires.

Do not lose these safety instructions

injury and material damage. sure you know how to switch the tool off in an emergency before operating the too

Save these instructions and other documents supplied with this tool for future reference.

efore you connect the charger to the mains supply make sure that the data on the rating plate are identical to the mains data

is tools charger is double insulated, therefore no earth wire is required

Save all warnings and instructions for future reference. The term "power tool" in the

- warnings refers to your mains-operated (corded) power tool or battery-operated (cord
- 1. Work area safety
- Keep work area clean and well lit. Cluttered or dark areas invite acciden Do not operate power tools in explosive atmospheres, such as in the presence of lammable liquids, gases or dust. Power tools create sparks which may ignite the
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose 2. Electrical safety
- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increa
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the powe
- tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged o When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
- 3. Personal safety Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol
- Use personal protective equipment. Always wear eye protection. Protective equipment such as du
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left
- e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the

This equipment is not designed to be used by people (including children) with limited physical, sensory or mental capacities or those with no experience and/or knowledge unless they are supervised by a person who is responsible

person in how to use the equipment safely. Children must Iways be supervised in order to ensure that they do not play with the equipment

Safety instructions for hand mower

- Before use, check the mains cable and extension cable for signs of damage and aging. If the cable is damaged during operation, disconnect it immediately from the power supply.
- Check the machine for signs of damage before use. Repairs may only be carried out by our service workshop. If unusual vibrations occur during use, switch the machine off immediately and pull the plug. Check the cutters and clean them if necessary. If the machine continues to vibrate, switch it off, disconnect it from the mains supply and send it to our service
- The machine must not be tipped whilst it is being started. Both hands must be on the handle when you start the
- · Worn parts may only be replaced by our service workshop. If necessary contact the service address provided

- Do not touch the cutters until the machine has been disconnected from the mains and the cutters have reached a
- Break the connection with the mains supply (in other words pull the plug out of the socket): whenever you leave the machine unattended;
- before released a blocked cutter: before inspecting or cleaning and before working on the machine:

c) Never mow in the direct vicinity of persons - especially children - or animals

- if a foreign body has been struck whenever the machine starts to vibrate oddly
- Carefully read the instructions for how to operate the machine safely.

a) Read the directions with due care. Familiarize yourself with the operator controls and proper operation of the machine. b) Never allow children or other persons who are not familiar with the operating instructions to use the mower. Contact your local governmental agency for information regarding minimum age requirements for the user.

- d) Always keep in mind that the operator or user of the equipment is responsible for accidents involving other persons and/or their property.

Preliminary measures

- a) Always wear sturdy, non-slip footwear and long trousers when mowing. Never mow barefoot or in sandals. b) Check the ground on which the equipment will be used and remove all objects that could be caught up or violently flung
- Before using the scythe, visually inspect it to ensure that the blade, mounting bolts and the entire cutting a -, ב-, ב מיניק מיני בין אונים אונים בין אונים וויש מינים בין d) Remember that if the machine has several cutting tools, the movement of one cutting tool may result in the other cutting

a) Only mow in broad daylight or in well-lit conditions.

- b) Do not use the machine on wet grass.
- c) Always maintain good footing on inclines. d) Only operate the machine at a walking pace. e) Always mow across hills i.e. never straight up or straight dowr
- g) Do not mow on overly steep inclines. h) Always be extra careful when turning the mower around and when pulling it towards you.

Be particularly careful when you change direction on a slope.

Note: Double insulation does not take the place of normal safety precautions when operating this tool. The insulation system is f

dded protection against injury resulting from a possible electrical insulation failure within the tool. The power supply for this products charger should be protected by a residual current device (rated at 30mA or less). A residual current device reduces the risk of electric shock

Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and **CORDLESS LAWN** If devices are provided for the connection of dust extraction and collection facilities. ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards. 4. Power tool use and care

- Do not force the power tool. Use the correct power tool for your application. The correct power b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be
- nnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such pro-
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to Use the power tool, accessories and tool bits etc. in accordance with these instructions,
- taking into account the working conditions and the work to be performed. Use of the power too Recharge only with the charger specified by the manufacturer. A charger that is suitable for one
- Use power tools only with specifically designated battery packs. Use of any other battery packs may When battery pack is not in use, keep it away from other metal objects, like paper clips.
- coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals toget ler abusive conditions, liquid may be ejected from the battery; avoid contact. If contact
- accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical Have your power tool serviced by a qualified repair person using only identical replacemen
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent of

- i) Switch the mower off, pull the plug and wait until the cutters have reached a complete standstill if you need to tip the mower over, transport it over surfaces other than grass and if the mower has to be moved from and to the area you wish j) Never use the lawn mower if the guards are damaged or without the attached guards, e.g. deflectors and/or grass
- k) Use the ON/OFF switch carefully as described in the manufacturer's instructions. Make sure that your feet are far enough away from the mower blade! I) The lawn mower should not be tilted when the motor is switch on unless it has to be raised for starting purposes. In this
- case, tilt it as little as absolutely necessary and only raise the side opposite to that of the use m) Do not switch on the mower if you are positioned in front of the chute.
- n) Never move your hands or feet toward or under any rotating parts. Keep clear of the chute opening at all times. o) Never lift or carry a lawn mower with the engine running.
- p) Switch off the motor and pull the power plug: before you dislodge any blockages or clogs in the chute. - before carrying out any checks, cleaning, maintenance or other work on the lawn mower.
- if you have struck a foreign object. Examine the mower for signs of damage and carry out any necessary repairs before restarting and continuing to work with the mower.
- if the lawn mower begins to experience exceptionally strong vibrations, immediately switch it off and check it. q) Switch off the mower and pull the plug whenever you leave the mower.

certain type of batteries may pose a fire risk if it is used with other types of batteries

Maintenance and storage

- a) Make sure that all nuts, bolts and screws are tightened securely and that the machine is in safe working condition b) Allow the mower to cool before you put it into an enclosed area. c) To avoid the risk of fi re, keep the motor housing and ventilation slots clear of grass, leaves, oil and grease.
- d) Routinely check the grass basket for signs of wear and impaired functionality e) For your own safety, have worn or damaged parts replaced without delay. f) Take care not to jam your fingers between moving blades and stationary parts of the equipment while you are adjusting
- g) While you are carrying out maintenance work on the blades, remember that the blades can still be moved even if the

CAREFUL HANDLING AND USE OF CORDLESS EQUIPMENT

• Ensure that the equipment is switched off before you insert the battery. Inserting a battery into an electric tool that is Only charge the batteries in chargers that are recommended by the manufacturer. A charger that is designed for a

· Use only the correct batteries in the electric tools. The use of other batteries may result in injuries and a fire risk. Keep unused batteries away from paper clips, coins, keys, nails, screws and other metallic objects that could cause a hort circuit between the contacts. A short circuit between the battery contacts may cause burns or a fire case of incorrect use, fluid may escape from the battery. Avoid contact with it, If you touch it by mistake, rinse the ffected area with water. If you get the fluid in your eyes, also seek medical advice. Leaking battery fluid can cause ski

Additional safety instructions

We pay a great deal of attention to the design of every battery pack to ensure that we supply you with batteries which feature maximum power density, durability and safety. The battery cells have a wide range of safety devices. Each individual cell is initially formatted and its electrical characteristic curves are recorded. These data are then used exclusively to be able to assemble the best possible battery packs.

Important: Analyses confirm that incorrect use and poor care are the main causes of the damage caused by high

Despite all the safety precautions, caution must always be exercised when handling batteries. The following points must be obeyed at all times to ensure safe use. Safe use can only be guaranteed if undamaged cells are used. Incorrect handling can cause cell damage.

2 X 18V LITHIUM ION

ORIGINAL INSTRUCTIONS

18V x 2

25-65mm (5 posi

3,400/min

30 litres

2.5 hours

11 85kg

330mm

SPECIFICATIONS

Cutting Diameter:

Cutting Heights:

No Load Speed:

Grass Catcher:

ozito-diy.co.uk

Charge Time:

Weight:









PXCLMK-218EU

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the customer service number shown. Please note the following terms under which guarantee claims can be made:

These warranty terms regulate additional warranty services which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory quarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.

2. The warranty services only covers defects due to material or manufacturing faults on a product which you have bought from the manufacturer mentioned below are limited to either the rectification of said defects on the product or the replacement of the product, whichever we nrefer

Please note that our devices are not designed for use in commercial, trade or professiona applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the

3. The following are not covered by our guarantee: - Damage to the device caused by a failure to follow the assembly instructions or due to

incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance

Damage to the device caused by abuse or incorrect use (for example overloading the device or the use or unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).

- Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device

4. Your Product is guaranteed for a period of 60 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. Lithium Ion batteries and chargers are

WARRANTY

covered by a 12 month warranty. Warranty excludes consumable parts. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO HE PLACE OF PURCHASE WITH YOUR REGISTER RECEIPT.

Please refer to the restrictions of this warranty concerning wearing parts, consumables and missing parts as set out in the service information in these operating instructions.

CLISTOMER SERVICE HELPLINE GR: 0151 294 4488 IRI · 1850 882711 Ozito-div co uk

OZITO UK Unit 9 Stadium Court, Wirral International Business Park, Plantation Road, Bromborough, Wirral, CH62 3QG

4. Height Adjustment Lever

Cord Clips

6. Grass Catcher Flap

7 Lower Handle


12. Grass Catcher 13. Handle Fastening Screw

14. Lifting Handle

ACCESSORIES

15. Battery Release Tab 16. Battery Charge LED's

17. Battery Charge Indicator Button 20. Charger

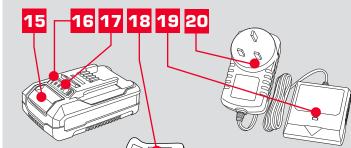

18. Safety Key

19. Charger LED

ONLINE MANUAL



BEFORE USE

Items Supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service centre or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

The lawn mower is intended for private use i.e. for use in home and gardening

Private use of the lawn mower refers an annual operating time generally not exceeding that of 50 hours, during which time the equipment is primarily used to maintain small-scale, residential lawns and home/hobby gardens. Public facilities, sporting halls, and agricultural/forestry applications are excluded.

Important. Due to the high risk of bodily injury to the user, the lawn mower may not be used to trim bushes, hedges or shrubs, to cut scaling vegetation, planted roofs, or balcony-grown grass, to clean (suck up) dirt and debris off walkways, or to chop up tree or hedge clippings. Moreover, the lawn mower may not be used as a power cultivator to level out high areas such as

by the manufacturer.

deemed to be a case of misuse. The user / operator and not the manufacturer


Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

2. ASSEMBLY

Fitting the Lower Handles

SETUP & PREPARATION

. Place the lower handle into the 2. Secure the lower handle with a washer and fastening screw.

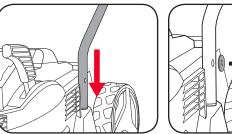

Repeat this process on the other side for the second lower handle.

handle and lower handle.

molehills.

For safety reasons, the lawn mower may not be used as a drive unit for other work tools or toolkits of any kind, unless they have been expressly permitted

The equipment is to be used only for its prescribed purpose. Any other use is will be liable for any damage or injuries of any kind caused as a result of this.

Fitting the Upper Handle

Align the holes in the upper


bolt through the holes from the inside.

2. Place the handle securing lever



end of the upper handle, select the appropriate hole for the height of the user.

3. Place a washer and the handle 4. Lock the handle securing lever to securing lever onto the bolt.

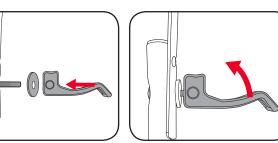

secure in place.


5. Repeat this process for the opposite side.

Securing the Cord

Ensure the cord follows the handle smoothly from the switch to the body of

Locate cord on outside of handle. Push the supplied cord clip over the cord and onto the lower handle to secure in place.


Note: Care should be taken not to impinge cord when folding down the handle.

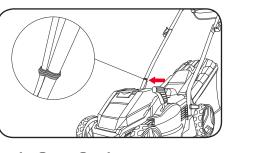

Fitting and Removing the Grass Catcher

- . Lift up the catcher flap with one hand and guide the catcher with your other hand over the two hooks on the mower housing.
- Lower the grass catcher and allow it to sit in place. Lower the catcher flap.



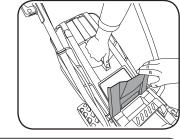




Grass Catcher Indicator

The grass catcher is fitted with an indicator flap at the rear of the catcher to help identify when to empty.

If the indicator flap is down while operating then the grass catcher is full and needs emptying.

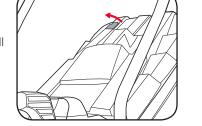


3. BATTERY & CHARGING


THE CHARGER FOR THIS PRODUCT SHOULD BE PROTECTED BY A RESIDUAL CURRENT DEVICE (RATED AT 30mA OR LESS).

Charging your lithium ion battery - Eco Charger

The tools battery has been shipped in a low charge condition, and requires charging prior to use. Allow several cycles of charging and discharging (through use of the tool) for the battery to reach its optimum performance / runtime.

- . Connect the charger into a mains power outlet.
- The charger LED will flash green showing power is being supplied to the charger.

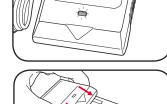

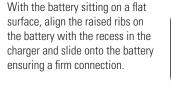

- 4. The charger LED will illuminate red signifying that the battery is charging
- . When removing the charger from the battery, first press the battery release tab, then slide the charger from its position.




Charger LED Indicator				
LED Indicator	Situation			
GREEN (Flashing)	Stand By (no battery pack is inserted)			
RED (Illuminated)	Battery is charging (low charge)			
GREEN (Illuminated)	Battery is fully charged			
RED (Flashing)	Battery or Charger fault			
RED & GREEN (Flashing)	Battery pack is too hot or too cold (remove battery from charger and store at room temperature 20°C. Insert battery again when at correct charging temperature). If this happens again, the battery is defective and needs to be replaced.			

Battery Charge Indicator

The purchased battery is equipped with a battery charge indicator to show the state of the battery charge.

Press the charge indicator button and look to see which LED lights

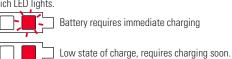






4. INSERTING AND REMOVING BATTERIES


Inserting the Batteries into the Mower

Note: Always use 2 batteries of same capacity and same charge state with the mower.

- and open the battery cover.
- Pull the securing latch forward 2. Slide two batteries of the same capacity and same charge state into the mower aligning the ribs so that they click into place.

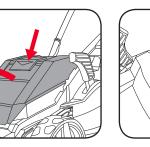


Insert the safety key. 4. Close the battery cover. (If the mower is not going to be used immediately, do not insert the safety

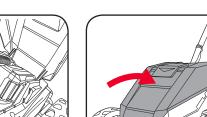



Removing the Batteries from the Mower

. Pull the securing latch forward and open the battery cover.

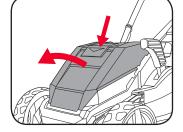

. Press the battery release tab and 3. Close the battery cover. remove the batteries.

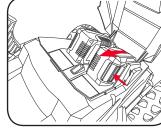

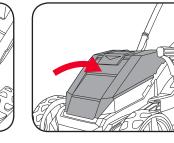


5. CONTROLS


Switching On and Off

To prevent accidental start up, the mower is fitted with a dual action switch.

- . Press and hold the lock-off
- 2. Pull the start/stop lever towards the handle to start the mower and then release the lock-off

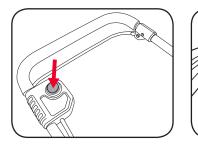

3. Release the start/stop lever to stop the mower.

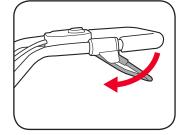

Adjusting the Cutting Height

The height adjustment lever provides 5 cutting heights from 25mm to 65mm.

- I. Push lever downwards into the mower body.
- Adjust until the required cutting height is selected. Release lever and check that it is
- securely seated in the required cutting height.




6. MOWING


- While using your lawn mower always wear substantial closed, heavy footwear and long trousers
- Make sure the lawn is clear of sticks, stones, wire and debris; they could be thrown by the blade.
- Before using the lawn mower and after any impact, check for signs of wear or damage and repair as necessary.
- Replace a worn or damaged blade together with the blade bolt to preserve

Lawn Mowing Tips

Start mowing the edge of the lawn and work along making sure to overlap each pass by a few centimetres.

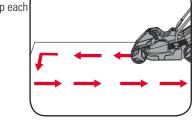

For optimum grass collection, always mow in a straight line; do not swing the lawn mower from side to side.

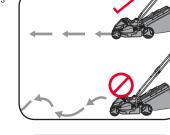

When mowing long grass be sure to not overload the motor. First cut with the highest cutting height and then to the desired height. This will help reduce the load.



DO NOT MOW WITH POOR VISIBILITY CONDITIONS, IN THE RAIN OR WHEN GRASS IS

