

GARDENLINE®

CORDLESS CHAINSAW GL-CC 36 Li

QUICK START GUIDE

Easy steps to getting started.

1. Ensure all items, including your manual are removed from the packaging before discarding.
2. Assemble the cordless chainsaw as per the instruction manual. Refer to Section 6 in the instruction manual for more detail.
3. Ensure the battery is charged. Refer to Section 6 in the instruction manual for further detail on the charging process.
4. Fill the chainsaw with chain oil (not included). Refer to Section 6 of the Instruction manual for further details.
5. To start the chainsaw, press the safety switch (9) and then the On/Off switch (8). You can then release the safety switch (9). To switch off the saw, release the On/Off switch (8).
6. For practical advise on how to use the chainsaw, please refer to Section 8 of the instruction manual.
7. **IF YOU ARE IN ANY DOUBT PLEASE REFER TO THE DETAILED INSTRUCTIONS WITHIN OUR MANUAL**

