



Einhell

EXPERT

POWER X-CHANGE

Garden Tool Kit

FREELEXO 500 BT Kit

Item No.: 3413945

Ident No.: 21032

Bar Code: 4006825655315

The Einhell FREELEXO 500 BT Kit robot lawnmower is a member of the high-performance Power X-Change family which provides unlimited flexibility within the system family. It is controlled via app by Bluetooth and the settings of the robot lawnmower can be set to individual requirements. In addition, it has an intuitive keypad. Using the app the operating time of the Einhell FREELEXO can be precisely programmed for each specific day. The FREELEXO 500 BT Kit includes everything needed for installation and operation of an Einhell robotic lawnmower of the FREELEXO Series. It is suitable for a lawns up to 500 m² and includes a 2,5 Ah battery, 130 m wire, 190 fastening hooks, 3 blades and 4 connecting clamps, a fast charger and a lawn trimmer.

Features & Benefits


- PXC system battery - can also be used for other PXC products
- App using Bluetooth - user-defined robot lawnmower control
- Multi area mowing - for complex gardens
- Intuitive keypad
- Programmable operating time for each specific day
- Safety sensor system thanks to impact, tilt and lift sensors
- Anti-theft protection in form of PIN code and warning signal
- Rain sensor
- Cutting height adjustment (20-60mm)
- Suitable for slopes up to 35%
- Carry-handle for comfortable transport
- Automatic return to charging unit and charging
- Lawn areas up to 500 m²
- Incl. 2,5 Ah PXC Battery
- Incl. fast charger
- Incl. cordless lawn trimmer GC-CT 18-24 Li P
- Wire 130 m
- Fastening hooks 190 pcs.
- Blades 3 pcs.
- Connecting clamps 4 pcs.



Technical Data

Logistic Data

- Product weight (kg)	14.8
- Gross weight (kg)	21.2
- Dimensions single packaging	837 x 521 x 322 mm
- Pieces per export carton	1 Pieces
- Gross weight export carton	21.2 kg
- Dimensions Export Carton	845 x 525 x 326 mm
- Container quantity (20"/40"/40"HC)	189 406 464

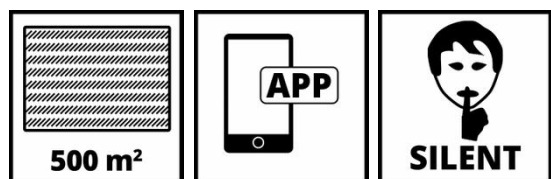

Available as special accessories

	Spare Blade-set PXC Trimmer Lawn Trimmer Accessory Item No.: 3405730 Bar Code: 4006825560404 Einhell Grey		18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210 Einhell Accessory
	Spare Blade-box PXC trimmer Lawn Trimmer Accessory Item No.: 3405736 Bar Code: 4006825646283 Einhell Accessory		18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory
	18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory		18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory
	18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory		Spare blades 12 psc Robot Lawn Mower Accessory Item No.: 3414020 Bar Code: 4006825648775 Einhell Accessory
	Perimeter wire 50 m Robot Lawn Mower Accessory Item No.: 3414021 Bar Code: 4006825648782 Einhell Accessory		Connecting clamps 4 psc Robot Lawn Mower Accessory Item No.: 3414022 Bar Code: 4006825648799 Einhell Accessory
	Fastening hook 100 psc Robot Lawn Mower Accessory Item No.: 3414023 Bar Code: 4006825648805 Einhell Accessory		2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory
	18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory		Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory
	18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory		2x 5,2Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512108 Bar Code: 4006825652376 Einhell Accessory
	Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory		robot lawn mower garage Robot Lawn Mower Accessory Item No.: 3414024 Bar Code: 4006825654417 Einhell Accessory
	18V Battery Charger 3,0A - PXC Charger Item No.: 4514095 Bar Code: 4006825655292 Einhell Accessory		Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory
	2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit Item No.: 4512112 Bar Code: 4006825655766 Einhell Accessory		2x 18V 5,2Ah PXC-Twinpack Battery Item No.: 4511526 Bar Code: 4006825656695 Einhell Accessory
	5,2Ah & 4A Fastcharger PXC-Starter-Kit Item No.: 4512114 Bar Code: 4006825656787 Einhell Accessory		Cleaning Kit Robot Lawn Mower Accessory Item No.: 3414025 Bar Code: 4006825657951 Einhell Accessory
	Repair Kit Robot Lawn Mower Accessory Item No.: 3414026 Bar Code: 4006825657968 Einhell Accessory		2x18V 4,0Ah PXC-Twinpack CB 1 Battery Item No.: 4511489 Bar Code: 4006825638578 Einhell Accessory
	18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory		18V 4,0Ah Power-X-Change Plus Battery Item No.: 4511553 Bar Code: 4006825660869 Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory

Power X-Caravan Charger 3A
Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory