



Einhell

CLASSIC



Cordless Jig Saw

TC-JS 18 Li - Solo

Item No.: 4321209

Ident No.: 21031

Bar Code: 4006825640052

The Einhell jigsaw is flexible and is used for quick and precise cutting. Thanks to cordless freedom it can be used far away from the nearest socket outlet in the home, workshop or garage. As a member of the PXC system family, the rechargeable batteries can be used in all the devices from the series. For exact cutting it is really smooth in operation, and for fast cutting there is a selectable pendulum action. The universal blade holder enables the blade to be changed without tools. For optimum visibility there is a dust blow-off function. The integrated plastic sliding element protects sensitive workpieces. The product is supplied complete with a quality saw blade for wood. This product comes without a battery and charger.

Features & Benefits

 
 
- Member of the Power X-Change family
- Very smooth operation for exact cutting
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- Integrated plastic sliding element for sensitive workpieces
- Complete with quality saw blade for wood
- Supplied without battery and charger (available separately)

Technical Data

| | |
|--------------------------------|------------------------|
| - No-load speed (idle speed) | 2700 min ⁻¹ |
| - Stroke height | 20 mm |
| - Cutting depth in wood | 70 mm |
| - Cutting depth in plastic | 10 mm |
| - Cutting depth in steel | 8 mm |
| - Max. bevel cuts | 45 ° |
| - Toolless saw blade change | yes |

Logistic Data

| | |
|--------------------------------------|-------------------|
| - Product weight | 1.62 kg |
| - Gross weight single packaging | 1.87 kg |
| - Dimensions single packaging | 240 x 90 x 215 mm |
| - Pieces per export carton | 5 Pieces |
| - Gross weight export carton | 11 kg |
| - Container quantity (20"/40"/40"HC) | 4910 10000 |

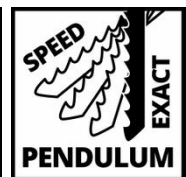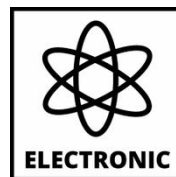

Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Akku Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change Akku Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory




Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



Power X-Boostcharger 6A Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



 5,2 Ah Power X-Change Plus Akku Battery
Item No.: 4511437
Bar Code: 4006825616606



Stich-Sägeblatt Box 10-tlg. T Stichsäge-Zubehör
Item No.: 49617350
Bar Code: 4009316173503
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,5Ah Power X-Change Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1 Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 3,0 Ah Power-X-Change 2 Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



3,0 Ah Power X-Change Plus Akku Battery
Item No.: 4511501
Bar Code: 4006825644197



St-Sägebl.Set 4tg Ho/Met Akku Stichsäge-Zubehör
Item No.: 49625427
Bar Code: 4009316254271
Einhell Accessory



2,0 Ah Power X-Change Akku Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory