



# Einhell

# EXPERT

## POWER X-CHANGE

Cordless Coffee Maker

**TE-CF 18 Li-Solo**

**Item No.: 4609990**

Ident No.: 21013

Bar Code: 4006825672510

With the Einhell cordless coffee maker TE-CF 18 Li-Solo, you can enjoy fresh coffee anywhere. As part of the Power X-Change family, it can be used in combination with any battery or charger from the system. The cordless coffee maker enables quick preparation of filter coffee or commercial coffee pads in about 5 minutes, has a removable 240 ml water tank and comes with a dustproof stainless-steel coffee cup with lid. Lightweight and portable thanks to its carrying handle, it is perfect for on the go. Its rubber feet ensure stability. It comes with a measuring spoon, a ground coffee container with filter, and a coffee pad holder. Comes without battery or charger.

## Features & Benefits

- Member of the Power X-Change family, 1 x 18 V battery required
- 2-in-1: filter coffee machine and coffee pad machine in one
- Coffee making at max. 80 °C for optimum enjoyment
- Removable 240 ml water tank for one cup of coffee
- For cups up to 90 mm height
- Easy transport thanks to integrated handle
- Cup holder prevents the cup from falling out during transport
- Rubber feet for secure standing
- Incl. stainless steel coffee cup with dust-proof lid
- Incl. dosing spoon
- Incl. coffee powder container with 1 x coffee filter
- Incl. container for commercially available coffee pads
- Supplied without battery and charger (sold separately)




## Technical Data

- Tank volume 0.24 L

## Logistic Data

- Gross weight (kg) 2.29
- Product weight (kg) 1.17
- Dimensions single packaging 322 x 185 x 267 mm
- Pieces per export carton 4 Pieces
- Gross weight of export carton 9.7 kg
- Dimensions export carton 655 x 380 x 282 mm
- Container quantity (20"/40"/40"HC) 1632 | 3360 | 3780

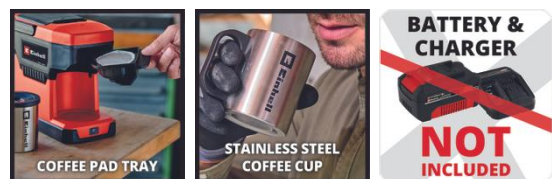

## Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery  
Item No.: 4511502  
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



Power X-Fastcharger 4A Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



Power X-Car Charger 3A Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



Power X-Boostcharger 6A Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



5,2 Ah Power X-Change Plus Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Coffee Cup TE-CF 18 Li-Solo Coffee Machine/Water Cooker Ac  
Item No.: 4609991  
Bar Code: 4006825672831  
Einhell Accessory



2,0 Ah Power X-Change Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 2,5Ah Power X-Change Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



Power X-Twincharger 3A Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1 Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2 Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



3,0 Ah Power X-Change Plus Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory