

WORKZONE®



ELECTRIC STAPLE GUN OPERATING INSTRUCTIONS - USER GUIDE

Now you have purchased a Workzone® product you can rest assured in the knowledge that as well as your 3 year parts and labour guarantee you have the added peace of mind of dedicated helplines and web support.

AFTER SALES SUPPORT



GB 0151 649 1500

IRE 1890 946244



www.einhell.co.uk

MODEL: WZEN 20, 03/2015

Contents

Page

3	Welcome
4-8	General Information and Safety Instructions
9	Assembly and Parts List
10-11	Getting Started
12	Features
13-17	Instructions
18	FAQ
19	Warranty Card



Welcome

1

Congratulations!

You have made an excellent choice with the purchase of this quality Workzone® product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Workzone® product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our Helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.



General Information and Safety Instructions

2

CAUTION: Read all safety regulations and instructions. Any failures made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury. Keep all safety regulations and instructions in a safe place for future use.

The term 'electric tool' used in the safety regulations refers to electric tools operated from the mains power supply (with a power cable) and to battery operated electric tools (without a power cable).

Workplace safety

- Keep your work area clean and well illuminated. Untidy or unlit work areas can result in accidents.
- Do not use this tool in a potentially explosive environment containing combustible liquids, gases or dust.
- Electric tools generate sparks, which can in turn ignite dust or vapours.
- Keep children and other persons away from the electric tool while it is being used.
- Stay alert, allowing yourself to get distracted can cause you to lose control of the tool.

Electrical safety

- The tool's connector plug must be able to fit into the socket outlet. Do not modify the plug in any way! Do not use adapter plugs in conjunction with electrically grounded tools. Unmodified plugs and matching socket outlets reduce the risk of an electric shock.
- Avoid touching grounded surfaces, such as those of pipes/tubes, heaters, cookers and refrigerators.
- There is an increased risk of getting an electric shock if you are electrically grounded.
- Keep the tool away from rain and moisture/wet conditions.
- Penetration of water into an electric tool increases the risk of an electric shock.

General Information and Safety Instructions

2

- Do not use the cable to carry the tool, hang it up or pull the plug out of the socket. Keep the cable away from sources of heat, oil, sharp edges and moving tool parts.
- Damaged or tangled cable increases the risk of an electric shock.
- If you intend to use an electric tool outdoors, ensure that you only use an extension cable that is approved for outdoor applications. Using an extension cable that is approved for outdoor applications reduces the risk of an electric shock.
- If operation of the electric tool in a damp environment can not be avoided, use an earth leakage circuit-breaker. The earth-leakage circuit-breaker reduces the risk of an electric shock.

Personal safety

- Be alert, work conscientiously and exercise appropriate caution when using the electric tool. Do not use the tool if you are tired or are under the influence of drugs/medication or alcohol. One moment of carelessness or lack of attention when using the electric tool can cause serious bodily injury!
- Always wear personal protective equipment (PPE), including safety goggles. Wearing personal protective equipment such as protective headgear and ear defenders reduces the risk of sustaining an injury.
- Make sure that the tool cannot start up accidentally. Ensure that the electric tool is switched off before you connect the tool to the power supply, or pick up or carry the tool. Physically touching the switch with your finger when carrying the tool or connecting the tool to the power supply switched on can lead to accidents.
- Avoid abnormal working postures. Make sure you stand squarely and keep your balance at all times. This way, you will be able to have better control over the tool in unexpected situations. Wear suitable clothes. Never wear loose fitting clothes or jewellery. Keep hair, clothes and gloves away from moving parts. Loose clothing, dangling jewellery and long hair can be caught by moving parts.



General Information and Safety Instructions

2

Using, and the treatment of electric tools

- Do not overload your tool. Only use suitable electric tools to perform your work. Using the right electric tool allows you to work better and more safely within the tool's quoted capacity range.
- Do not use an electric tool with a defective ON / OFF switch. An electric tool that can no longer be switched on or off is dangerous and must be repaired.
- Do not use this tool if the Power Cord is damaged. Have the cord repaired by an authorised specialist. Do not attempt to repair the cord yourself before making any adjustments to the tool, changing accessories or putting the tool down. This precaution eliminates the possibility of inadvertently starting the tool.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Supervise young children to ensure they do not play with the appliance.
- Take good care of your tool. Check that moving parts properly function and do not jam, that parts are not broken off or damaged in any way and that the tool can be used to its full capacity. Have damaged parts repaired prior to using the tool. The cause of many accidents can be traced back to poorly maintained electric tools.
- Keep your blades sharp and clean. Properly maintained blades with sharp edges jam less frequently and are easier to use.
- Make sure to use electric tools, accessories, attachments, etc. in accordance with these instructions. Take the conditions in your work area and the job in hand into account. Using electric tools for applications other than those intended can lead to dangerous situations.

Service

- Have your tool repaired only by authorized specialists using original replacement parts. This will ensure that your tool remains safe to use.

General Information and Safety Instructions

2

Additional safety instructions

- Always assume that the tool contains fasteners. Careless handling of the tacker can result in unexpected firing of fasteners and personal injury.
- Do not point the tool towards yourself or anyone nearby. Unexpected triggering will discharge the fastener causing an injury.
- Do not actuate the tool unless the tool is placed firmly against the workpiece. If the tool is not in contact with the workpiece, the fastener may be deflected away from your target.
- Disconnect the tool from the power source when the fastener jams in the tool. While removing a jammed fastener, the tacker may be accidentally activated if it is plugged in.
- Do not use this tacker for fastening electrical cables. It is not designed for electric cable installation and may damage the insulation of electric cables thereby causing electric shock or fire hazards.
- Always remove the plug from the wall socket whenever the tool is not being used, before carrying out any maintenance work or changing the staples or nails.
- Wear the necessary Personal Protective Equipment (PPE), in particular safety goggles and ear defenders, when working with the Electric Staple Gun.
- Always keep the magazine and all guides free of foreign bodies. Before using the tool always make sure that there are no foreign bodies in the magazine or guides.
- Make sure that the tool is kept clean and also that the air vents are free and clean.
- Never use the tool with staples or nails which are not suitable for it. The use of other staples and nails may cause injury or damage the tool. Read the operating instructions for notes on which staples and nails are suitable.
- If the Electric Staple Gun is in use over a long period, the tool may heat up as it is designed for intermittent operation. After using the tool for a long period, remove the plug from the wall socket and allow the tool to cool.
- When working with the Electric Staple Gun, keep your fingers and other body parts away from the stapler head.



General Information and Safety Instructions

2

- Never use the stapler to fasten electric cables.
- Never allow children to use the Electric Staple Gun.
- Do not use the tool when other persons or animals are in the near vicinity. Never shoot staples or nails into the air. Staples and nails shot at short distance can lead to serious injuries.
- Make sure that there are no other persons in the direct vicinity when working with the Electric Staple Gun.
- Use the Electric Staple Gun only for joining soft materials such as wood or fabrics.
- Take special care when working with thin materials. Make sure that the staples or nails are not too long or they may stick out of the workpiece or may even pass all the way through. Make sure that no part of your body is on the other side of the workpiece.
- Make sure that the workpiece is held securely by a clamping device or a vice. Never hold the workpiece you wish to staple simply in your hands. Always guide the power cable away from the back of the tool. Make sure not to staple the power cable of the Electric Staple Gun by accident.
- Never leave the loaded tool unsupervised.
- Never operate the Electric Staple Gun without staples or nails.
- If a staple or nail becomes jammed in the feed shaft, remove the plug from the wall socket and remove the jammed staple or nail as described in the operating instructions.
- Do not lose these safety regulations.

IMPORTANT: Do not lose these safety regulations.

CAUTION: Read the operating instructions to reduce the risk of inquiry.



Read the operating instructions to reduce the risk of inquiry.



Wear safety goggles.

 
 
 


Wear ear defenders.



Assembly and Parts List

3

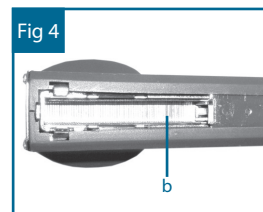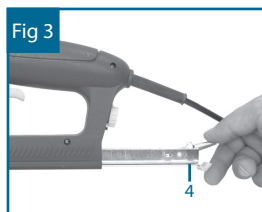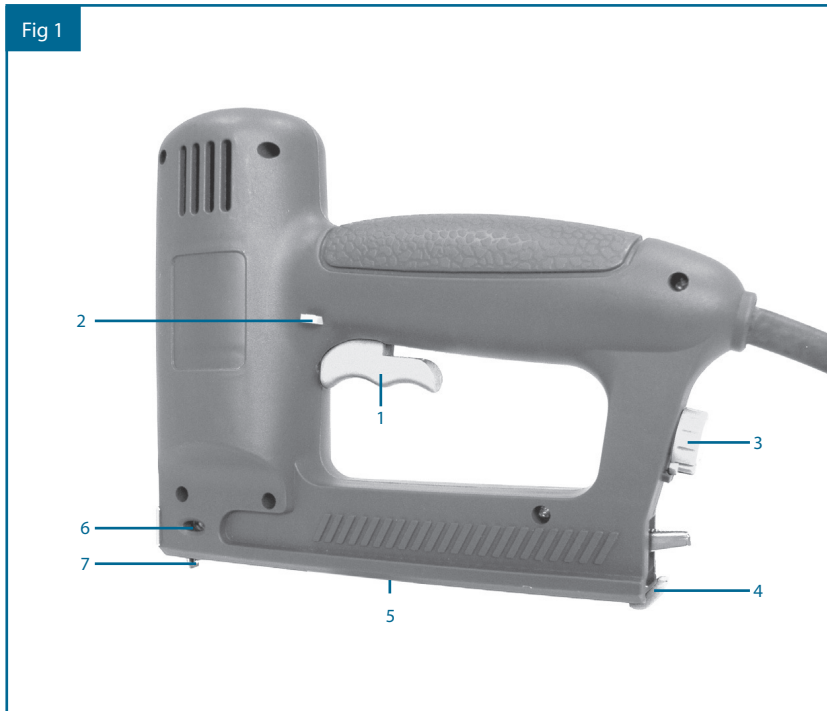

Getting Started

4

Layout (Fig. 1/2)

1. Trigger
2. Trigger interlock
3. Stapling controller
4. Magazine slide
5. Magazine
6. Filling level indicator
7. Electric Staple Gun head

IMPORTANT: When using equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating manual with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, give them these operating instructions as well. We accept no liability for damage or accidents which arise due to non-observance of these instructions and the safety information.

Proper use

- The Electric Staple Gun is designed for stapling and fastening textiles, leather and wood with the appropriate staples and nails. The Electric Staple Gun is designed for intermittent operation. If operated continuously, the stapler will become hot and the increasing heat will reduce its performance. When hot, interrupt your work and allow the stapler to cool.
- The machine is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.
- Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

Getting Started

4

CAUTION: Read all safety regulations and instructions. Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury. Keep all safety regulations and instructions in a safe place for future use.

CAUTION:

- For your own safety, use only staples and nails listed in the directions for use. The use of staples and nails other than those listed in the directions for use may result in risk of injury.
- Be sure to pull out the power plug whenever the tool is not being used, each time before carrying out any maintenance, and whenever you want to change the staples or nails!
- It is important to wear suitable protective clothing, in particular safety goggles and ear defenders, when working with the Electric Staple Gun.



Technical data

Supply voltage 230 V ~ 50 Hz

Power Consumption

Shots per minute	20
Staple width	11.2 - 11.4 mm
Staple length	8 - 16 mm
Staple thickness	1.16 - 1.26 mm
Nail length	14 - 16 mm
Nail thickness	1.16 - 1.26 mm
Weight	1.2 kg
Protection class	II/ 

Sound and vibration

Sound and vibration values were measured in accordance with EN 60745.

L_{pA} sound pressure level	76 dB(A)
K_{pA} uncertainty	2.5 dB
L_{WA} sound power level	87 dB(A)
K_{WA} uncertainty	2.5 dB

Wear ear defenders

The impact of noise can cause damage to hearing. Total vibration values determined in accordance with EN 60745.

Vibration emission value a_h	4.619 m/s ²
K uncertainty	1.5 m/s ²

WARNING: The specified vibration value was established in accordance with a standardized testing method. It may change according to how the electric equipment is used and may exceed the specified value in exceptional circumstances. The specified vibration value can be used to compare the equipment with other electric power tools. The specified vibration value can be used for initial assessment of a harmful effect.

Keep the noise emissions and vibrations to a minimum

- Only use appliances which are in perfect working order.
- Service and clean the appliance regularly.
- Adapt your working style to suit the appliance.
- Do not overload the appliance.
- Have the appliance serviced whenever necessary.
- Switch the appliance off when it is not in use.
- Wear protective gloves.

Residual risks

Even if you use this electric power tool in accordance with instructions, certain residual risks cannot be ruled out. The following hazards may arise in connection with the equipment's construction and layout:

- Lung damage if no suitable protective dust mask is used.
- Damage to hearing if no suitable ear protection is used.
- Health damage caused by hand-arm vibrations if the equipment is used over a prolonged period or is not properly guided and maintained.

Starting up

Inserting the staples (Fig. 2-4)

- Remove the plug from the wall socket.
- Press the lever (a) on the magazine slide (4) downwards (Fig. 2).
- Pull the magazine slide (4) to the rear as far as the stop (Fig. 3).
- Load the magazine with staples or nails (Fig. 4).

When you load the magazine with nails, make sure that these rest against the left inner side (b) of the magazine. Then slide the magazine slide back in until it stops and snaps noticeably into place.

IMPORTANT: It must be possible to move the magazine slide without applying much force. Watch out for jammed staples or nails.

Setting the stapling force (Fig. 1)

You can pre-select the stapling force of the Electric Staple Gun to suit the length of the staples or nails used and the strength of the material. To do so, set the stapling force control (3) to the desired force. (Rotate the wheel clockwise to increase the force, or counter-clockwise to decrease the force). The ideal stapling force is best determined by carrying out a trial on a test piece.

Operation (Fig. 1/5/6)

Before starting your work, always check the filling level indicator (6) to see if the magazine (5) contains staples or nails and is properly closed with the magazine slide (4).

Triggering shots

The built-in trigger interlock prevents the Electric Staple Gun from being triggered accidentally. Triggering is only possible as follows:

- Push the trigger interlock (2) into the 'ON' position.
- Press the head of the Electric Staple Gun against the material and operate the trigger (1).
- If the Electric Staple Gun is no longer in operation – even for short periods – push the trigger interlock (2) into the 'OFF' position to prevent unintentional operation.

Inserting staples

Load the staples into the magazine as shown in Fig. 5.

Inserting nails

Load the nails into the magazine as shown in Fig. 6.

Stapling textiles, materials, leather, etc.

Press the head of the Electric Staple Gun against the object where you want to staple and operate the trigger.

Stapling wood strips

Use only nails to staple wood strips. Do not press the Electric Staple Gun too firmly against the wood strip or you might damage the surface.

Filling level indicator (Fig. 1)

The filling level indicator (6) shows you if there are still enough staples or nails in the magazine (5). If necessary, refill the magazine (5) as described above. Avoid operating the trigger (1) if there are no staples or nails in the magazine (5).

Cleaning, maintenance and ordering of spare parts

Always remove the mains power plug from the wall socket before starting any cleaning work.

Cleaning

- Keep all safety devices, air vents and the housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.
- We recommend that you clean the tool immediately after you use it.
- Clean the tool regularly with a dampened cloth and some soft soap. Do not use cleaning agents or solvents; these may be aggressive to the tool's plastic parts. Ensure that no water can get into the interior of the tool.

Maintenance

There is a risk of staples becoming jammed particularly when the Electric Staple Gun is held at any angle when operated. In this case, switch the tool off immediately and pull the power plug.

IMPORTANT: Always remove the mains power plug from the wall socket before doing any work on the Electric Staple Gun.

Removing jammed staples (Fig. 2/3/7)

Pull the magazine slide (4) to the rear as far as the stop (Fig. 2/3). Carefully remove the jammed staples with a pair of pliers. Push the magazine slide (4) back in until it stops and snaps noticeably into place.

- There are no parts inside the equipment which require additional maintenance.

Ordering spare parts

Please quote the following data when ordering replacement parts:

- Type of machine: WZEN 20
- Article number of the machine: 42.578.62
- Identification number of the machine: 11024
- Replacement part number of the part required For our latest prices and information please go to www.einhell.co.uk



Disposal and recycling

At the end of its working life, do not throw this appliance out with your household rubbish. The European Directive 2012/19/EC on Waste Electrical and Electronic Equipment (WEEE) requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out 'Wheeled Bin' symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected.

Contact your local authority for information concerning the correct disposal of your old appliance.

ISC GmbH · Eschenstraße 6 · D-94405 Landau/Isar



Declaration of Conformity

- Ⓒ erklårt følgende Konformität gemäß EU-Richtlinie und Normen für Artikel
- Ⓒ explains the following conformity according to EU directives and norms for the following product
- Ⓒ déclare la conformité suivante selon la directive CE et les normes concernant l'article
- Ⓒ dichiara la seguente conformità secondo la direttiva UE e le norme per l'articolo
- Ⓒ verklaart de volgende overeenstemming conform EU richtlijn en normen voor het product
- Ⓒ declara la siguiente conformidad a tenor de la directiva y normas de la UE para el artículo
- Ⓒ declara a seguinte conformidade, de acordo com a directiva CE e normas para o artigo
- Ⓒ attesterer følgende overensstemmelse i medfør af EU-direktiv samt standarder for artikel
- Ⓒ förklarar följande överensstämmelse enl. EU-direktiv och standarder för artikeln
- Ⓒ vakuuttaa, että tuote täyttää EU-direktiivin ja standardien vaatimukset
- Ⓒ teendab toote vastavust EL direktiivile ja standarditele
- Ⓒ vydává následující prohlášení o shodě podle směrnice EU a norem pro výrobek
- Ⓒ potrjuje sledečo skladnost s smernico EU in standardi za izdelek
- Ⓒ vydává následující prohlášení o zhode podľa smernice EÚ a noriem pre výrobok
- Ⓒ a cikkekhöz az EU-irányvonál és Normák szerint a következő konformitást jelenti ki
- Ⓒ deklaruje zgodność wymienionego poniżej artykułu z następującymi normami na podstawie dyrektywy WE.
- Ⓒ декларира съответното съответствие съгласно Директива на ЕС и норми за артикул
- Ⓒ paskaidro šādu atbilstību ES direktīvai un standartiem
- Ⓒ apibūdina šį atitikimą EU reikalavimams ir prekės normoms
- Ⓒ declară următoarea conformitate conform directivei UE și normelor pentru articolul
- Ⓒ δηλώνει την ακόλουθη συμμόρφωση σύμφωνα με την Οδηγία ΕΚ και τα πρότυπα για το προϊόν
- Ⓒ potvrđuje sljedeću usklađenost prema smjernicama EU i normama za artikl
- Ⓒ potvrđuje sljedeću usklađenost prema smjernicama EU i normama za artikl
- Ⓒ potvrđuje sledeću usklađenost prema smernicama EZ i normama za artikl
- Ⓒ следующим удостоверяется, что следующие продукты соответствуют директивам и нормам ЕС
- Ⓒ проголошує про зазначену німче відповідність виробу директивам та стандартам ЄС на виріб
- Ⓒ ja izjauva slednata soobriznost согласно EУ-директивата и нормите за артикли
- Ⓒ Ürünü ile ilgili AB direktifleri ve normları gereğince aşağıda açıklanan uygunsluğu belirtir
- Ⓒ erklærer følgende samsvar i henhold til EU-direktiv og standarder for artikkel
- Ⓒ Lýsir uppfyllingu EU-reglna og annarra staða vöru

Electric Staple Gun WZEN 20 (Workzone)

- | | |
|---|--|
| <input type="checkbox"/> 87/404/EC_2009/105/EC | <input checked="" type="checkbox"/> 2006/42/EC |
| <input type="checkbox"/> 2005/32/EC_2009/125/EC | <input type="checkbox"/> Annex IV
Notified Body:
Notified Body No.:
Reg. No.: |
| <input type="checkbox"/> 2006/95/EC | |
| <input type="checkbox"/> 2006/28/EC | |
| <input checked="" type="checkbox"/> 2004/108/EC | <input type="checkbox"/> 2000/14/EC_2005/88/EC |
| <input type="checkbox"/> 2004/22/EC | <input type="checkbox"/> Annex V |
| <input type="checkbox"/> 1999/5/EC | <input type="checkbox"/> Annex VI
Noise: measured L _{WA} = dB (A); guaranteed L _{WA} = dB (A)
P = KW; L/G = cm
Notified Body: |
| <input type="checkbox"/> 97/23/EC | |
| <input type="checkbox"/> 90/396/EC_2009/142/EC | |
| <input type="checkbox"/> 89/686/EC_96/58/EC | <input type="checkbox"/> 2004/26/EC
Emission No.: |
| <input checked="" type="checkbox"/> 2011/65/EC | |

Standard references: EN 60745-1; EN 60745-2-16;
EN 55014-1; EN 55014-2; EN 61000-3-2; EN 61000-3-3

Landau/Isar, den 24.09.2014

Weichselgartner/General Manager

Yang/Product-Management

First CE: 07
Art.-No.: 42.578.62 I.-No.: 11024
Subject to change without notice

Archive-File/Record: NAPR010791
Documents registrar: Protschka Daniel
Wiesenweg 22, D-94405 Landau/Isar



<p>How do I claim for a warranty matter?</p>	<ol style="list-style-type: none"> 1. Fill in the Warranty card and send to the Einhell UK Ltd Address. 2. Contact Einhell UK Ltd, using one of the Telephone numbers for AFTER SALES SUPPORT. 3. Or contact via the Einhell UK Ltd website.
<p>How do I obtain spare parts (not covered by the warranty)?</p>	<p>Make sure you have the information from the product data label, or page 15 of this user guide, and then:</p> <ol style="list-style-type: none"> 1. Contact Einhell UK Ltd, using one of the Telephone numbers for AFTER SALES SUPPORT, and choose the option for Spare Parts. 2. Or contact via the Einhell UK Ltd website, where spares information & prices are available.
<p>What do I do if I accidentally cut the mains cable?</p>	<p>To avoid danger, get an electrician or suitably qualified person to:</p> <ol style="list-style-type: none"> 1. Fit a waterproof connector to re-join the cable. 2. Or replace the mains cable into the unit.

Warranty Card

8

WORKZONE® ELECTRIC STAPLE GUN

IMPORTANT!

KEEP THIS FORM SAFE: Only complete and return this form to the address below in the unlikely event of a warranty claim, if you are requested by the manufacturer to return the item for replacement. Then please complete this form and send it together with your receipt (proof of purchase) to the address below.

Your details:

Name _____

Address _____

 _____ Email _____

Date of purchase* _____

*We recommend you keep the receipt with this warranty card

Location of purchase _____






Description of malfunction:

Return your completed warranty card to:

Einhell UK Ltd
Unit 9, Stadium Court
Wirral International Business Park
Plantation Road
Bromborough
CH62 3QG

www.einhell.co.uk/warranty

AFTER SALES SUPPORT

  0151 649 1500  www.einhell.co.uk
  1890 946244

MODEL: WZEN 20, 03/2015

Please add the Ser.-Nr. here:

You will find the 7 character Ser.-Nr. here →



Monday to Thursday 8:45am - 5pm,
Friday 8:45am - 3pm. Calls cost 10p
per minute from a landline, calls from
mobiles may vary.

3

YEAR WARRANTY



