 **Operating Manual**
Cordless Hand-Held Vacuum Cleaner

Einhell[®]
 **bavaria**




•

CE

Art.-Nr.: 23.471.13

I.-Nr.: 01014

   BAHS 6
Splash

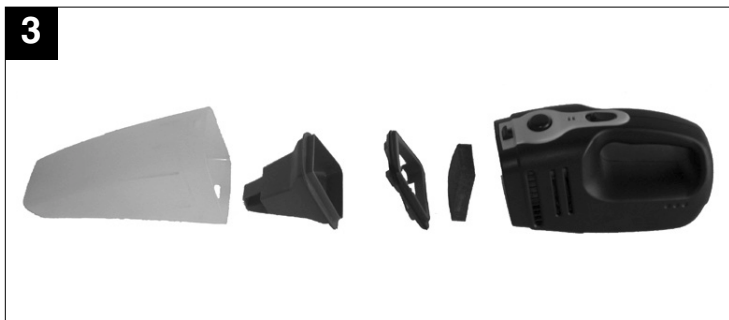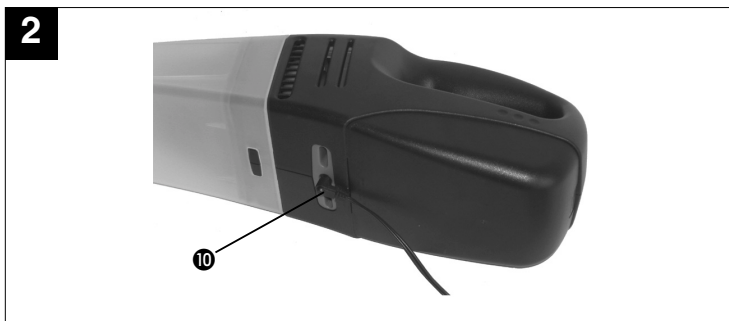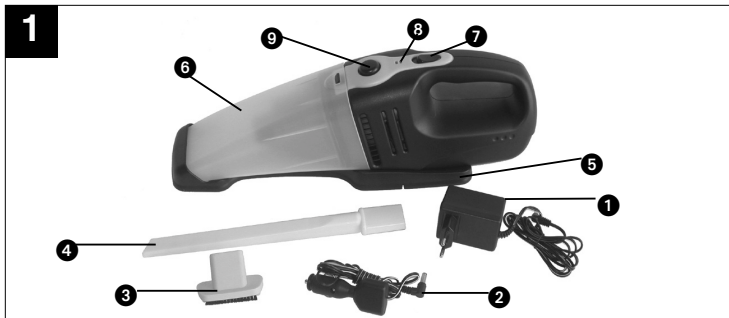

**Important:**

Read and follow the instructions and safety information before using for the first time!

You must follow the instructions set out below at all times before, during and after using the appliance:

- Never vacuum glowing or burning matches, glowing ashes or cigarette butts, burning, caustic or explosive materials, vapors or liquids.
- This cordless hand-held vacuum cleaner is not suitable for vacuuming harmful dust.
- Protect the cordless hand-held vacuum cleaner and its charger from rain.
- This cordless hand-held vacuum cleaner is not suitable for toxic materials.
- Do not vacuum organic solvents or acids.
- Never clean any part of the cordless hand-held vacuum cleaner in a dishwasher or other cleaning machine.
- Do not use benzene or other inflammable liquids to clean the appliance.
- Never clean the appliance with solvents.
- Do not dispose of exhausted batteries in a fire. They may explode!
- Avoid contact with a leaking battery pack. In case of accidental contact, wash the affected area of skin with soap and water. If battery acids gets into your eye, rinse out the eye with clear water for at least 10 minutes and seek a doctor's advice immediately.
- Protect the battery charger and its cable from damage and sharp edges. Have damaged cables repaired without delay by a qualified electrician.
- Check your tools for damage. Repairs may only be completed by a trained electrician.
- Make sure that the contacts of the battery pack do not come into contact with other metallic objects such as nails or screws. There is a risk of short-circuiting!
- Keep the charger and cordless hand-held vacuum cleaner out of the reach of children.
- The mains adapter and mains lead must not come into contact with moisture since otherwise the user may suffer an electric shock.
- The motor section must not be immersed in liquids. Only dip the tip of the cleaner into liquids if you wish to vacuum them. Only vacuum small quantities of liquid. Hold the collection tank at the bottom for this purpose so that the liquid cannot ingress into the motor.
- Do not use the appliance to collect small parts.

- Ensure that the ventilation slits on the appliance are not blocked with dust or the like.
- The cordless vacuum cleaner must not be connected to the mains adapter during use.
- Do not use the appliance if there are visible signs of damage on it, its mains adapter or its mains lead.
- Do not insert any items into the openings in the appliance.
- Never use the appliance without a filter.

Important information:

Before you start to use your cordless hand-held vacuum cleaner it is essential that you read the following instructions:

1. The battery pack supplied with the tool is not charged. The battery pack has to be charged before you use the tool for the first time.
2. Charge the battery pack with the charger supplied. An empty battery pack requires a charging period of approximately 8 hours. Do not use the supplied charger to charge other items of equipment.
3. The battery pack does not reach its maximum capacitance until it has been charged and discharged approximately five times.
4. Battery packs lose their charge even when they are not being used. Regular charging is therefore recommended.
5. Please check the data marked on the rating plate of the battery charger. Be sure to connect the battery charger to a power supply with the voltage marked on the rating plate. Never connect it to a different mains voltage.
6. If it is used heavily, the battery pack will get hot. Allow the battery pack to cool to room temperature before starting the charging process.

Layout (Fig. 1/2)

1. Power supply unit
2. DC adapter
3. Nozzle for vacuuming liquids
4. Crevice tool
5. Wall holder
6. Collection tank
7. On switch
8. Control lamp
9. Release button for the tank
10. Charging jack

GB

Starting up:**Charging the battery pack (Figure 2)**

1. Check that your mains voltage is the same as that marked on the rating plate of the battery charger. Plug the charger into the socket and connect the charging cable to the charging jack (10) on the cordless vacuum cleaner.
2. The red LED indicates that the battery pack is charging. The time it takes to fully recharge an empty battery is approximately 8 hours. The charging time for a partially charged battery is comparatively less. The temperature of the battery pack may rise slightly during the charging operation. This is normal.

Important! When the battery pack is fully charged the charger does not cut out automatically.

If the battery pack fails to charge, please check

- whether there is voltage at the socket-outlet
- whether there is perfect contact to the charging jack on the cordless hand-held vacuum cleaner.

If the battery pack still will not charge, please send

- the power supply unit
 - and the cordless vacuum cleaner
- to our after-sales service department.

To ensure that the battery pack provides long service you should take care to recharge it promptly. This is definitely required if you find that the power of the cordless hand-held vacuum cleaner falls.

Never fully discharge the battery pack. This will cause it to develop a defect.

Operation (Figure 1)

Take the cordless hand-held vacuum cleaner out of its mounting (5) and slide the On switch (7) forwards. The vacuum cleaner will stop automatically when you release the On switch. The green LED indicates that the vacuum cleaner is operating. Before you vacuum any liquids or wet items, empty the dust tank and clean the filter.

The dust tank (6) can be removed and emptied by pressing the release button (9). We recommend that you empty the dust tank after each time you use the vacuum cleaner.

Filter cleaning (Figure 3)

Clean the dirty filter with soap suds and then hang it up to dry. Insert the dry filter and start the vacuum cleaner again.

Ensure that all the individual parts have been assembled again correctly.

 
Technical data:

Motor voltage supply	6 V=
Battery charging voltage	9 V=
Battery charging current	450 mA
Charger mains voltage	230 V ~ 50 Hz

Ordering replacement parts

Please provide the following information on all orders for replacement parts:

- Model/type of device
- Article number of the device
- ID number of device
- Replacement part number of the required spare part

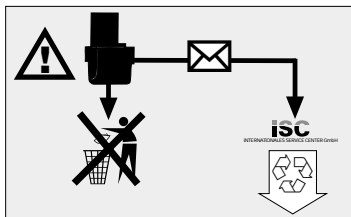

Ⓢ Rechargeable batteries and cordless electric machines and tools contain materials that are potentially harmful to the environment. Never place any cordless electric machines or tools in your household refuse. When cordless electric machines or tools become defective or worn, remove the rechargeable batteries and return them to iSC GmbH Eschenstrasse 6, D-94405 Landau, Germany. If the rechargeable batteries cannot be removed, return the complete cordless machine or tool. You can then be sure that the equipment will be correctly

BAHS 6 Splash

Art.-Nr.: 23.471.13 I.-Nr.: 01014

	Beschreibung	Ersatzteilnr.
	Akku	23.471.10.01
1	Netzteil	23.471.10.02
4	Fugendüse	23.471.10.03
3	Bürstenaufsatz	23.471.10.04
2	DC-Adapter	23.471.10.05
5	Wandhalterung	23.471.10.06

- D** EG Konformitätserklärung
 GB EC Declaration of Conformity
 F Déclaration de Conformité CE
 NL EC Conformiteitsverklaring
 E Declaracion CE de Conformidad
 P Declaração de conformidade CE
 S EC Konformitetsförklaring
 FIN EC Yhdenmukaisuusilmoitus
 N EC Konfirmitetserklaring
 RUS EC Заявление о соответствии
 HR Dichiarazione di conformità CE
 RO Declarație de conformitate CE
 TR AT Uygunluk Deklarasyonu



- GR** EC Δήλωση περι της ανταπόκρισης
 I Dichiarazione di conformità CE
 DK EC Overensstemmelseerklæring
 CZ EU prohlášení o konformitě
 H EU Konformkijelentés
 SL EU Izjava o skladnosti
 PL Oświadczenie o zgodności z normami Europejskiej Wspólnoty
 SK Vyhásenie EU o konformite



Akku-Handsauer BAHS 6 Splash

Der Unterzeichnende erklärt in Namen der Firma die Übereinstimmung des Produktes.

The undersigned declares in the name of the company that the product is in compliance with the following guidelines and standards.

Le soussigné déclare au nom de l'entreprise la conformité du produit avec les directives et normes suivantes.

De ondergetekende verklaart in naam van de firma dat het product overeenstemt met de volgende richtlijnen en normen. El abajo firmante declara, en el nombre de la empresa, la conformidad del producto con las directrices y normas siguientes.

O signatário declara em nome da firma a conformidade do produto com as seguintes directivas e normas.

Undertecknad förklarar i firmans namn att produkten överensstämmer med följande direktiv och standarder.

Allekirjoittanut ilmoittaa liikkeen nimissä, että tuote vastaa seuraavia direktiivejä ja standardeja.

Undertegnede erklærer på vegne av firmaet at produktet samsvarer med følgende direktiver og normer.

Подписавшийся подтверждает от имени фирмы что настоящее изделие соответствует требованиям следующих нормативных документов.

Az aláíró kijelenti, a cég nevében a termék megegyezését a következő irányvonalakkal és normákkal.

Subsemnatul declară în numele firmei că produsul corespunde următoarelor directive și standarde.

Imzalayan kiji, firma adina irtünün aşığida anılan yönetmeliklere ve normlara uygun olduğunu beyan eder.

Εν ονόματι της εταιρείας δηλώνει ο υπογεγραμμένος την συμμόρφωση του προϊόντος προς τους ακόλουθους κανονισμούς και τα ακόλουθα πρότυπα.

Il sottoscritto dichiara a nome della ditta la conformità del prodotto con le direttive e le norme seguenti.

På firmaets vegne erklærer undertegnede, at produktet imødekommer kravene i følgende direktiver og normer.

Niže podpisani imenom firme prolašuje, že výrobek odpovídá následujícím směrnici a normám.

Az aláíró kijelenti, a cég nevében a termék megegyezését a következő irányvonalakkal és normákkal.

Podpisani izjavjam v imenu podjetja, da je proizvod v skladnosti s slededimi smernicami in standardi.

Niżej podpisany oświadcza w imieniu firmy, że produkt jest zgodny z następującymi wytycznymi i normami.

Podpisující závazně prohlašuje v mene firmy, že tento výrobek je v souladu s následovnými směrnici a normami.

<input type="checkbox"/>	98/37/EG	<input type="checkbox"/>	89/686/EWG	ISC GmbH
<input checked="" type="checkbox"/>	73/23/EWG	<input type="checkbox"/>	87/404/EWG	Eschenstraße 6
<input type="checkbox"/>	97/23/EG	<input type="checkbox"/>	R&TTED 1999/5/EG	94405 Landau/lsar
<input checked="" type="checkbox"/>	89/336/EWG	<input type="checkbox"/>	2000/14/EG: L _{WM} dB(A); L _{WA} dB(A)	
<input type="checkbox"/>	90/396/EWG			

EN 61558-2-6; EN 61558-1; EN 55014-1; EN 55014-2; EN 61000-3-2; EN 61000-3-3

Landau/lsar, den 05.05.2004

Brunhild
Brunhild
Leiter Produkt-Management

Jirnsak
Jirnsak
Produkt-Management

Archivierung / For archives:

2347110-46-4155050-E

GARANTIEURKUNDE

Auf das in der Anleitung bezeichnete Gerät geben wir 2 Jahre Garantie, für den Fall, dass unser Produkt mangelhaft sein sollte. Die 2-Jahres-Frist beginnt mit dem Gefahrenübergang oder der Übernahme des Gerätes durch den Kunden. Voraussetzung für die Geltendmachung der Garantie ist eine ordnungsgemäße Wartung entsprechend der Bedienungsanleitung sowie die bestimmungsgemäße Benutzung unseres Gerätes.

Selbstverständlich bleiben Ihnen die gesetzlichen Gewährleistungsrechte innerhalb dieser 2 Jahre erhalten. Die Garantie gilt für den Bereich der Bundesrepublik Deutschland oder der jeweiligen Länder des regionalen Hauptvertriebspartners als Ergänzung der lokal gültigen gesetzlichen Vorschriften. Bitte beachten Sie Ihren Ansprechpartner des regional zuständigen Kundendienstes oder die unten aufgeführte Serviceadresse.

ISC GmbH · International Service Center
Eschenstraße 6 · D-94405 Landau/Isar (Germany)
Info-Tel. 0180-5 120 509 • Telefax 0180-5 835 830
Service- und Infoserver: <http://www.isc-gmbh.info>

® WARRANTY CERTIFICATE

The product described in these instructions comes with a 2 year warranty covering defects. This 2-year warranty period begins with the passing of risk or when the customer receives the product.

For warranty claims to be accepted, the product has to receive the correct maintenance and be put to the proper use as described in the operating instructions.

Your statutory rights of warranty are naturally unaffected during these 2 years.

This warranty applies in Germany, or in the respective country of the manufacturer's main regional sales partner, as a supplement to local regulations. Please note the details for contacting the customer service center responsible for your region or the service address listed below.

Einhell UK Ltd
Unit 5 Morpeth Wharf
Twelve Quays
Birkenhead, Wirral
CH 41 1NG
Tel. 0151 6491500, Fax 0151 6491501

Einhell

The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of ISC GmbH.