



Einhell

POWER XCHANGE

Cordless Lawn Trimmer

GC-CT 18/25 Li-Solo

Item No.: 3411280

Ident No.: 21015

Bar Code: 4006825689969

The cordless trimmer GC-CT 18/25 Li-Solo is a powerful garden tool for lawn care wherever the mower cannot reach. As part of the Einhell Power X-Change battery platform, this trimmer can be combined with any battery and charger from the system. The Flowerguard allows to keep a safe distance from flowers and ornamental plants. With its infinitely adjustable telescopic aluminium guide bar and the additional adjustable handle, the lawn trimmer can be adapted to the height of each user for comfortable handling. 20 plastic blades are included in the delivery. Supplied without battery and charger. These are available separately.

Features & Benefits

- A member of the Power XChange family; 1 x 18 V battery required
- Infinitely telescopic guide bar
- Infinitely adjustable second handle
- Flowerguard protects plants and trees from damage
- Robust blade holder for longer blade life
- Incl. 20 x plastic blades
- Battery and charger not included (available separately)

Technical Data

- | | |
|--------------------------|----------|
| - Revolutions of knife | 8400 rpm |
| - Cutting width of knife | 25 cm |
| - Number of knives | 20 pcs |

Logistic Data

- | | |
|--|-------------------------------|
| - Product weight | 1.7 kg |
| - Gross weight | 2.7 kg |
| - Dimensions single packaging | 935 mm x 200 mm x 122 mm |
| - Pieces per export carton | 4 pcs |
| - Gross weight of export carton | 11.5 kg |
| - Dimensions export carton | 950 mm x 420 mm x 260 mm |
| - Container quantities (20"/40"/40"HC) | 992 pcs 2048 pcs 2560 pcs |



TELESCOPIC



ADDITIONAL HANDLE

 


FLOWERGUARD

 


AVAILABLE ACCESSORY

18 V

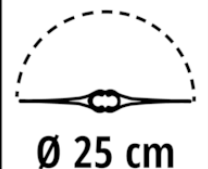

Ø 25 cm

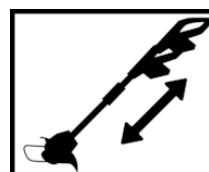

TELESCOPIC



$n_0 = 8400 \text{ min}^{-1}$

Available as special accessories



Cordless Strimmer Spool Head, 25 cm Cutting Width
Lawn Trimmer Accessory
Item No.: 3405175
Bar Code: 4006825680454



Spare Blade Box, 50 pcs., 24 - 25 cm Cutting Width
Lawn Trimmer Accessory
Item No.: 3405739
Bar Code: 4006825681147



PXC 18V 3,0Ah Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



PXC 18V 4,0Ah Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



PXC+ 18V 3,0Ah Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



PXC 18V 2,5Ah Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



PXC+ 18V 5-8Ah MULTI Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



PXC+ 18V 4,0Ah SEALED Battery
Item No.: 4511627
Bar Code: 4006825673227
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



18V 3Ah PXC Plus Twinpack Battery
Item No.: 4511631
Bar Code: 4006825673692
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



18V Battery Charger 3,0A - PXC Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 4,0Ah PXC Starter Kit C1 PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Spare Blade Set, 20 pcs., 24 - 25 cm Cutting Width
Lawn Trimmer Accessory
Item No.: 3405738
Bar Code: 4006825681130



PXC Battery Wall Bracket PXC-Battery Accessory
Item No.: 4514155
Bar Code: 4006825658774
Einhell Accessory



PXC 18V 2,0Ah Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



PXC 18V 5,2Ah Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



PXC+ 18V 4-6Ah MULTI Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



PXC+ 18V 4,0Ah Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



PXC+ 18V 3,0Ah SEALED Battery
Item No.: 4511618
Bar Code: 4006825672794
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB C1 Battery
Item No.: 4511489
Bar Code: 4006825638578



18V 4Ah PXC Plus Twinpack Battery
Item No.: 4511629
Bar Code: 4006825673685
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Boostcharger 8A Charger
Item No.: 4512155
Bar Code: 4006825670554
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



4Ah PLUS PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512159
Bar Code: 4006825680331
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



5,2 Ah PXC Starter-Kit
PXC-Starter-Kit
Item No.: 4512147
Bar Code: 4006825675153
Einhell Accessory



18V 2,5Ah PXC Starter Kit - ZG
PXC-Starter-Kit
Item No.: 4512170
Bar Code: 4006825686029
Einhell Accessory