



Einhell

EXPERT

POWER X-CHANGE

Robot Lawn Mower

FREELEXO 1200 LCD BT

Item No.: 4326368

Ident No.: 21053

Bar Code: 4006825653441

The Einhell FREELEXO 1200 LCD BT robot lawnmower is a member of the high-performance Power X-Change family which provides unlimited flexibility within the system family. It is controlled via app by Bluetooth or LCD display and the settings of the robot lawnmower can be set to individual requirements. The FREELEXO 1200 LCD BT includes everything needed for installation and operation of an Einhell robotic lawnmower of the FREELEXO Series. It is suitable for a lawn area up to 1200 m². The scope of delivery includes a 5,2 Ah battery, 210 m wire, 300 fastening hooks, 3 blades and 4 connecting clamps.

Features & Benefits

- PXC system battery - can also be used for other PXC products
- App using Bluetooth - user-defined robot lawnmower control
- Multi area mowing - for complex gardens
- Intuitive keypad with LCD display
- Programmable operating time for each specific day
- Safety sensor system thanks to impact, tilt and lift sensors
- Anti-theft protection in form of PIN code and warning signal
- Rain sensor
- Cutting height adjustment (20-60mm)
- Suitable for slopes up to 35%
- Carry-handle for comfortable transport
- Automatic return to charging unit and charging
- Lawn areas up to 1200 m²
- Incl. 5,2 Ah PXC Battery
- Wire 210 m
- Fastening hooks 300 pcs.
- Blades 3 pcs.
- Connecting clamps 4 pcs.




Technical Data

- Power	18 V
- Accumulator	18 V 5200 mAh Li-Ion
- Cutting width	18 cm
- Slope	35 %
- Cutting height adjustment	20 mm - 60 mm
- Recommended area	1200 m ²
- Perimeter wire	210 m
- Hooks	300 Pieces
- Spare blades	3
- Connecting clamps	4 Pieces

Logistic Data

- Product weight (kg)	14.3
- Gross weight (kg)	20.8
- Dimensions single packaging	727 x 526 x 321 mm
- Pieces per export carton	1 Pieces
- Gross weight of export carton	21.03 kg
- Dimensions export carton	737 x 530 x 327 mm
- Container quantities (20"/40"/40"HC)	224 462 528

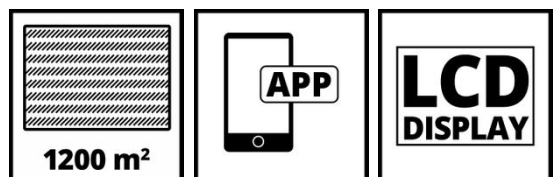

Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery
Item No.: 4511502
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Perimeter wire 50 m
Robot Lawn Mower Accessory
Item No.: 3414021
Bar Code: 4006825648782
Einhell Accessory



Fastening hook 100 psc
Robot Lawn Mower Accessory
Item No.: 3414023
Bar Code: 4006825648805
Einhell Accessory



Power X-Fastcharger 4A Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 3,0 Ah Power-X-Change 1 Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



5,2Ah & 4A Fastcharger PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



Repair Kit
Robot Lawn Mower Accessory
Item No.: 3414026
Bar Code: 4006825657968
Einhell Accessory



Power X-Caravan Charger 3A Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



2,0 Ah Power X-Change Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



Spare blades 12 psc
Robot Lawn Mower Accessory
Item No.: 3414020
Bar Code: 4006825648775
Einhell Accessory



Connecting clamps 4 psc
Robot Lawn Mower Accessory
Item No.: 3414022
Bar Code: 4006825648799
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



2x 5,2Ah & Twincharger Kit PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



robot lawn mower garage
Robot Lawn Mower Accessory
Item No.: 3414024
Bar Code: 4006825654417
Einhell Accessory



Power X-Car Charger 3A Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



Cleaning Kit
Robot Lawn Mower Accessory
Item No.: 3414025
Bar Code: 4006825657951
Einhell Accessory



3,0 Ah Power X-Change Plus Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



5,2 Ah Power X-Change Plus Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V Battery Charger 3,0A - PXC Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



18V 4,0Ah PXC Starter Kit B1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB
B1
Battery
Item No.: 4511489
Bar Code: 4006825638578