



Einhell

CLASSIC



Cordless Jig Saw

TC-JS 18 Li (1x2,5 Ah)

Item No.: 4321228

Ident No.: 21021

Bar Code: 4006825661804

The Einhell TC-JS 18 Li (1x2.5 Ah) cordless jigsaw is a member of the Power X-Change family. The battery can be used in all devices of the system family. The smooth running ensures precise cuts. The pendulum stroke can be switched on for fast cuts. Thanks to the saw blade holder, various types of saw blades can be changed quickly and without tools. The dust blow-off function ensures optimum visibility. A plastic slide insert is integrated into the cordless jigsaw to protect sensitive workpieces. The scope of delivery includes 3x wood saw blade and 2x metal saw blade as well as the 2.5 Ah Power X-Change battery including charger. Delivery takes place in the practical transport and storage case E-Box Basic S35.

Features & Benefits

- Member of the Power X-Change family
- Impressively smooth-running for precise cuts
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- Integrated plastic sliding element for sensitive workpieces
- Incl. 3x wood sawblade und 2x metal sawblade
- Incl. charger and 2.5 Ah Power-X-Change battery
- Supplied in practical transport and storage case E-Box Basic S35

 
 


Technical Data

- Accumulator	18 V 2500 mAh Li-Ion
- Charging time	50min
- Mains supply of battery charger	200-250 V 50-60 Hz
- Number of strokes	2700 min ⁻¹
- Stroke height	20 mm
- Cutting depth in wood	70 mm
- Cutting depth in plastic	10 mm
- Cutting depth in steel	8 mm
- Max. bevel cuts	45 °
- Toolless saw blade change	yes
- Number of accumulators	1 Pieces

Logistic Data

- Product weight	2.12 kg
- Gross weight single packaging	3.76 kg
- Dimensions single packaging	350 x 342 x 104 mm
- Pieces per export carton	4 Pieces
- Gross weight export carton	16.05 kg
- Container quantity (20"/40"/40"HC)	2002 4004 4862

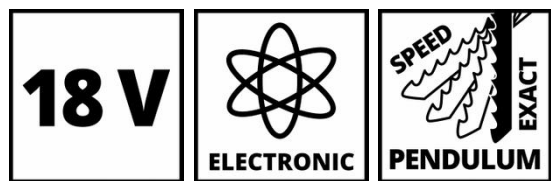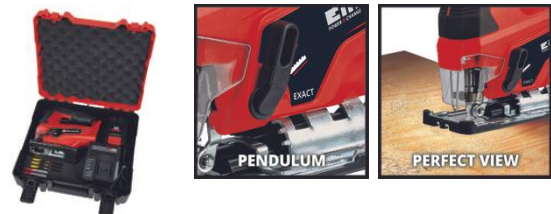

Available as special accessories



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory

Jigsaw-bl. set 4pc W/M Battery
Jig Saw Accessory
Item No.: 49625427
Bar Code: 4009316254271
KWB by Einhell



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah Power-X-Change Plus
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory

Stich-Sägeblatt Box 10-tlg. T
Stichsägen-Zubehör
Item No.: 49617350
Bar Code: 4009316173503
Einhell Accessory

Battery-Running-Times



sawing¹
(m)

One Battery for All

1.5 Ah	7
2.0 Ah	9.5
2.5 Ah	11
3.0 Ah	14
4.0 Ah	20
5.2 Ah	30
6.0 Ah	32
8.0 Ah	40

Test setup:

1) wood - chipboard 19 mm