






# Quick Start Guide

**Your Safety is most important  
please read these safety rules before you use this machine**

## General Safety Rules

-  **Read user manual before using the machine**
-  **Wear safety goggles to guard your eyes from possible injury**
-  **Wear gloves to protect your hands**
-  **Wear safety shoes to protect your feet**
-  **Wear hearing protection**

**Note - This quick start guide is intended for experienced users who have already assembled the tool, please refer to the manual for further details**

# Quick Start Guide

## Items Included



- |                          |                          |                |
|--------------------------|--------------------------|----------------|
| 1 Spanner                | 5 Bottle of 2 stroke oil | 9 Handle       |
| 2 Mixing Bottle          | 6 Lower Shaft            | 10 Carry Strap |
| 3 Plug Socket & Lock Bar | 7 Engine & Upper Shaft   |                |
| 4 Allen Key wrench       | 8 Guard                  |                |

 
 
Do you have questions?  
We can help  
Call Customer Service  
Mon-Thur 08:45 am - 5:00 pm  
Friday 08:45 am - 3:15 pm



**0151 649 1500**  
**Spare Parts also available**

- 1 Unpack the Grass Trimmer**  
a) Open carton carefully and remove all items  
b) Ensure you have all items (see above) before you discard the packaging


- 2 Assembling the Grass Trimmer**  
Connect bottom shaft (6) to Upper shaft & engine (7) making sure the square drive shaft on lower shaft (6) is inserted into square drive on upper shaft (7) correctly and ensure the spring loaded locking clip is aligned with hole provided and in place and the securing knob is tightened. If the drive is not correctly inserted then the spool will not turn.

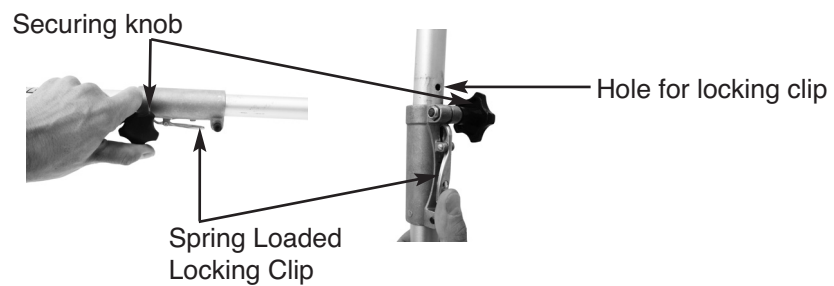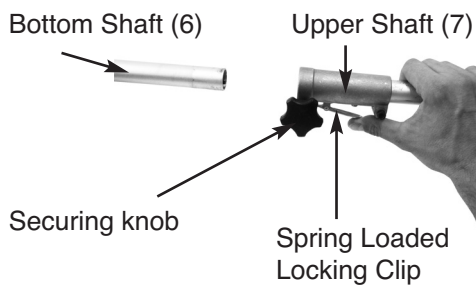

- 3 For your Safety**  
You must fit the guard provided for your safety. Undo the bolt with Allen key provided (see Fig 1). Place the guard over the lower shaft (see Fig 2), replace the bolt and tighten (see Fig 3). Also fit the centre handle. Undo the locking Knob and remove the bolt (see Fig 4) push, the handle over the upper shaft (see Fig 5), replace the bolt and secure with locking knob (see Fig 6). Fit the carry strap to the unit with the clip to the hook on the upper shaft (see Fig 7)



 - 4 Fuel / Lubrication**  
a) Mix the fuel in the mixer bottle provided  
b) Shake the container gently to ensure that it is properly mixed.  
**N.B Failure to use the correct oil/fuel mixture will cause the engine to seize**

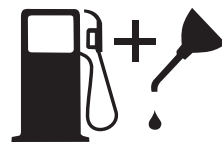

**Use regular grade unleaded petrol and quality 2 stroke oil**

Fuel Mixture is  
40:1 (40 parts Fuel to 1 part 2 stroke oil)

- 5 Starting the Grass Trimmer**  
a) Add the fuel to the grass trimmer  
b) Switch Ignition to "I" (on)  
c) Set Choke lever to On  
d) Secure throttle lever on  
e) Push primer bubble 10 times  
f) Pull starter cord rapidly 4 or 5 times  
NOTE: amount of choke will vary slightly depending on the external temperature  
g) Allow engine to warm up at half throttle for a short time and then push the choke in fully

