



Einhell

CLASSIC



Cordless Lawn Trimmer
GC-CT 18/24 Li (1x2,0Ah)

Item No.: 3411125

Ident No.: 21021

Bar Code: 4006825654332

With the Einhell GC-CT 18/24 Li cordless grass trimmer in the tool shed, you have a practical helper whenever the planting in your grounds, garden and edges needs trimming. The cordless grass trimmer is a member of the Power X-Change series and therefore operates without a cable or the need for a source of electricity. Thanks to the Flower Guard, flowers and ornamental plants are effectively protected from damage. With a cutting width of 24 cm and a speed of up to 8500 rpm, the blade get the job done with plenty of power. The telescopic long handle is infinitely adjustable, so it can be adapted to any user. It is supplied complete with 20 plastic blades, a 2,0Ah battery and a system charger.

Features & Benefits

- Flower guard - Protecting plants or trees
- Telescopic long handle, infinitely adjustable
- Incl. 20 plastic blades
- User-friendly two-hand operation thanks to additional handle
- Supplied with 1x 2,0Ah PXC battery and high-speed charger

Technical Data

- | | |
|--------------------------|--------------------------|
| - Accumulator | 18 V 2000 mAh Li-Ion |
| - Max. running time | 55 min |
| - Charging time | 40min |
| - Revolutions of knife | 8500 rpm |
| - Cutting width of knife | 24 cm |
| - Number of accumulators | 1 Pieces |

Logistic Data

- | | |
|---------------------------------|--------------------|
| - Product weight | 1.77 kg |
| - Gross weight single packaging | 2.79 kg |
| - Dimensions single packaging | 930 x 160 x 130 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 11.66 kg |
| - Dimensions export carton | 955 x 345 x 275 mm |



Available as special accessories



Spare Blade-set PXC Trimmer
Lawn Trimmer Accessory
Item No.: 3405730
Bar Code: 4006825560404
Einhell Grey



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



Spare Blade-box PXC trimmer
Lawn Trimmer Accessory
Item No.: 3405736
Bar Code: 4006825646283
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah Power-X-Change Plus
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times



trimming¹
(null)

One Battery for All

1.5 Ah	40
2.0 Ah	55
2.5 Ah	65
3.0 Ah	80
4.0 Ah	125
5.2 Ah	160
6.0 Ah	180
8.0 Ah	250

Test setup:

1) lawn