Quick Start Guide



Your Safety is most important. Please read these safety rules before you use this machine General Safety Rules



Read the user manual before using the machine



On all jobs performed with the saw you must always wear safety goggles to guard your eyes from flying materials/objects and a sound-proof helmet, ear plugs or the like to protect your hearing. Wear a safety helmet if there is a risk of objects falling on you from above.



Wear gloves to protect your hands



Wear safety shoes to protect your feet

Quick Start Guide

Items Included



Do you have questions?
We can help
Call Customer Service
Mon – Thur 08:45 am – 5:00 pm
Friday 08:45 am – 3:15 pm



0151 649 1500 Spare Parts also available

1 Unpack the Lawnmower

- a) Open the carton carefully and remove all the parts.
- b) Ensure you have all the items (see above) before you discard the packaging.

Assembly Instructions

- a) Fasten the push handle (Fig. 3a / Item 2) with two screws (Fig. 3a / Item 11) and two nuts (Fig. 3a / Item 10) each on either side, making sure that the cable and clip to be installed later on are not in the way. (Tighten with a 13mm spanner).
- b) Unfold the push bar and fix it into place by tightening the handle clamping knobs as shown in Figure 3b.
- c) Insert the grip of the starter cord (Fig. 3c/Item 5) into the hook provided for that purpose as shown in Figure 3c.
- d) Fasten the cord to the push bar with the supplied cable clip (Fig. 3d/Item 9).
- e) Lift the ejector flap (Fig. 4 / Item 4) with one hand and hook in the grass bag (Fig. 4/Item 3) as shown in Figure 4.

Operation

Important. The engine does not come with oil in it. Therefore, be sure to add oil before starting the engine. You will also need to fill the fuel tank with petrol, as this is also not supplied upon delivery.

Note: For detailed information on the engine and oil specification, refer to the enclosed manual from Briggs & Stratton.

In order to avoid any unintentional start-ups of the lawn mower, it comes equipped with an engine brake (Fig. 5a/Item 1) which must be pulled back before the engine can be started. When the engine control lever is released it must return to its initial position, at which point the engine automatically switches off.

The cutting height is not adjusted at a single central point – instead, each of the 4 wheels have to be adjusted separately. Five different cutting heights are available. (As-delivered state: Medium cutting height) Caution: All 4 wheels have to be set to the same cutting height. See the manual for adjusting the wheel / cutting height.

Note: Engine brake (Fig. 5a/Item 1): Use the lever to stop the engine. When you release the lever the engine and the blade stop automatically (Fig. 5a/Item 1). Before you start to mow, check the start/stop lever several times to be sure that it is working properly. Ensure that the tension cable can be smoothly operated (i.e. is not catching or kinking in any way). To mow, hold the lever in the working position (Fig. 5b).

Caution: The blade begins to rotate as soon as the engine is started.

Start the engine using the reversing starter (Fig. 3c /Item 5). To do this, ensure that the ignition cable is connected to the spark plug and then press the red primer button (Fig.8 / Item 7) 5 times.

Stand behind the mower & place one hand on the engine start/stop lever and pull the bars together (Fig. 5a & Fig. 5b). Place the other hand on the starter handle.

Pull the starter handle approx. 10 to 15 cm, (until you feel a resistance) and then start the engine with a sharp vigorous pull. If the engine does not start, pull the handle again. This may take up to 10 pulls. **Important!** Never allow the starter cord to snap back.

Note: In cold weather, it may be necessary to repeat the starting process several times.















