

## MAINTENANCE

### Maintenance

- If the vacuum vibrates abnormally, stop motor immediately. Abnormal vibration usually indicates a mechanical problem continued operation could lead to injury or damage.

Note: Ozito Industries will not be responsible for any damage or injuries caused by the repair of the vacuum by an unauthorised person or by mishandling of the vacuum. This tool is designed for DIY use - use in commercial or industrial environments will void the warranty.

## TROUBLESHOOTING

Problem	Cause	Remedy
Vacuum is not starting	Battery is low in charge	Charge battery
	Battery not inserted properly	Insert battery pack correctly
	Possible clogging	Empty the debris container and clean the filter.
Vacuum is not operating at full capacity	Possible clogging	Empty the debris container and clean the filter.
	Battery has no power	Charge battery
Motor stops while vacuuming		

## SERVICE INFORMATION

Please note that the following parts of this product are subject to normal or natural wear and that the following parts are therefore also required for use as consumables.

Category	Example
Wear parts*	Battery, Combination nozzle, crevice nozzle, upholstery nozzle, electric tool adapter, etc.
Consumables*	Pleated filter, foam filter, dirt bag, additional filter, etc.
Missing parts	

\* Not necessarily included in the scope of delivery!

## SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse or Homebase store.

For further information, or any parts visit [www.ozito-diy.co.uk](http://www.ozito-diy.co.uk) or contact Ozito Customer Service:

Great Britain: 0151 294 4488

Ireland: 1850 882711

E-mail: [info@ozito-diy.co.uk](mailto:info@ozito-diy.co.uk)

## DESCRIPTION OF SYMBOLS



**Danger!** Read the operating instructions to reduce the risk of injury.



Double insulated



For EU countries only

Never place any electric power tools in your household refuse.

To comply with European Directive 2012/19/EC concerning old electric and electronic equipment and its implementation in national laws, old electric power tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot.

Recycling alternative to the return request:

As an alternative to returning the equipment to the manufacturer, the owner of the electrical equipment must make sure that the equipment is properly disposed of if he no longer wants to keep the equipment. The old equipment can be returned to a suitable collection point that will dispose of the equipment in accordance with the national recycling and waste disposal regulations. This does not apply to any accessories or aids without electrical components supplied with the old equipment.

The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of the iSC GmbH.

Subject to technical changes

## DECLARATION OF CONFORMITY

**ISC GmbH · Eschenstraße 6 · D-94405 Landau/Isar** **EU**

explains the following conformity according to EU directives and norms for the following product

**Cordless Wet & Dry Vacuum PXVWDS-1818U (Ozito)**

<input type="checkbox"/> 2014/29/EU	<input type="checkbox"/> 2006/42/EC
<input type="checkbox"/> 2005/32/EC_2009/125/EC	<input type="checkbox"/> Annex IV
<input checked="" type="checkbox"/> 2014/35/EU	Notified Body No.:
<input type="checkbox"/> 2006/28/EC	Reg. No.:
<input checked="" type="checkbox"/> 2014/30/EU	<input type="checkbox"/> 2000/14/EC_2005/88/EC
<input type="checkbox"/> 2014/32/EU	<input type="checkbox"/> Annex V
<input type="checkbox"/> 2014/53/EC	<input type="checkbox"/> Annex VI
<input type="checkbox"/> 2014/68/EU	Noise: measured $L_{WA} =$ dB (A); guaranteed $L_{WA} =$ dB (A)
<input type="checkbox"/> 90/396/EC_2009/142/EC	P = KW, L/O = cm
<input type="checkbox"/> 89/686/EC_96/58/EC	Notified Body:
<input checked="" type="checkbox"/> 2011/65/EU	<input type="checkbox"/> 2012/46/EU
	Emission No.:

**Standard references: EN 60335-1; EN 60335-2-2; EN 62233; EN 55014-1; EN 55014-2**

Landau/Isar, den 01.02.2018

*Wolfgang Partner/General Manager* *Dong Product Management*

First CE: 17  
Art.-No.: 30.002.82 I-No.: 11017  
Subject to change without notice

Archive-File/Record: NAPR018267  
Documents registrar: Alex Kurz  
Wiesenweg 22, D-94405 Landau/Isar

## ELECTRICAL SAFETY



**WARNING!** When using mains-powered tools, basic safety precautions, including the following, should always be followed to reduce risk of fire, electric shock, personal injury and material damage.

Read the whole manual carefully and make sure you know how to switch the tool off in an emergency, before operating the tool. Save these instructions and other documents supplied with this tool for future reference.

Before you connect the charger to the mains supply make sure that the data on the rating plate are identical to the mains data.



This tools charger is double insulated, therefore no earth wire is required.

If the supply cord is damaged, it must be replaced by an electrician or a power tool repairer in order to avoid a hazard.

**Note:** Double insulation does not take the place of normal safety precautions when operating this tool. The insulation system is for added protection against injury resulting from a possible electrical insulation failure within the tool.

The power supply for this products charger should be protected by a residual current device (rated at 30mA or less). A residual current device reduces the risk of electric shock.

## GENERAL POWER TOOL SAFETY WARNINGS



**DANGER!** Read all safety regulations and instructions. Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury. **Keep all safety regulations and instructions in a safe place for future use.** The term "electric tool" used in the safety instructions refers to electric tools operated from the mains power supply (with a power cable) and to battery operated electric tools (without a power cable).

- Workplace safety**
  - Keep your work area clean and well illuminated. Untidy or unlit work areas can result in accidents.
  - Do not operate the electric tool in an environment where there is a risk of explosions and where there are inflammable liquids, gases or dust. Electric tools produce sparks which could set the dust or vapours alight.
  - Keep the electric tool out of the reach of children and other persons. If there is a distraction, you may lose control of the appliance.

- Electrical safety**
  - The connector plug from this electric tool must fit into the socket. The plug should never be altered in any way. Never use adapter plugs together with earthed electric tools. Unaltered plugs and correct sockets reduce the risk of an electric shock.
  - Avoid bodily contact with earthed surfaces such as pipes, heating, ovens and fridges. The risk of electric shock is increased if your body is earthed.
  - Keep the tool out of the rain and away from moisture. The ingress of water into an electric tool increases the risk of an electric shock.
  - Do not use the cable to carry the electric tool, to hang it up or to pull it out of the socket. Keep the cable away from heat, oil, sharp edges and moving parts of the appliance. Damaged or entangled cables increase the risk of an electric shock.
  - If you are working outdoors with an electric tool, only use extension cables which are designed specifically for this purpose. Using specially designed outdoor extension cables, the risk of electric shock is reduced.
  - If operation of the electric tool in a damp environment can not be avoided, use a earth-leakage circuit-breaker. The earthleakage circuit-breaker reduces the risk of an electric shock.

- Safety of persons**
  - Be careful, watch what you are doing and use an electric tool sensibly. Do not use the tool if you are tired or under the influence of drugs, alcohol or medication. A moment of inattention when using the electric tool can result in serious injuries.

- Wear personal protection equipment and always wear safety goggles. Wearing personal protection (such as dust masks, non-slip safety shoes, safety helmet or ear protection, depending upon the type and use of the electric tool) reduces the risk of injury.
- Make sure that the appliance cannot start up accidentally. Ensure that the electric tool is switched off before you connect it to the power supply and/or insert the battery, or pick up or carry the tool. If your finger is on the switch whilst carrying the electric tool or if you connect the appliance to the mains when it is switched on, this can lead to accidents.
- Remove keys and wrenches before switching on the electric tool. A tool or key which comes into contact with rotating parts of the appliance can lead to injuries.
- Avoid abnormal working postures. Make sure you stand squarely and keep your balance at all times. In this way you can control the electric tool better in unexpected circumstances.
- Wear suitable work clothes. Do not wear loose clothing or jewellery. Keep hair, clothes and gloves away from moving parts. Loose clothing, jewellery or long hair can get trapped in moving parts.
- If vacuuming devices and draining devices can be fitted, make sure that these are correctly attached and correctly used. The use of a dust extraction system can reduce the danger posed by dust.

## WET & DRY VACUUM SAFETY WARNINGS



**DANGER!** Read all safety regulations and instructions. Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury.

**Keep all safety regulations and instructions in a safe place for future use.**

- Important: read the operating instructions before assembling and using the appliance for the first time.
- Never clean the appliance with solvents.
- Never leave the appliance unattended when operational.
- Keep away from children.
- Never vacuum the following: burning matches, smoldering ash and cigarette butts, combustible, caustic, inflammable or explosive substances, vapor or liquids.
- This appliance is not suitable for vacuuming dust which can be harmful to health.
- Store the appliance in a dry indoor location.
- Never use the appliance if it is damaged.
- Only allow the appliance to be serviced by an authorized after sales service outlet.
- Only use the appliance to carry out work for which has been designed.
- Take extra care when cleaning steps.
- Use only genuine accessories and spare parts.

This equipment is not designed to be used by people (including children) with limited physical, sensory or mental capacities or those with no experience and/or knowledge unless they are supervised by a person who is responsible for their safety or they have received instructions from such a person in how to use the equipment safely. Children must always be supervised in order to ensure that they do not play with the equipment.

- Usage and treatment of the electric tool**
  - Do not overload the appliance. Use the correct tool for your work. You will be able to work better and more safely within the given performance boundaries.
  - Do not use an electric tool with a defective switch. An electric tool that cannot be switched on or off is dangerous and must be repaired.
  - Pull the plug out of the socket and/or remove the battery before making any adjustments to the appliance, changing accessories or put the appliance down. This safety measure prevents starting the electric tool unintentionally.
  - Keep unused electric tools out of the reach of children. Do not allow people who are not familiar with the appliance or who have not read these instructions to use the appliance. Electric tools are dangerous if they are used by inexperienced people.
- Clean your electric tool carefully. Check whether moving parts are functioning properly and not jamming, whether parts are broken or damaged enough that the functioning of this electric tool is affected. Have damaged parts repaired before using the appliance.** Many accidents are caused by badly maintained electric tools.
- Keep your cutting tools sharp and clean.** Carefully maintained cutting tools with sharp cutting edges will jam less and are easier to control.
- Make sure to use electric tools, accessories, attachments, etc. in accordance with these instructions. Take the conditions in your work area and the job in hand into account.** Using electric tools for any purpose other than the one for which they are intended can lead to dangerous situations.

- Using and handling the cordless tool**
  - Only charge the batteries in chargers that are recommended by the manufacturer. A charger that is designed for a certain type of battery may pose a fire risk if it is used with other types of battery.
  - Use only the correct batteries in the electric tools. The use of other batteries may result in injuries and a fire risk.
  - Keep unused batteries away from paper clips, coins, keys, nails, screws and other metallic objects that could cause a short circuit between the contacts. A short circuit between the battery contacts may cause burns or a fire.
  - In case of incorrect use, fluid may escape from the battery. Avoid contact with it. If you touch it by accident, rinse the affected area with water. If you get the fluid in your eyes, also seek medical advice. Leaking battery fluid can cause skin irritation or burns.

- Service**
  - Have your electric tool repaired only by trained personnel using only genuine spare parts. This will ensure that your electric tool remains safe to use.

**Additional safety instructions** We pay a great deal of attention to the design of every battery pack to ensure that we supply you with batteries which feature maximum power density, durability and safety. The battery cells have a wide range of safety devices. Each individual cell is initially formatted and its electrical characteristic curves are recorded. These data are then used exclusively to be able to assemble the best possible battery packs. **Despite all the safety precautions, caution must always be exercised when handling batteries. The following points must be obeyed at all times to ensure safe use. Safe use can only be guaranteed if undamaged cells are used. Incorrect handling can cause cell damage.**

**Important:** Analyses confirm that incorrect use and poor care are the main causes of the damage caused by high performance batteries.



18V LITHIUM ION

## WET & DRY VACUUM

 
### ORIGINAL INSTRUCTIONS

### SPECIFICATIONS


Voltage: 18V  
Suction Power: 80mbar (8kPa)  
Tank Capacity: 18L  
Flow Rate: 25L/sec  
Hose Diameter: Ø36mm  
Hose Length: 1.5m  
IP Rating: IPX4  
Weight: 4.3kg

[ozito-diy.co.uk](http://ozito-diy.co.uk)

5 YEAR REPLACEMENT WARRANTY

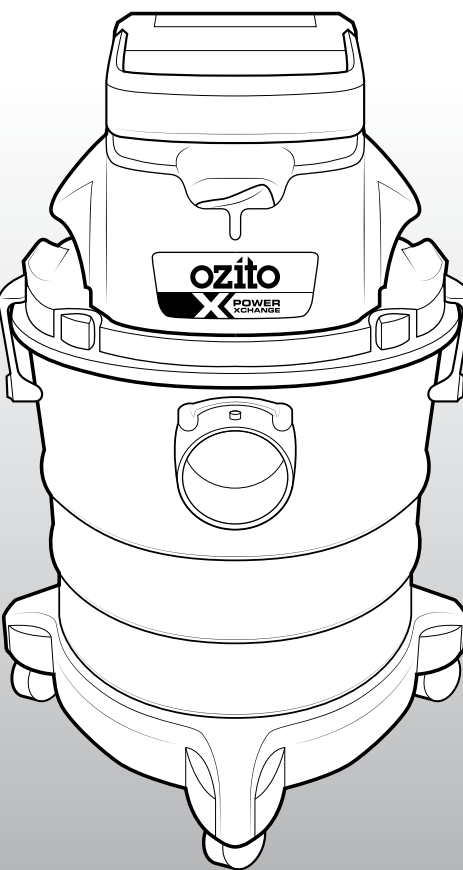


### STANDARD EQUIPMENT

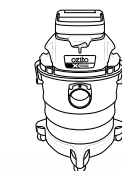 

Cordless Wet & Dry Vacuum



 Air Hose, Extension Tubes & Adaptor



Crevice, Brush & Floor Tool



Foam Filter, Dust Bag, Pleated Filter & Cap



Castor Wheels

### PXVWDS-1818U

Art.-No.: 30.002.82

I-No.: 11017

## WARRANTY

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the customer service number shown. Please note the following terms under which guarantee claims can be made:

1. These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.

2. The warranty services only covers defects due to material or manufacturing faults on a product which you have bought from the manufacturer mentioned below are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer. Please note that our devices are not designed for use in commercial, trade or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.

3. The following are not covered by our guarantee:  
- Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.  
- Damage to the device caused by abuse or incorrect use (for example overloading the device or the use of unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).  
- Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.

4. Your Product is guaranteed for a period of 60 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. Lithium Ion batteries and chargers are covered by a 12 month warranty. Warranty excludes consumable parts. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO THE PLACE OF PURCHASE WITH YOUR REGISTER RECEIPT.

 
Please refer to the restrictions of this warranty concerning wearing parts, consumables and missing parts as set out in the service information in these operating instructions.

CUSTOMER SERVICE HELPLINE  
GB: 0151 294 4488  
IRL: 1850 882711  
Ozito-diy.co.uk

# KNOW YOUR PRODUCT


## CORDLESS WET & DRY VACUUM

- |                        |                   |
|------------------------|-------------------|
| 1 Carry Handle         | 5 Tank            |
| 2 On/Off Switch        | 6 Castors         |
| 3 Motor Securing Clips | 7 Battery Seating |
| 4 Vacuum Inlet         | 8 Blower Outlet   |

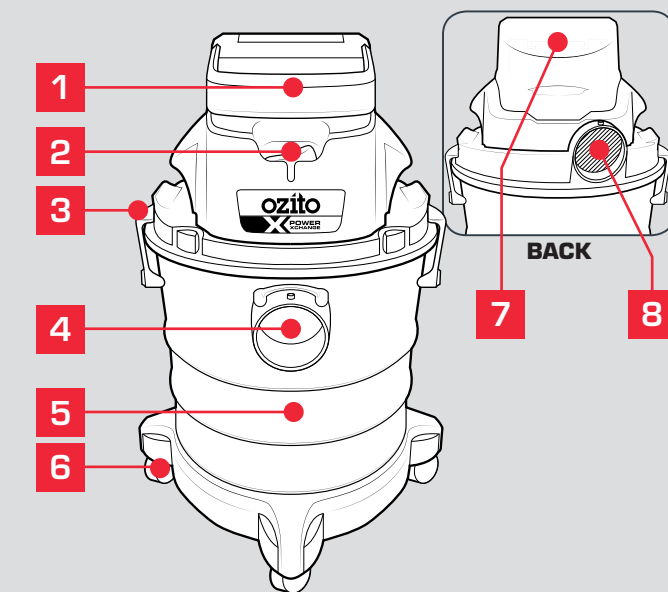

## ACCESSORIES

 - |                                |   |
|--------------------------------|---|
| 9 Suction Hose                 | 14 Pleated Filter & Cap (dry vacuuming) |
| 10 Extension Tubes             | 15 Crevice Tool                         |
| 11 Adaptor                     | 16 Floor Tool                           |
| 12 Foam Filter (wet vacuuming) | 17 Brush Tool                           |
| 13 Dust Bag                    |   |

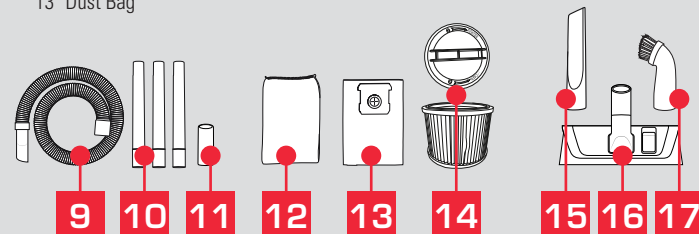

This tool is compatible with all battery and chargers from the Ozito Power X Change Range.

For optimal performance, we recommend the use of a 3.0Ah battery or higher to operate this Power X Change Wet & Dry Vacuum.

**ONLINE MANUAL**  
Scan this QR Code with your mobile device to take you to the online manual.



# SETUP & PREPARATION

## 1. BEFORE USE

### Items Supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service center or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

### Danger!

**The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!**

### Proper Use

The cordless wet and dry vacuum cleaner is designed for wet and dry vacuuming using the appropriate filter. The equipment is not suitable for the vacuuming of combustible, explosive or harmful substances.

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

### Caution! Residual risks

 
**Even if you use this electric power tool in accordance with instructions, certain residual risks cannot be ruled out. The following hazards may arise in connection with the equipment's construction and layout:**

1. Lung damage if no suitable protective dust mask is used.
2. Damage to hearing if no suitable ear protection is used.
3. Health damage caused by hand-arm vibrations if the equipment is used over a prolonged period or is not properly guided and maintained.


## 2. FITTING THE BATTERY

### Inserting & Removing the Battery

- 1 Align the ribs of the battery with the recess inside the battery compartment and push in until it clicks into place.

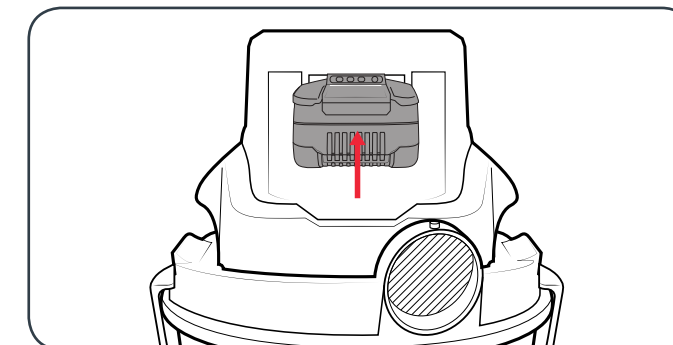

 - 2 To remove, open the battery compartment lid. Press and hold the battery release tab and pull the battery away from the vacuum.

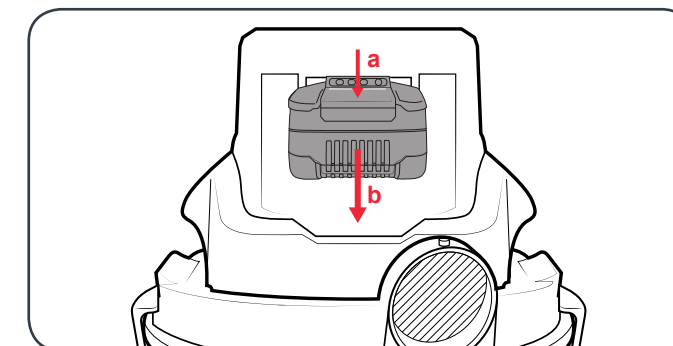

### Battery protection system

The tool is equipped with the battery protection system, which helps to ensure a long service life.

The output power automatically cuts off during operation when the tool and/or battery are placed under the following situations:

 
- **When the tool is overloaded:**  
If this occurs, release the trigger switch and remove causes of overload, then pull the switch trigger again to restart.
  - **When the remaining battery capacity becomes low:**  
Recharge the battery pack.
- Note:** The battery protection system does not in any way damage the tool.  
**Note:** The indicated capacity may be lower than the actual level during use or immediately after using the tool.

## 3. ASSEMBLY

**WARNING!** ENSURE THE TOOL IS SWITCHED OFF AND DISCONNECTED FROM THE POWER SUPPLY BEFORE PERFORMING ANY OF THE FOLLOWING TASKS.


### Fitting the Castors

- 1 Turn the tank upside down and push all 4 castors into the base of the tank.

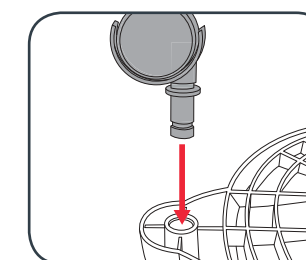

### Fitting the Motor

 
- 1 When fitting the motor to the tank, position it so that the tank securing clips on the motor align with the fastening points on the tank.

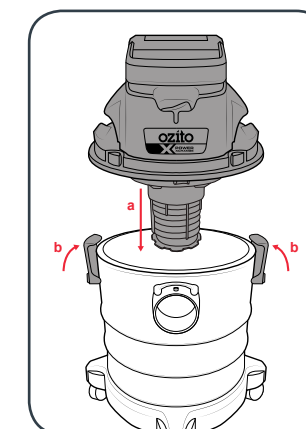


- 2 Fasten the tank securing clips to the tank, making sure that they lock into place correctly.

### Fitting the Dust Bag

 - 1 For vacuuming fine, dry dirt it is recommended that you fit the dust bag. This will ensure that the pleated filter does not clog up so quickly and help maintain the vacuuming power. A dust bag is suitable for dry vacuuming only. Using the dust bag makes it easier to dispose of the dust that has been collected.

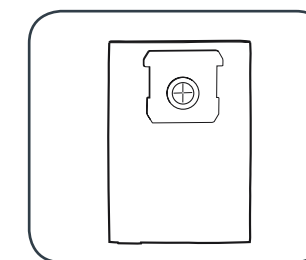

 - 2 To attach, slip the dust bag over the vacuum inlet.

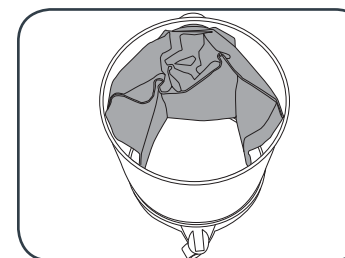

# OPERATION

 
## 4. FITTING THE FILTER

**IMPORTANT!** NEVER USE THE VACUUM CLEANER WITHOUT A FILTER! ALWAYS ENSURE THAT THE FILTERS ARE PERFECTLY SECURE!

### Fitting the Foam Filter - Vacuuming Liquid


- 1 For wet-vacuuming, slip the supplied foam filter over the filter basket.

**Note:** Do not use the pleated filter and/or dust bag when vacuuming liquid.

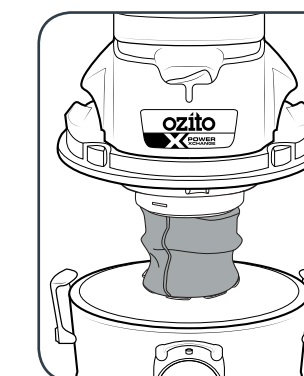


### Fitting the Pleated Filter - Vacuuming Dry Matter

 - 1 For dry vacuum cleaning always use the pleated filter. Mount the filter so that no air is sucked through the filter cage without being filtered.

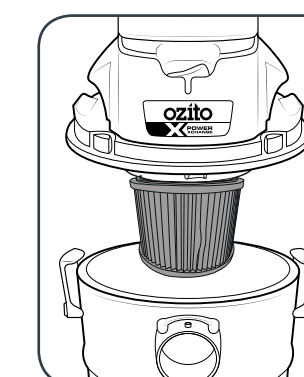

 - 2 Place the cap on the base of the pleated filter, turn clockwise to lock in position.

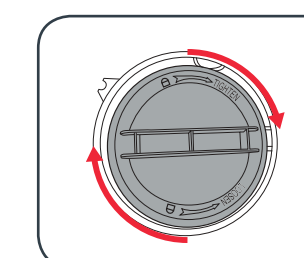


**Note:** Do not use the foam filter when vacuuming dry matter.

## 5. FITTING HOSES & NOZZLES

 Connect the suction hose to the corresponding connector on the wet and dry vacuum, depending on the application required:


### Vacuuming

- 1 Connect the suction hose to the vacuum inlet at the front of the tank.

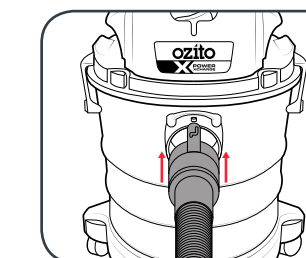


### Blowing

 - 1 Connect the suction hose to the blow outlet at the back of the unit.

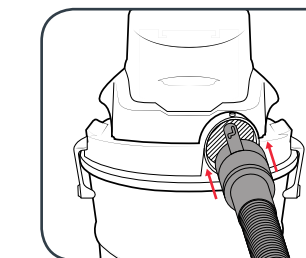


### Extension Tube and Adaptor

 - 1 The suction hose can be extended by attaching one or more sections of the 3 part extension tubes.

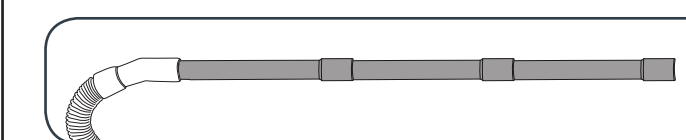


 - 2 The adaptor must be inserted between the extension tube and whichever of the nozzles is required.

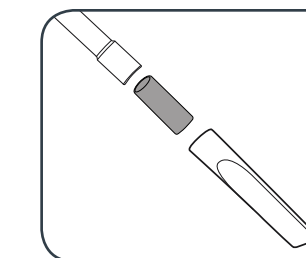

### Suction Tools

 **Floor Tool:**  
The floor tool is for vacuuming solids and liquids over medium to large areas.

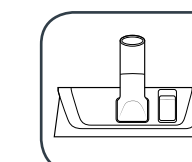

**Crevice Tool:**  
The crevice tool is designed for cleaning crevices and edges.



**Brush Tool:**  
The brush tool with soft bristles can be used to vacuum windowsills, bookcases, framed art, lampshades, and blinds.



## 6. OPERATION

**IMPORTANT!** SWITCH OFF THE EQUIPMENT IF LIQUID OR FOAM IS EMITTED WITH THE EXHAUST AIR WHEN WET VACUUM CLEANING.

### On/Off Switch

To start vacuum, press the on/off switch to the on position ('1').

To stop vacuum, press the on/off switch to the off position ('0').

 


**WARNING!** DO NOT PUT PART OF YOUR BODY SUCH AS HANDS AND FINGERS NEAR THE INLET OPENING.

### Dry Vacuuming

Use the dust bag, pleated filter and cap for dry vacuuming (see 4. **Fitting the Filter**).


Check that the filter is securely fitted at all times.

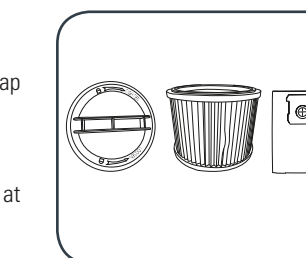

### Wet Vacuuming

For wet-vacuuming, use the foam filter (see 4. **Fitting the Filter**).

 Check that the filter is securely fitted at all times.

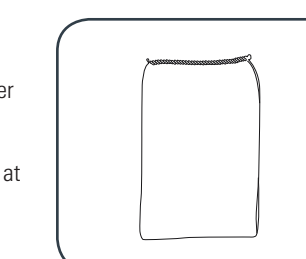


**IMPORTANT!** WHEN WET VACUUMING, THE SAFETY FLOAT TURNS OFF THE VACUUM CLEANING AUTOMATICALLY WHEN THE MAXIMUM LEVEL IS REACHED.

**IMPORTANT!** THE WET & DRY VACUUM CLEANING IS NOT SUITABLE FOR THE VACUUMING OF COMBUSTIBLE LIQUIDS.

### Blowing

 Connect the suction hose to the blow outlet on the wet & dry vacuum cleaner.

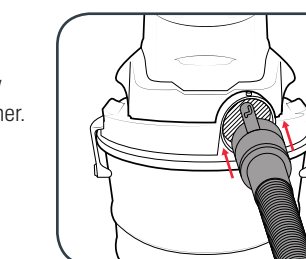

## 7. CLEANING & STORING

**IMPORTANT!** BEFORE CLEANING YOUR VACUUM OR CARRYING OUT ANY MAINTENANCE, MAKE SURE THAT THE TOOL IS SWITCHED OFF AND POWER SUPPLY DISCONNECTED TO PREVENT ACCIDENTAL START-UP.

### Cleaning

Keep air intake clean and air vents free of debris to avoid overheating the motor. We recommend that you clean the equipment immediately after you use it.

### Cleaning the motor housing

Clean the appliance regularly with a damp cloth. Do not use cleaning agents or solvents; these may be aggressive to the plastic parts in the appliance.

### Cleaning the tank

The tank can be cleaned with a damp cloth and some soft soap.

### Cleaning the foam filter

Clean the foam filter with a little soft soap under running water and allow it to air-dry.

### Storing

Ensure the Wet & Dry Vacuum has been fully emptied of any dry matter or liquid before it is stored.

Keep all the accessories with the unit to avoid losing them.

Keep in a dry place out of reach of children.

**5 YEAR**  
REPLACEMENT WARRANTY