



Einhell

EXPERT

POWER X-CHANGE

Robot Lawn Mower
FREELEXO 300 LCD BT+ Solo
Item No.: 3413984

Ident No.: 21022

Bar Code: 4006825669008

The FREELEXO 300 LCD BT+ robotic lawn mower is part of the Power X-Change family. The FREELEXO has app control via Bluetooth and an intuitive keypad with LCD display. The working time can be programmed to the day and a separate programme can be started for the secondary areas. In addition, the multi-zone/spot mower is equipped with a cutting height adjustment of 20–60 mm, a PIN code anti-theft device and with rain, shock, tilt and lifting sensors, through which it can handle gradients of up to 35%. The return to the charging station with ECO mode take place automatically if necessary. Delivery incl. installation equipment for 300 m² lawn area, but no battery. This is available separately.

Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Brushless motor - more power and longer runtime
- App control via Bluetooth - individual robotic lawn mower control
- Intuitive keypad with LCD display
- Working time programmable on a daily basis
- Safety sensors thanks to impact, tilt and lift sensors
- PIN code for theft protection
- Rain sensor
- ECO mode of the charging station
- Multi-zone mowing - for complex gardens
- Spot Mowing
- Mowing programme for secondary areas
- Cutting height adjustment (20-60 mm)
- Suitable for inclines up to 35%
- Automatic return to charging station and charging process
- Incl. installation equipment for 300 m² lawn area
- Incl. 100 m boundary wire and 140 fixing hooks
- Incl. 3 spare blades and 4 connecting clamps
- Supplied without battery (sold separately)

 
 


Technical Data

- Power	18 V
- Cutting width	18 cm
- Slope	35 %
- Cutting height adjustment	20 mm - 60 mm
- Recommended area	300 m ²
- Perimeter wire	100 m
- Hooks	140 Pieces
- Spare blades	3
- Connecting clamps	4 Pieces

Logistic Data

- Product weight (kg)	12.3
- Gross weight (kg)	15.3
- Dimensions single packaging	692 x 437 x 313 mm
- Pieces per export carton	1 Pieces
- Gross weight of export carton	17.24 kg
- Dimensions export carton	700 x 440 x 315 mm
- Container quantities (20"/40"/40"HC)	294 602 688

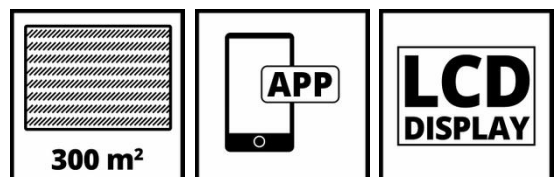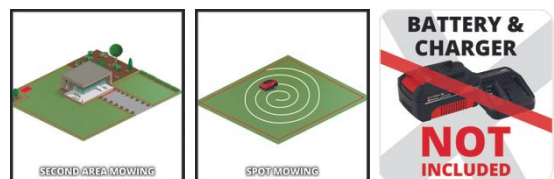

Available as special accessories



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Spare blades 12 psc
Robot Lawn Mower Accessory
Item No.: 3414020
Bar Code: 4006825648775
Einhell Accessory



Perimeter wire 50 m
Robot Lawn Mower Accessory
Item No.: 3414021
Bar Code: 4006825648782
Einhell Accessory



Connecting clamps 4 psc
Robot Lawn Mower Accessory
Item No.: 3414022
Bar Code: 4006825648799
Einhell Accessory



Fastening hook 100 psc
Robot Lawn Mower Accessory
Item No.: 3414023
Bar Code: 4006825648805
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



robot lawn mower garage
Robot Lawn Mower Accessory
Item No.: 3414024
Bar Code: 4006825654417
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



Cleaning Kit
Robot Lawn Mower Accessory
Item No.: 3414025
Bar Code: 4006825657951
Einhell Accessory



Repair Kit
Robot Lawn Mower Accessory
Item No.: 3414026
Bar Code: 4006825657968
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah Power-X-Change Plus
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory

Power X-Caravan Charger 3A
Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory